

Brief Description of Functions

Enquiry call



Broker's call




Three-party conference call




Call transfer with prior notice



Call rerouting

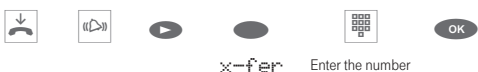

Automatic redialing

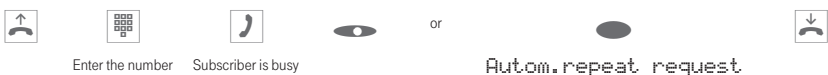

Deactivating automatic redialing



Selecting outgoing MSN




Selection from caller list




Caller list Selection of the request entry

Selection from the telephone directory

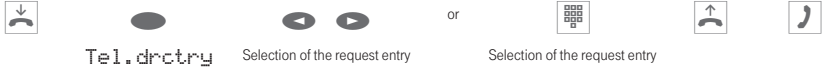

Tel. directory Selection of the request entry Selection of the request entry

Selection from speed dialing

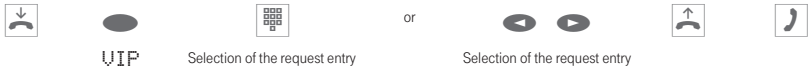


VIP Selection of the request entry Selection of the request entry

Activate call forwarding



Settings Call rerout. delayed/busy/ Fixed MSN-1... MSN-10 Enter the number

Deactivate call forwarding

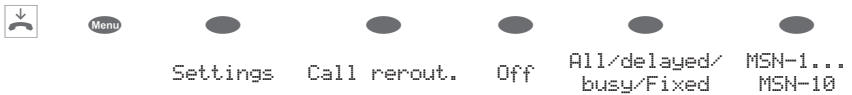

Settings Call rerout. Off All/delayed/ busy/Fixed MSN-1... MSN-10

Station guarding




Quiet No/ok/Complete

Information on active functions (Station guarding, call forwarding, call control, dial filter)



info View activated functions

Activating / Deactivating call waiting

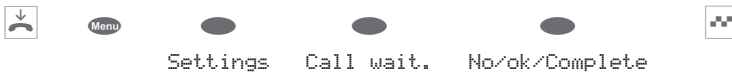

Settings Call wait. No/ok/Complete