

**Performance feature****Operation**

Configuring call forwarding »immediate«

^ \* 2 1 \* #



Configuring call forwarding »on no answer«

^ \* 6 1 \* #



Configuring call forwarding »on busy«

^ \* 6 7 \* #



Deactivating call forwarding »immediate«

^ # 2 1 #



Deactivating call forwarding »on no answer«

^ # 6 1 #



Deactivating call forwarding »on busy«

^ # 6 7 #



Configuring automatic call-back on busy

^ # \* 3 7 #



Configuring automatic call-back »on no answer«

^ # \* 3 7 #



Room surveillance

^ R # PIN 2



Do you need other brief operators manuals? The CD-ROM delivered with the system contains an operators manual in PDF format Eumex\_402\_UK\_KB\_ddmmjj.PDF. Call up this file and print out the number of copies you need.

**Condensed operating instructions for extensions****Automatic access to outside line****Performance feature****Operation**

Internal calls

^ R #



External calls

^ #



Setting own number for next call

^ R # 9 0 ... 9 #



Temporary disabling of own number transmission

^ \* 3 1 #



Forward call with prior notice

^ R #



Calling another party during an on-going call

^ R #



Accepting calls

^ R \* 0



Accepting a call from an answering machine

^ R # 0



Barring call waiting during an ongoing call

^ R 0

Accepting call waiting during an on-going call

^ R 2

Talking with two parties simultaneously

^ R # R 3

Switching between two parties

^ R # R 2 ...

Accepting a further call during an on-going call

^ R 2

Call transfer (ECT)

^ R 2 R 4



Speed dialing

^ R \* #



Vanity-dialing

^ R # \*



Performance feature	Operation
Configuring call forwarding »immediate«	* 2 1 * #
Configuring call forwarding »on no answer«	* 6 1 * #
Configuring call forwarding »on busy«	* 6 7 * #
Deactivating call forwarding »immediate«	# 2 1 #
Deactivating call forwarding »on no answer«	# 6 1 #
Deactivating call forwarding »on busy«	# 6 7 #
Configuring automatic call-back on busy	* 3 7 #
Configuring automatic call-back »on no answer«	* 3 7 #
Room surveillance	R # PIN 2

Do you need other brief operators manuals? The CD-ROM delivered with the system contains an operators manual in PDF format Eumex\_402\_UK\_KB\_ddmmjj.PDF. Call up this file and print out the number of copies you need.

## Making calls with prefixes 0

Performance feature	Operation
Internal calls	#
External calls	0 #
Setting own number for next call	# 9 0 ... 9
Temporary disabling of own number transmission	* 3 1 #
Forward call with prior notice	R #
Calling another party during an ongoing call	R #
Accepting calls	* 0
Accepting a call from an answering machine	# 0
Barring call waiting during an ongoing call	R 0
Accepting call waiting during an ongoing call	R 2
Talking with two parties simultaneously	R 0 # R 3
Switching between two parties	R # R 2 ...
Accepting a further call during an ongoing call	R 2
Call transfer (ECT)	R 2 R 4
Speed dialing	* #
Vanity-dialing	R # * #