


T-Octopus F 200/400/600
T-Octophon F 50
Quick Reference Guide




Connectivity Options

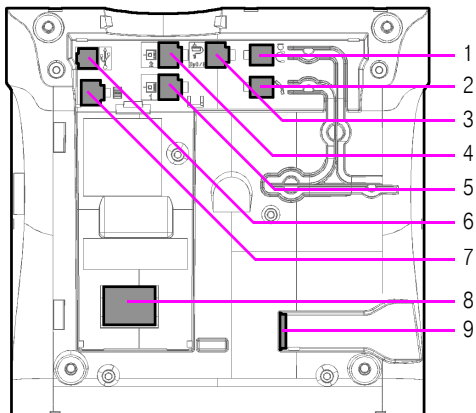

	Connection type: U _{P0/E} (with plug-in power supply unit)	Connection type: HFA (with plug-in power supply unit)	Connection type: HFA (Power over LAN)
1	Headset		
2	Handset		
3	Communication System (passing through at the plug-in power supply unit)	Plug-in power supply unit	-
4	LAN connection to PC		
5	LAN connection to network		
6	USB-Slave	-	-
7	T-Octophon F key module		
8	Adapter		
9	USB-Master (e. g. for external keyboard)		

Operating Features

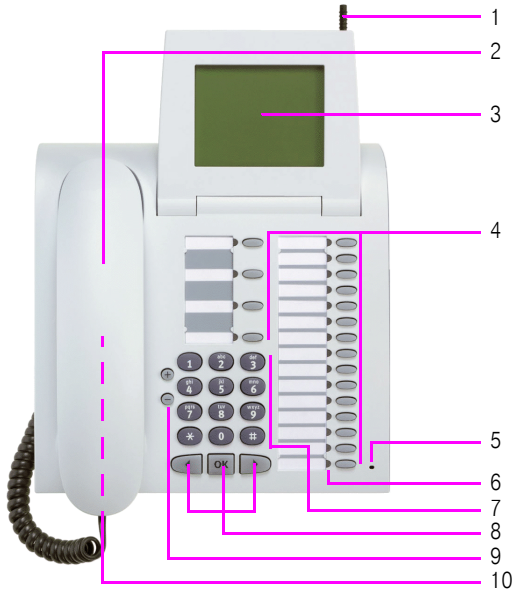

1	Operating pen
2	Handset
3	Illuminated touchscreen display
4	Function keys
5	Microphone for speakerphone mode
6	LEDs
7	Keypad
8	Navigation keys
9	Keys for telephone settings
10	Speaker

Important Notes	5
How to activate functions.....	6
Operating the Personal Telephone Directory	7
Operating the Speed Dial List	8
Important Operating Procedures	9
Functions and Codes (Alphabetical)	11

Important Notes



Never operate the telephone in an environment where there is a risk of explosion!



Never open the telephone set or an add-on unit. If any problems arise, get in touch with your service personnel.

Only use original accessories. The use of other manufacturers' accessories may be dangerous and will render the warranty and approval null and void.

The telephone must not come into contact with abrasive liquids or liquids which are liable to discolor it, such as tea, coffee, fruit juices or soft drinks.

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract.

CE label



The CE symbol certifies compliance of this equipment with the EU directives 1999/5/EG.

Environmental label



This device has been manufactured in accordance with a certified environmental management system (ISO 14001). This process ensures that energy consumption and the use of primary raw materials are kept to a minimum, thus reducing waste production.

Step by Step

How to activate functions

... directly

Certain functions can be **selected directly in the idle state**, for example:


▶ OK

Make your selection with   and confirm it with .

OK
or

Other functions can be **selected directly in certain call situations**. You dial a number but the other party is busy:


▶ OK

Confirm with .

Make your selection with   confirm it with  and dial another number.

... via the Service Menu

First press the program/service key. You are then offered a number of selection options. Example: suppressing the number display at the called party:




Press the key.

Use the service code to switch to the Display Suppression function. The service codes are listed in the chapter „Functions and Codes“.

or






Press the key.

▶ OK


Make your selection with   and confirm it with .

▶ OK

Select again with   and confirm with  bestätigen.

... using a function key

You can activate directly a Hicom function that you have saved on a key, for example



Press the key. The function is executed.

... in local applications

In addition to situation-dependent functions, T-Octophon F50 also lets you use and access local applications, such as the personal telephone directory, via the large graphics-enabled display with its touch-screen functionality.

Operating the Personal Telephone Directory

Personal directory

Search by Name

Sanders, Thomas

Sandman, Ron

Smith, Andy

Smith, Dave

Smith, Dave [2]

Thompson, Jack

Cancel Edit Details Dial

Phone Personal

Function/application name

Entry field

Selected list entry

Scroll bar

Softkeys:
 Cancel: end display and return
 Edit: open telephone directory editor
 Details: display entry data
 Dial: call standard phone number of the entry

Display menu

To generate an entry

activation

Editor menu activation

Enter password 123456 (if necessary)

Create new entry

Enter a name

or

Show

Enter a name

Accept entries

Enter call number in one of the fields

Enter another number (if necessary)

For standard call numbers (if necessary)

For further data (if necessary)

Save entry and

if no further entries

Exit Editor

To search for and dial an entry

activation

Limiting a search:

Enter the name

or

Show

Enter the name

Accept entries

Scroll list (if necessary) and select the entry

Viewing a selected entry

To display data

For further data (if necessary)

Dialling the selected entry

+

Operating the Speed Dial List

Function/application name

Page 1 of 5
(further fields on the pages 2 to 5 = altogether 40 speed dial fields)

8 speed dial fields

Change page 1 to 5

Softkeys:
 Prog.Stop: end application
 Edit: change to Edit mode
 Back to menu: end Java environment
 Display menu

Speed Dial Applet 1 of 5

first entry empty

entry 2 empty

Peter Miller empty

empty empty

Previous Next

Exit Edit Back to menu

Phone Ext. apps

Creating/changing/deleting an entry

Ext. apps Click on Register

Select "SpeedDialApplet"

Run Select and

Launch start the midlet

Creating/changing an entry

Edit Editor menu activation

empty Select a field; if necessary

select side with "Next"/"Previous"

Select "Enter Entry Manually"

A **B** **C** Enter a name

Enter a number

Save Save entry

Delete an entry

Edit Editor activation

first entry Select a field with entry

Select "Delete Entry"

Selecting an entry

Ext. apps Click on Register

Select "SpeedDialApplet"

Run Select and

Launch start the midlet

first entry Select entry

display changes to **Phone**

Import an entry from ENB

Ext. apps Click on Register

Select "SpeedDialApplet"

Run Select and

Launch start the midlet and

Edit activate the Edit Mode

empty Select a field






 

Select "Import Entry from ENB"

 

Select one entry from list



Change name and phone number (if necessary)

Save Save entry



Important Operating Procedures

-  = Lift the handset
-  = Replace the handset
-  = Conduct a call
- 0 0** = Enter the code
- +** = To next user action
-  = Press the key
-  = Press the illuminated key
-  = Press the flashing key
-  = Enter a telephone number or code



-  **Consultation?** OK
-  **Display contrast?** OK

- = The option appears on the screen.
Press the **OK** key to confirm your selection.
- = Search for an option.
Press the   keys, until the option appears on the screen. Then press the **OK** key to confirm your selection.

Calling


 +  call no.


or

 call no. + 

Redialling

Dial last no. called



 Redial


x1 = last no. dialled


x2 = second last no. dialled



x3 = third last no. dialled

Caller list


Select call

 **Caller list?** OK


 einblenden

  auswählen


Dial displayed call

 **Call?** OK

Ending a call





or


 Release


Speed-dialling

Dial using speed-dial no.



 Program/Service


 ***7=Use speed-dialling?** OK


 Speed-dial no.


Individual - *0 ... *9


Central - 000 ... 999

 
Save individual speed-dial no.





 Program/Service

 ***92=Change Speed-dial?** OK

 Speed-dial no. (*0... *9)

 Change/Change entry? OK

 Ext. code + call no.

 Save/Save entry? OK

Telephone setup

Change ringer volume

+ or -

Ring/Ringer volume? OK

+ or - higher/lower vol.

Save + - together

Change ringer pitch

+ or -

Ring/Ringer tone? OK

+ or - higher/lower vol.

Save + - together

Change call volume



+ or - higher/lower vol.

Save + - together

Consultation

Call second user

1st user call

Consult/Enquiry? OK

2nd user call no.

End consultation

Return to held call? OK

Toggle

Alternating calls with

two users

Callback conversation

Toggle/Connect? OK

Transferring a call

1st user call

Consult/Enquiry? OK

2nd user call no.

Call may be announced



Conference

1st user call

Start conference? OK

2nd user call no.

Conf. may be announced

Conference? OK

Call forwarding

Activate

Forwarding on? OK

1=all calls? OK

Call no.

Save entry? OK

Deactivate

Forwarding off? OK

Using callback

Called party is busy

or does not answer

Callback/Set Callback? OK

Delete

View callbacks? OK

Delete? OK

Using mailbox

Callback or message

is saved

View/Display messages? OK

Message sent/Text? OK

or

Call voice mail? OK

Follow user prompts!

Save call no. on a key

Program/Service

*91=Prog. feature key? OK

Second level

pos.

Change key/feature? OK

Redial key? OK

Call no.

Save/Save entry? OK

Deactivate microphone

Call partner not permitted

to listen in

Mute

Activate

Mute

Open listening

Activate speaker



Speaker

Deactivate speaker




Speaker


 

Functions and Codes (Alphabetical)

The table below lists all available functions as they appear on the display. Functions that have been configured (contact service personnel) can be activated interactively (select + save) via the Program/Service menu (select + save or enter a code), or by pressing function keys, provided that the functions have been configured (contact service personnel).



Functions (display)	... Interactively 	... Via the Program/Service menu		... With function keys
			Code	
Account code		✓	*60	X
Advisory msg. on	✓	✓	*69	X
Advisory msg. off	✓	✓	#69	X
Associated dial		✓	*67	X
Associated serv.		✓	*83	X
Call waiting	✓	✓	*55	X
Waiting tone off	✓	✓	*87	X
Waiting tone on	✓	✓	#87	X
Call wait.term.on		✓	*490	X
Call wait.trm.off		✓	#490	X
Caller List	✓	✓	#82	X
Save number	✓	✓	*82	X
Changeover on	✓	✓	*66	X
Changeover off	✓	✓	#66	X
Change PIN		✓	*93	
Conference	✓	✓	*3	X
Start conference	✓			
Adding a party to the conference	✓			
End conference	✓	✓	#3	
View conf parties	✓			
Remove party	✓			
Consult	✓			
Return to held call	✓	✓	*0	
Quit and return	✓	✓	*0	
Transfer/Accept	✓			
Control Relay On		✓	*90	X
Control Relay Off		✓	#90	X
DISA				
DND on	✓	✓	*97	X
DND off	✓	✓	#97	X
Door opener on		✓	*89	X
Door opener off		✓	#89	X
DTMF dialing		✓	*53	X
En-bloc sending				
Dial	✓			

Functions and Codes (Alphabetical)

Functions (display)	... Interactively 	... Via the Program/Service menu 		... With function keys
			Code	
Forwarding on	✓	✓	*1	X
1=all calls	✓	✓	*11	X
2=external calls only	✓	✓	*12	X
3=internal calls only	✓	✓	*13	X
Forwarding off	✓	✓	#1	X
Trunk FWD on	✓	✓	*64	X
Trunk FWD off	✓	✓	#64	X
Forward Line: On		✓	*501	X
Forward Line: Off		✓	#501	X
HF answerback on	✓	✓	*96	X
HF answerback off	✓	✓	#96	X
Hotline				
Internal DISA	✓	✓	*47	X
Join hunt group	✓	✓	*85	X
Leave hunt group	✓	✓	#85	X
Rejoin all groups	✓	✓	*85*	X
Leave all groups	✓	✓	#85#	X
Keypad dialing		✓	*503	
Lock all phones		✓	*943	X
Monitoring			*944	
Mute on	✓	✓	*52	X
Mute off	✓	✓	#52	X
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	#44	X
Open door		✓	*61	X
Override	✓	✓	*62	X
Page		✓	*45	X
Answer page		✓	#45	X
Park a call		✓	*56	X
Retrieve call		✓	#56	
Phone Test		✓	*940	
Pickup - directed		✓	*59	X
Pickup - group	✓	✓	*57	X
Accept call	✓			
Prog. feature key		✓	*91	X
Redial				X
Reject call				
Release				X
Relocate		✓	*9419	X
Complete Relocate	✓		#9419	

Functions (display)	... Interactively 	... Via the Program/Service menu 		... With function keys
			Code	
Reserve trunk	✓			X
Reset services		✓	#0	X
Retrieve line		✓	*63	X
Ring Transfer: On		✓	*502	X
Ring Transfer: Off		✓	#502	X
Ringer cutoff on	✓	✓	*98	X
Ringer cutoff off	✓	✓	#98	X
Ringing group on		✓	*81	X
Ringing group off		✓	#81	X
Room monitor		✓	*88	X
Select language		✓	*48	
Send message	✓	✓	*68	X
View sent message	✓	✓	#68	X
Display Messages	✓	✓	#68	X
Mailbox				X
Shift Key				X
Show call charges (own telephone)		✓	*65	X
View call charges (other party's telephone)				X
Speaker call		✓	*80	X
Suppress call ID	✓	✓	*86	X
Restore caller ID	✓	✓	#86	X
Tel. data service			*42	
Temporary MSN	✓	✓	*41	X
Temporary Phoner		✓	*508	X
Timed reminder on		✓	*46	X
Timed reminder off		✓	#46	X
Toggle/Connect	✓	✓	*2	X
Trace call		✓	*84	X
Transfer	✓			
Trunk Flash		✓	*51	X

Functions and Codes (Alphabetical)

Functions (display)	... Interactively 	... Via the Program/Service menu		... With function keys
			Code	
UCD		✓		
Log on		✓	*401	X
Log off		✓	#401	X
Available		✓	*402	X
Not available		✓	#402	X
Work on		✓	*403	X
Work off		✓	#403	X
UCD night on		✓	*404	X
UCD night off		✓	#404	X
Calls in queue		✓	*405	X
Phonebook	✓			X
Set Callback	✓	✓	*58	X
View callbacks/Delete	✓	✓	#58	
Use speed-dialing		✓	*7	X
Change Speed-dial (station)		✓	*92	X



Important telephone numbers

For problems:

For questions regarding sales:

Upon delivery of the equipment, please enter telephone numbers!



The equipment referred to in these instructions conforms with the requirements of the EU directive: 1999/5/EG - Directive on radio equipment and telecommunications terminal equipment and mutual recognition of conformity.

Compliance with the above directive is confirmed by the CE marking affixed to the equipment.

The declaration of conformity can be viewed at:

Deutsche Telekom AG

Geschäftsbereich Endgeräte

CE-Testlab Steinfurt

Sonnenschein 38

48565 Steinfurt

Tel: 02551 10 61 2

Mail: testlab-steinfurt@telekom.de

Issued by:
Deutsche Telekom AG

Right of modification reserved.
Reference number: A31003-E8400-X940-2-7619
SW version: 3.0
Status: 09/2004
Printed on environmentally compatible
recycled paper.