 


Octopus F270 IT  
Octopus F100/200/400/650  
Octopus F IP-Netpackage  
Octopus F470 UC  
Octophon F615 HFA  
Operating Instructions



## Important information

---

## Important information



Never open the telephone or a key module. Should you encounter any problems, contact the responsible service personnel.

Use only original accessories. The use of other accessories may be hazardous and will render the warranty, extended manufacturer's liability and the CE marking invalid.

---

## Trademarks



The device conforms to the EU directive 1999/5/EC as attested by the CE marking.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

Proper disposal and separate collection of your old appliance will help prevent potential damage to the environment and human health. It is a prerequisite for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.

The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the directive 2002/96/EC. Countries outside the European Union may impose other regulations regarding the disposal of electrical and electronic equipment.

---

## Location of the telephone

- The telephone should be operated in a controlled environment with an ambient temperature between 5°C and 40°C.
- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the plastic casing.
- Do not operate the telephone in damp environments, such as bathrooms.

## Software update



During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line.

An update action is indicated by messages on the display and/or by flashing LEDs.

---

## Documentation

These operating instructions can be found on CD-ROM (ask the service personnel) in HTML and PDF format.

To view or print the operating manual in PDF format, you need a computer on which the free Adobe Acrobat Reader program is installed.

To view the operating manual in HTML format, you need a computer with a Web browser, for example, Microsoft Internet Explorer.

## Contents

### Important information . . . . . 2

Trademarks . . . . .	2
Location of the telephone . . . . .	3
Software update . . . . .	3
Documentation . . . . .	3

### General information . . . . . 10

About this manual . . . . .	10
Service . . . . .	10
Intended use . . . . .	11
Telephone type . . . . .	11
Speakerphone quality and display legibility . . . . .	11
Voice encryption . . . . .	11
Multi-line telephone, executive/secretary functions . . . . .	12
Team functions . . . . .	12

### Getting to know your Octophon phone . . . . . 13

The user interface of your Octophon F615 . . . . .	13
Ports on the underside of the phone . . . . .	14
Using network ports more efficiently . . . . .	15
key module for Octophon F615 . . . . .	16
Keys . . . . .	17
Audio keys . . . . .	17
Mailbox key and Menu key . . . . .	17
Navigation keys . . . . .	17
Programmable function keys . . . . .	18
Keypad . . . . .	19
Display . . . . .	20
Idle mode . . . . .	20
Mailbox . . . . .	21
Messages . . . . .	21
Voicemail . . . . .	21
Caller list . . . . .	22
Program/Service menu . . . . .	23
Control and monitoring function . . . . .	23

<b>Basic functions .....</b>	<b>24</b>
Answering a call .....	24
Answering a call via the handset .....	24
Answering a call via the loudspeaker (speakerphone mode) .....	25
Switching to speakerphone mode .....	26
Switching to the handset .....	26
Open listening in the room during a call .....	26
Making calls .....	27
Off-hook dialing .....	27
On-hook dialing .....	27
Dialing with DDS keys .....	27
Redialing a number .....	28
Ending a call .....	28
Rejecting calls .....	29
Turning the microphone on and off .....	29
Calling a second party (consultation) .....	30
Switching to the held party (alternating) .....	30
Transferring a call .....	31
Call forwarding .....	32
Using variable call forwarding .....	32
Using call forwarding no reply (CFNR) .....	33
Call forwarding in the event of telephone failure (CFSS) .....	34
Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN) .....	35
Using callback .....	36
Storing a callback .....	36
Accepting a callback .....	36
Viewing and deleting a stored callback .....	37

<b>Enhanced phone functions . . . . .</b>	<b>38</b>
Answering calls . . . . .	38
Accepting a specific call for your colleague . . . . .	38
Using the speakerphone . . . . .	39
Answering calls from the entrance telephone and opening the door . . . . .	40
Making calls . . . . .	42
En-bloc sending/correcting numbers . . . . .	42
Using the caller list . . . . .	43
Dialing a number from the internal directory . . . . .	44
Using the LDAP directory . . . . .	45
Making calls using system speed-dial numbers . . . . .	47
Dialing with speed-dial keys . . . . .	47
Talking to your colleague with a speaker call . . . . .	48
Talking to your colleague with discreet calling . . . . .	49
Automatic connection setup (hotline) . . . . .	49
Reserving a trunk . . . . .	49
Assigning a station number . . . . .	50
Associated dialing/dialing aid . . . . .	50
During a call . . . . .	51
Using call waiting (second call) . . . . .	51
Preventing and allowing call waiting (automatic camp-on) . . . . .	52
Turning the call waiting tone on and off . . . . .	52
Saving a number . . . . .	52
Parking a call . . . . .	53
Holding external calls . . . . .	54
Conducting a conference . . . . .	55
Activating tone dialing/DTMF suffix-dialing . . . . .	57
Recording a call . . . . .	57
Transferring a call after a speaker call announcement in a group . . . . .	58
Sending a trunk flash . . . . .	58
If you cannot reach a destination . . . . .	59
Call waiting (camp-on) . . . . .	59
Busy override – joining a call in progress . . . . .	59
Using night answer . . . . .	60
<b>Programming the function keys . . . . .</b>	<b>61</b>
Configuring function keys . . . . .	61
Overview of functions . . . . .	62
Programming a procedure key . . . . .	64
Configuring redial keys . . . . .	65
Deleting function key programming . . . . .	65

<b>Displaying and assigning call charges</b> .....	<b>66</b>
Displaying call charges .....	66
Displaying call charges for another telephone .....	67
Dialing with call charge assignment .....	68
<b>Privacy/security</b> .....	<b>69</b>
Voice encryption	
(only for Octopus F270 IT/F100/F200/F400/F650/IP-Netpackage) .....	69
Displaying status .....	69
Notes on voice encryption .....	70
Turning ringer cutoff on and off .....	70
Activating/deactivating "Do not disturb" .....	71
Caller ID suppression .....	71
Monitoring a room .....	72
Trace call: identifying anonymous callers .....	72
Locking the telephone to prevent unauthorized use .....	73
Locking another telephone to prevent unauthorized use .....	74
Saving your PIN .....	75
<b>More functions/services</b> .....	<b>76</b>
Appointments function .....	76
Saving appointments .....	76
Using timed reminders .....	77
Sending a message .....	77
Creating and sending a message .....	77
Viewing and editing incoming messages .....	78
Leaving an advisory message .....	79
Deleting advisory messages .....	79
Displaying the number of waiting calls/overload display .....	80
Using another telephone like your own for a call .....	80
Using a mobile phone number at a random phone .....	81
Logging on to the "guest telephone" .....	81
Moving the connection to the next telephone .....	81
Logging off the "guest telephone" .....	82
Fax details and message on answering machine .....	83
Resetting services and functions (system-wide cancellation for a telephone) .....	83
Activating functions for another telephone .....	84
Using system functions from outside DISA (direct inward system access) .....	85
Using functions in ISDN via code dialing (keypad dialing) .....	86
Controlling connected computers/programs/telephone data service .....	87
Communicating with PC applications over a CSTA interface .....	88
Controlling relays (only for Octopus F100/200/400/650) .....	89
Sensors (Octopus F100/200/400 only) .....	89
Radio paging .....	90

## Making calls in the team/executive/ secretary configuration. . . . . 91

Lines . . . . .	91
Line utilization . . . . .	91
Line seizure . . . . .	91
Trunk keys . . . . .	92
Answering calls with the trunk keys . . . . .	93
Dialing with trunk keys . . . . .	93
Placing a call on hold on a trunk key and retrieving the held call . . . . .	93
Making calls on multiple lines alternately . . . . .	94
MULAP conference release . . . . .	94
Direct station selection key . . . . .	95
Using DSS keys to answer calls . . . . .	95
Calling a team member directly . . . . .	95
Transferring a call in progress . . . . .	96
Accepting a call for another team member . . . . .	96
Forwarding calls on trunks . . . . .	97
Transferring calls directly to the executive phone . . . . .	99

## Using team functions. . . . . 100

Activating/deactivating a group call . . . . .	100
Accepting a call for another member of your team . . . . .	102
Ringing group . . . . .	102
Uniform Call Distribution (UCD) . . . . .	103

## Special functions in the LAN . . . . . 105

Leaving hunt group/group call . . . . .	105
Setting up "follow me" call forwarding . . . . .	106
Using night answer . . . . .	107
Ringing group . . . . .	108
Controlling relays (only for Octopus F100/200/400/650) . . . . .	109
Opening a door . . . . .	110

## Individual phone configuration . . . . . 111

Setting contrast . . . . .	111
Adjusting audio settings . . . . .	112
Adjusting the receiving volume during a call . . . . .	112
Adjusting the ring volume . . . . .	112
Adjusting the ring tone . . . . .	112
Adjusting the attention ring volume . . . . .	112
Adjusting the speakerphone to the room acoustics . . . . .	113
Turn ringtone on/off . . . . .	113
Language for system functions . . . . .	113



<b>Testing the phone</b> .....	<b>114</b>
Phone functions, testing .....	114
Checking the key assignment .....	114
<b>Differing display view in a Octopus F900 environment</b> .....	<b>115</b>
<b>Fixing problems</b> .....	<b>116</b>
Responding to error messages .....	116
Contact partner in the case of problems .....	116
Troubleshooting .....	117
Caring for your telephone .....	117
Labeling keys .....	118
<b>Index</b> .....	<b>119</b>
<b>Overview of functions and codes</b> .....	<b>124</b>

# General information

## About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The respective features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you, this may be due to one of the following reasons:

- The function is not configured for you or your telephone. Please contact your system support representative.
- Your communications platform does not feature this function. Please contact your sales partner for information on how to upgrade.

This user guide is intended to help you familiarize yourself with Octophon F615 and all of its functions. It contains important information on the safe and proper operation of your Octophon F615 phone. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

These instructions should be read and followed by every person installing, operating or programming an Octophon F615 phone.



For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

---

This user guide is designed to be simple and easy to understand, providing clear step-by-step instructions for operating your Octophon F615 phone.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

## Service



The service personnel department can only help you if you experience problems or defects with the phone.  
Should you have any questions regarding operation, your specialist retailer or network administrator will gladly help you.  
For queries regarding connection of the telephone, please contact your network provider.

---

If you experience problems or defects with the phone, please dial the service number for your country.

## Intended use

The Octophon F615 phone is a desktop or wall-mounted unit designed for voice transmission and for connection to a LAN. Any other use is regarded as unauthorized.

## Telephone type

The phone name data can be found on the name plate on the base of the device; The exact product name and serial number are specified here.

Specific details concerning your communications platform can be obtained from your service technician.

Please have this information ready when you contact our service department regarding faults or problems with the product.

## Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm.
- Proceed as follows to optimize display legibility:
  - Turn the phone to tilt the display to ensure you have a frontal view of the display while eliminating light reflexes.
  - Adjust the contrast as required → Page 111.

## Voice encryption

On Octopus F100/200/400/650/IP-Netpackage (R 4 and later) and Octopus F470 UC your Octophon F615 supports voice encryption from software release 2 (V1 R2.xxxx). This allows you to use your Octophon F615 to perform tap-proof calls. Voice transmission is encrypted and is decrypted at the other call party's phone and vice versa.

If "Secure Mode" is enabled on your phone, and a connection is established to a phone that does not support voice encryption, the call is not encrypted and thus unsecured.

Your service personnel can define at the communication system whether you are notified of unencrypted calls and how → Page 70.

### Multi-line telephone, executive/secretary functions

Your Octophon F615 is a "multi-line telephone". This means that your service personnel can configure multiple lines on your phone, which is not the case with single-line phones. Each line is assigned an individual phone number which you can use to make and receive calls. The programmable sensor keys function as line keys on multi-line phones → Page 91.

When using a multi-line phone to make and receive calls, certain particulars must be taken into account → Page 93 ff.

The executive-secretary configuration is a special case. This is a multi-line telephone with special features (e.g. "Ring Transfer" and "Accept call"), configured especially for executive/secretary use → Page 91 ff.


### Team functions

 
 
To increase the efficiency of telephony, your service personnel can configure various Team functions such as pickup groups, hunt groups, and call distribution groups.

## Getting to know your Octophon phone


The following sections describe the most frequently used operating elements and the displays on your Octophon F615 phone.

### The user interface of your Octophon F615

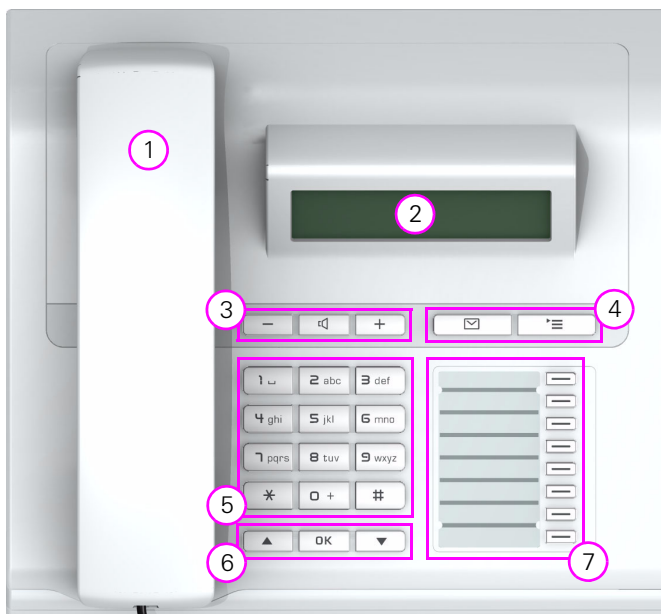

1	You can make and receive calls as normal using the <b>handset</b> .
2	The <b>display</b> permits intuitive operation of the phone → Page 20.
3	<b>Audio keys</b> are also available, allowing you to optimally configure the audio features on your telephone → Page 17.
4	 <b>mailbox key</b> and  <b>menu key</b> .
5	The <b>keypad</b> is provided for input of phone numbers/codes.
6	You operate the telephone → Page 17 with the <b>navigation keys</b> .
7	The <b>programmable keys</b> can be assigned with functions (e. g. Disconnect) → Page 61.

## Ports on the underside of the phone

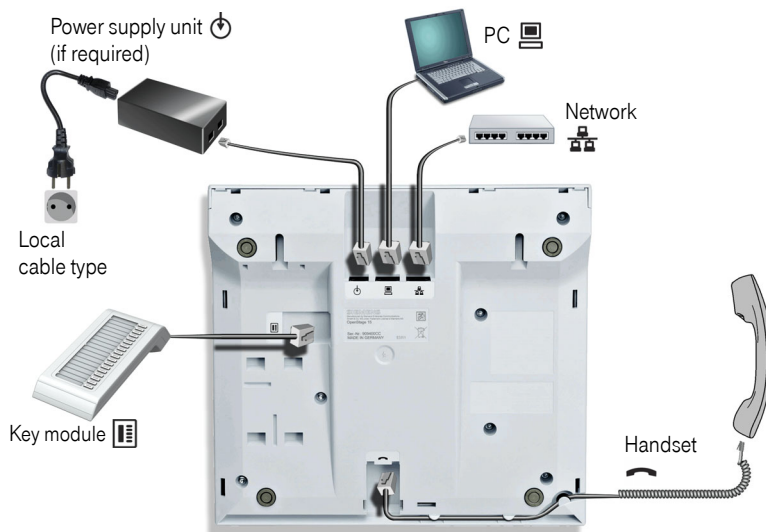

## Properties of your Octophon F615

Display type	LCD, 24 x 2 characters
Full-duplex speakerphone function	✓
Wall mounting	✓

## Using network ports more efficiently

Octophon F615 has an integrated 10/100 mbps Ethernet switch. This means that you can connect a PC to the LAN directly via the phone.



Using this connection option saves one network port for each switch used and requires fewer or shorter network cables when arranged correctly.

## key module for Octophon F615

The key module is a key module attached to the side of the phone that provides an additional 18 illuminated, programmable sensor keys.

Like keys on the phone, these keys can be programmed and used according to your needs  
→ Page 18.



You can only attach one key module to your Octophon F615.



## Keys

### Audio keys



Key	Function when key is pressed
	Reduce volume and set contrast brighter → Page 111.
	Turn loudspeaker on/off (with red LED key) → Page 26.
	Increase volume and set contrast darker → Page 111.

 
### Mailbox key and Menu key



Key	Function when key is pressed
	Open mailbox (with red LED key) → Page 21.
	Open Program/Service menu (with red LED key) → Page 23.

### Navigation keys


These are used to manage most of your phone's functions and display.

 


Key	Function when key is pressed
	Open the idle menu → Page 20 or browse back in the menu.
	Perform action.
	Open the idle menu → Page 20 or browse forward in the menu.

### Programmable function keys

Your Octophon F615 has eight illuminated keys to which you can assign functions or numbers.


 Increase the number of programmable function keys by connecting a key module  
→ Page 16.



Depending on how they are programmed, you can use the keys as:

- Function key → Page 61
- Redial/Direct station selection key → Page 65

Each key can be programmed with one function.

 The configuration of direct station selection keys must be activated by your service personnel.

Direct station selection keys can be assigned an internal number from the Octopus F900 network.



 
Press the key briefly to activate the programmed function or dial the stored number.

Hold the key to open the key programming menu → Page 61.


Your Octophon is delivered with label strips. Write functions or names in the white fields on the label strips.

The status of a function is shown by the LED on the corresponding function key.

#### Meaning of LED displays on function keys

 
LED		Meaning of function key
	Off	The function is deactivated.
	Flashing <sup>[1]</sup>	The function is in use.
	On	The function is activated.

[1] In this manual, flashing keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

 The programmable sensor keys on multi-line phones function as trunk keys  
→ Page 92.

## Keypad

In cases where text input is possible, you can use the keypad to input text, punctuation and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.

Example: To enter the letter "h", press the number  key on the keypad twice.

---



To enter a digit in an alphanumerical input field, hold down the relevant key.

---

Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 7288376).


### Display

Your Octophon F615 comes with a black-and-white LCD display. Adjust the contrast to suit your needs → Page 111.

### Idle mode

Your phone is in idle mode when there are no calls taking place or settings being made.

Example:

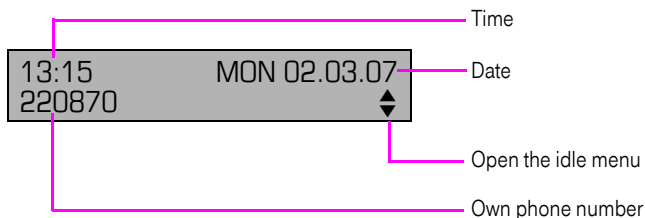

### Idle menu

When in idle mode, press a key on the 3-way navigator → Page 17 to display the idle menu. You can call up various functions here. The idle menu includes selected functions from the Program/Service menu → Page 23.

It may contain the following entries:

- Caller list
- Forwarding on
- Lock phone
- DND on<sup>[1]</sup>
- Advisory msg. on
- Ringer cutoff on
- Send message
- View sent message<sup>[2]</sup>
- View callbacks<sup>[3]</sup>
- Directory
- HF answerback on
- Suppress call ID
- Waiting tone off
- DISA intern

[1] Must be activated by service personnel.

[2] Only appears when there are messages that the recipient has not yet viewed

[3] Only appears if callback requests are saved


## Mailbox

Depending on the type and configuration of your communications platform (contact the relevant service personnel), messages from services, such as IVM, are displayed in this application in addition to messages received.

## Messages


You can send short text messages to individual internal stations or groups.


In idle mode (→ Page 20) the following signals alert you to the presence of new messages:

-  key LED lights up
- Displays "Messages received".

Press the mailbox key .

Example:

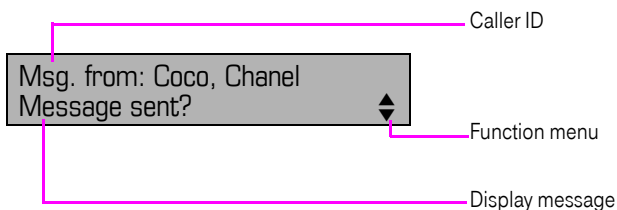

 For a description of how to edit the entries → Page 78.

## Voicemail

If your telephone is connected to a voicemail system (such as Entry Voice Mail), the Mailbox key will also light up to alert you to any messages that have arrived.

An appropriate message also appears on the display (for instance, in Entry Voice Mail: "<x> new messages").

To play back your voicemail, follow the instructions on the display.

### Caller list


If you are unable to accept an external or internal call, the call attempt is stored in the caller list.

Answered calls can also be saved (contact your service personnel).

Your telephone stores up to ten calls in chronological order. Each call is assigned a time stamp. The most recent entry not yet answered in the list is displayed first. Multiple calls from the same caller do not automatically generate new entries in the caller list. Instead, only the most recent time stamp for this caller is updated and its number incremented.

The caller list is automatically displayed → Page 20 in the idle menu → Page 43.


---


 Callers with suppressed numbers cannot be saved in the call log.

---

Information is displayed regarding the caller and the time at which the call was placed.

 
Example:

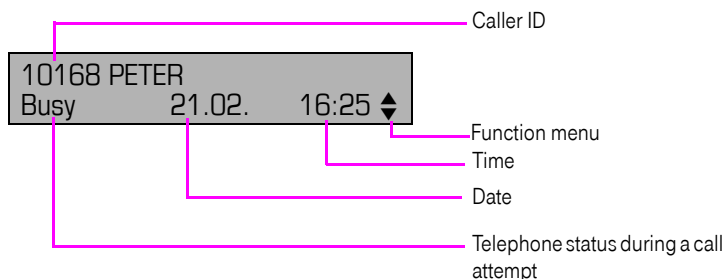

 For a description of how to edit the call logs → Page 43.


---

## Program/Service menu

Use the  menu key to reach the Program/Service menu for your communication system.

The menu key LED remains red as long as you are in this menu.

Example:

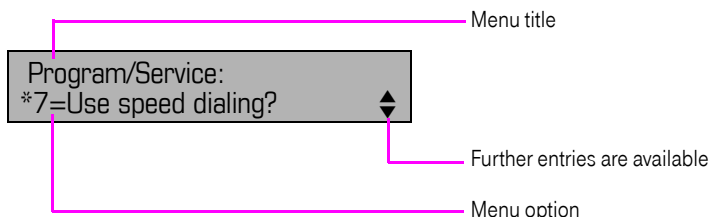

A double arrow next to an entry indicates the availability of additional options for this entry. The menu structure comprises several levels. The first line in this structure shows the menu currently selected while the second line shows an option from this menu.

## Control and monitoring function


A control or monitoring function can be activated on your phone for service purposes by remote maintenance.

### Control function

Service personnel have the option to activate and deactivate features of the phone via remote maintenance. During maintenance the handset, microphone, loudspeaker and headset are deactivated. You are additionally informed on the display that the control function is active.


### Monitoring function

In order to detect malfunctioning of a phone for example, the service personnel install a monitoring function. You can use your phone as normal during monitoring. However you will first be informed about the operation with a message on the display and prompted to allow monitoring.

If service personnel have activated a function on your phone, which continuously transmits operating data to a server, you will see the flashing icon  in the upper display line.

## Step by Step


### Basic functions

 Please read the introductory chapter "Getting to know your Octophon phone" → Page 13 carefully before performing any of the steps described here on your phone.

### Answering a call

Special default ring signaling is set for your telephone:

- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.

 Your service personnel can adjust the ring cadence for external and internal calls for you. In other words, different ring cadences can be set for different internal callers.

The number or the name of the caller appears on the display.

### Answering a call via the handset

The phone rings. The caller appears on the screen.  
Pay attention to the notes on voice encryption → Page 70.

Lift the handset.

  
 **+** or  **-**

Raise or lower the volume. Keep pressing the key until the desired volume is set.



## Step by Step

## Answering a call via the loudspeaker (speakerphone mode)

### Suggestions for using speakerphone mode:

- Tell the other party that you are using speakerphone mode.
- The speakerphone works best at a low receiving volume.
- The ideal distance between the user and the telephone set in speakerphone mode is about 50 cm (approx. 20 inches).

The phone rings. The caller appears on the screen.

Pay attention to the notes on voice encryption → Page 70.



Press the key shown. The LED lights up.

if nec. or

Raise or lower the volume. Keep pressing the key until the desired volume is set.

### Ending a call



Press the key shown. The LED goes out.

## Step by Step

### Switching to speakerphone mode

**Prerequisite:** You are conducting a call via the handset.



Hold down the key and replace the handset. Then release the key.

if nec. or

Set the call volume. Keep pressing the key until the desired volume is set.

#### U.S. mode

If the country setting is set to U.S. (ask the service personnel), you do not have to hold down the loudspeaker key when replacing the handset to switch to speakerphone mode.



Press the key shown.



 
Replace the handset. Proceed with your call.

if nec. or

Set the call volume. Keep pressing the key until the desired volume is set.

### Switching to the handset

**Prerequisite:** You are engaged in a call in speakerphone mode.



Lift the handset. Proceed with your call.

### Open listening in the room during a call

You can let other people in the room join in on the call. Let the other party know that you have turned on the speaker.

**Prerequisite:** You are conducting a call via the handset.

#### Activating



Press the key shown. The LED lights up.

#### Deactivating



Press the key shown. The LED goes out.

## Step by Step

## Making calls

### Off-hook dialing



Lift the handset.



Internal calls: Enter the station number.

External calls: Enter the external code and the station number.

Pay attention to the notes on voice encryption → Page 70.

#### The called party does not answer or is busy:



Replace the handset.

### On-hook dialing



internal: Enter the station number.

External calls: Enter the external code and the station number.



Your system may also be programmed so that you have to press the "internal" key before you dial an internal number. To call an external party, you have to enter an external code before dialing the party's telephone number (Prime Line is not active; contact your service personnel).

Pay attention to the notes on voice encryption → Page 70.

#### The other party answers with speaker:



Lift the handset.

or

On-hook dialing: Speakerphone mode.

#### The called party does not answer or is busy:



Press the key shown. The LED goes out.

## Dialing with DDS keys

**Prerequisite:** You have saved a number on a DDS key → Page 65.

Press the key with a saved number.

If the number is saved on the second layer, press the shift key first.

Pay attention to the notes on voice encryption → Page 70.



You can press the DDS key during a call and automatically initiate a callback → Page 30.

## Step by Step

### Redialing a number

The last ten external telephone numbers dialed are stored automatically.



If this feature is configured (contact your service personnel), account codes entered are also saved → Page 68.

You can redial them simply by pressing a key.

#### Displaying and dialing saved station numbers

**Prerequisite:** The "Redial" key is configured.



Press the "Redial" key to dial the last number dialed.

Press the key twice to dial the next to the last number dialed.

Press the key three times to dial the third-to-the-last number dialed.

or

Next?

Keep confirming until the phone number you want appears.

Call?

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 70.

### Ending a call



Press the lit key.

or



Replace the handset.

## Step by Step

## Rejecting calls

You can reject calls which you do not wish to take. The call is then signaled at another definable telephone (contact your service personnel).

**Prerequisite:** The "Disconnect" key is configured. The phone rings. The caller appears on the screen.

■ Press the "Disconnect" key.

If a call cannot be rejected, your telephone will continue to ring. The message "Currently not possible" is displayed (e.g. in the case of recalls).

## Turning the microphone on and off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone. You can also switch on the handsfree microphone to answer an announcement via the telephone speaker (speaker call, → Page 39).

**Prerequisite:** A connection is set up, the microphone is activated. The "microphone" key is configured.

■ Press the "microphone" key. The microphone is deactivated.

or

□ Press the illuminated "microphone" key. The microphone is activated.

## Step by Step

Consultation?

### Calling a second party (consultation)

You can call a second party while a call is in progress. The first party is placed on hold.

Confirm.



Call the second party.

Pay attention to the notes on voice encryption → Page 70.

Return to held call?

#### Return to the first party:

Confirm,

or

Quit and return?

select and confirm the option shown.

Toggle/Connect?

### Switching to the held party (alternating)

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 70.

Conference?

#### Combine the calling parties into a three-party conference

Select and confirm the option shown.



If voice encryption is not activated or not available on a conference party's phone, the entire conference is not secure. It may be indicated that the call is not secure → Page 70.

Leave conference?

#### Allowing call partners to continue a conference after you exit

Select and confirm the option shown.



For more information on conferences, see → Page 55.

## Step by Step

**Consultation?**

or

**Transfer?**

## Transferring a call

If the person you are speaking to wants to talk to another colleague of yours, you can transfer the call that colleague.

Confirm.

Enter the number of the party to which you want to transfer the call.

Announce the call, if necessary.

Replace the handset.

Select and confirm the option shown<sup>[1]</sup>.

 
[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

### Call forwarding

 
#### Using variable call forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system.)

 When call forwarding is active, a special dial tone sounds when you lift the handset.

If DID DTMF is active (contact your service personnel), you can also forward calls to this destination.  
Destinations: Fax = 870, DID = 871, Fax-DID = 872.

If you are a call forwarding destination, your display will show the number or the name of the originator on the upper line and that of the caller on the lower line.

 Special features must be taken into consideration if your telephone operates with Octopus F IP-Netpackage (system networking via PC network) → Page 106!



If configured: Press the forwarding key.

Open the idle menu → Page 20.

Forwarding on?

Select and confirm the option shown.

1=all calls?

Confirm,

or

2=external calls only?

select and confirm the option shown,

or

3=internal calls only?

select and confirm the option shown.



Enter the destination number.

Save?

Confirm.

Forwarding off

Select and confirm the option shown.

#### Deactivating call forwarding



## Step by Step

## Using call forwarding no reply (CFNR)

Calls that are not answered after three rings (=default, can be adjusted by service personnel) or that are received while another call is ongoing can be automatically forwarded to a specified telephone.



Press the key shown.

\*495=CFNR on?

Select and confirm the option shown.



Enter the destination number.

- Enter the internal station number for internal destinations
- Enter the external code and the external station number for external destinations

Save?

Confirm.

## Deactivating call forwarding no reply



Press the key shown.

#495=CFNR off?

Select and confirm the option shown.

Delete?

Confirm.

or

Exit

Select and confirm to deactivate but not delete the forwarding destination.



If CFNR is activated, when you hang up, "CFNR to:" appears briefly on the display: "...".

## Step by Step

### Call forwarding in the event of telephone failure (CFSS)

If configured (consult your service personnel), you can define an internal or external call forwarding destination that activates in the event of telephone failure.



Press the key shown.

\*9411= CFSS on?

Select and confirm the option shown.



Enter the destination number.

Save?

Confirm.



Press the key shown.

#9411= CFSS off?

Select and confirm the option shown.

Delete?

Confirm the option shown to deactivate and delete the forwarding destination.

or

Exit?

Select and confirm to deactivate but not delete the forwarding destination.



Press the key shown.

\* 9 wxyz 4 ghi 1 1

Enter the code.

Change?

Confirm.



Change the destination phone number.

Save?

Confirm.

### Changing the forwarding destination (if call forwarding is active):

## Step by Step

## Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN)

If this function has been configured (contact your service personnel), you can forward calls to your assigned multiple subscriber number (MSN) (DID number) directly within the carrier network. For example, you can forward your phone line to your home phone after business hours.



Press the key shown.

Trunk FWD on?

Select and confirm the option shown.

1=immediate?

Select and confirm the required type of call forwarding

or

2=on no answer?

select and confirm the option shown.

or

3=on busy?

select and confirm the option shown.



Enter your DID number.



Enter the destination number (without the external code).

Save?

Confirm.

### Deactivating call forwarding

Trunk FWD off?

Select and confirm the option shown.

Confirm the displayed call forwarding type.



Enter your DID number.

## Step by Step

### Using callback

You can request a callback if the internal station called is busy or if nobody answers. This also applies for external calls via ISDN exchanges. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback

- When the other party is no longer busy,
- When the user who did not answer has conducted another call.



When configured (contact your service personnel), all callback requests are automatically deleted over night.

### Storing a callback

**Prerequisite:** You have reached a busy line or no one answers.

Confirm.

Callback?

### Accepting a callback

**Prerequisite:** A callback was saved. Your telephone rings. "Callback: ..." appears on the display: "..." appears on the screen.



Lift the handset.

or



Press the key shown. The LED lights up.

or

Answer?

Select and confirm the option shown.

You hear a ring tone.

Pay attention to the notes on voice encryption → Page 70.

## Step by Step



View callbacks?

Open the idle menu → Page 20.

Select and confirm the option shown<sup>[1]</sup>.

Next callback?

Select and confirm to display additional entries.

Delete?

Confirm.

Exit?

Select and confirm the option shown.

or



Press the key shown. The LED goes out.

or



Press the key shown. The LED goes out.

## Viewing and deleting a stored callback

## Deleting a displayed entry

## Ending retrieval

[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

### Enhanced phone functions

#### Answering calls

##### Accepting a specific call for your colleague

You hear another telephone ring.



Press the key shown.

More features?↕

Select and confirm the option shown.

\*59=Pickup - directed?

Select and confirm the option shown<sup>[1]</sup>.

if nec.

Next?

Select and confirm until the name/number of the required subscriber is displayed.

Accept call?

Confirm.

or



If you know the number of the telephone that is ringing, enter it directly.

Pay attention to the notes on voice encryption → Page 70.

[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

## Using the speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement. The other party's name or station number appears on the screen.

You can conduct the call with the handset or in speakerphone mode.



Lift the handset and answer the call.

or

Mute off?

Press the "OK" key to confirm your selection and answer the call.



If handsfree answerback is enabled (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode. If handsfree answerback is disabled (default setting), follow the procedure described above.

Placing a speaker call to a colleague → Page 48.

## Enabling and disabling handsfree answerback



Open the idle menu → Page 20.

HF answerback on?

Select and confirm the option shown,

or

HF answerback off?

select and confirm the option shown.

### Step by Step

#### Answering calls from the entrance telephone and opening the door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener.

If you have the proper authorization (contact your service personnel), you can activate the **door opener**, enabling visitors to open the door themselves by entering a 5-digit code (using a DTMF transmitter or the keypad installed).

#### Speaking to visitors via the entrance telephone

**Prerequisite:** Your telephone rings.



Lift the handset within thirty seconds. You are connected to the entrance telephone immediately.

or



Lift the handset after more than thirty seconds.



Dial the entrance telephone number.

#### Opening the door from your telephone during a call from the entrance telephone

Open door?

Confirm.

#### Opening the door from your telephone without calling the entrance telephone



Press the key shown.

\*61=Open door?

Select and confirm the option shown.



Dial the entrance telephone number.



Special features must be taken into consideration if your telephone operates with Octopus F IP-Netpackage (system networking via PC network) → Page 110!

#### Opening the door with a code (at the door)



After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a doorbell call signal may or may not be forwarded.



## Step by Step



**\*89=Door opener on?**



or

**3=change password?**

**1=enable with ring?**

or

**2=enable w/o ring?**



**#89=Door opener off?**

### Activating the door opener

Press the key shown.

Select and confirm the option shown.

Dial the entrance telephone number.

Enter the five-digit code. Default code = "00000".

Select the displayed function and press the "OK" dialog key to change the code.

Select and confirm the option shown.

You can also open the door without a doorbell ring.

### Deactivating the door opener

Press the key shown.

Select and confirm the option shown.

## Step by Step

### Making calls

#### En-bloc sending/correcting numbers

If this feature is configured (contact your service personnel), a connection is not attempted immediately when a station number is entered. This means that you can correct the number if necessary. The station number is only dialed at your specific request.



Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.

#### Dialing entered/displayed numbers



Lift the handset.

or

Dial?

Confirm.

Pay attention to the notes on voice encryption → Page 70.

#### Correcting numbers entered



A station number can only be corrected as it is being entered. Station numbers stored for number redial, for example, cannot be corrected.

Delete number?

Select and confirm the option shown.  
The last digit entered in each case is deleted.



Enter the required digit(s).

Cancel?

Select and confirm the option shown.

or



Press the key shown. The LED goes out.

## Step by Step

## Using the caller list

Detailed information, as well as a sample display entry are provided on → Page 22.

## Retrieving the caller list

**Prerequisite:** Service personnel has set up a caller list for your telephone.

Open the idle menu → Page 20.

Confirm<sup>[1]</sup>.

The latest entry is displayed, see the example on → Page 22.

To view other calls, confirm each subsequent display.

## Ending retrieval

Select and confirm the option shown.

or



Press the key shown. The LED goes out.

or



Press the key shown. The LED goes out.

## Displaying the call time

**Prerequisite:** You have retrieved the caller list and the selected call is displayed → Page 22.

Select and confirm the option shown.

## Dialing a station number from the caller list

**Prerequisite:** You have retrieved the caller list and the selected call is displayed.

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 70.



The caller is automatically deleted from the caller list when a connection is finally set up.

## Removing an entry from the caller list

**Prerequisite:** You have retrieved the caller list and the selected call is displayed.

Confirm.

Caller list?

Next?

Previous menu?

Time/date sent?

Call?

Delete?

[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

### Dialing a number from the internal directory

The internal directory contains all station numbers and system speed-dial numbers assigned to a name. Contact your service personnel to find out if one was configured for your system.

**Prerequisite:** Names have been assigned to the station numbers stored in the system.



Lift the handset.

or



Press the key shown. The LED lights up.

Directory?

Confirm.

if nec.

If several directories have been configured:

1=internal?

Confirm.

The first entry is displayed on the screen.



or



Scroll to next or previous entry.

or

Scroll Next?

select and confirm the option shown,

or

Scroll Previous?

select and confirm the option shown.

or



Enter the name you want to find, or just the first few letters, using the alphanumeric keypad → Page 19.

if nec.

Delete Character?

Select and confirm each letter to be deleted. The last letter entered is deleted. If all letters are deleted, the first entry in the directory will be displayed again.

if nec.

Delete Line?

Select and confirm the option shown. All entered letters are deleted, and the first entry in the internal directory is displayed again.

Call?

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 70.

## Step by Step

## Using the LDAP directory

If configured (ask your service personnel), you can search for directory data in the LDAP database and dial the number of any subscriber you find there.

**Prerequisite:** The LDAP search feature has been configured in the system.



Lift the handset.

or



Press the key shown. The LED lights up.

Directory

Confirm.

if nec.

If several directories have been configured:

2=LDAP?

Select and confirm the option shown.



Enter the name you wish to search for using the keypad (max. 16 characters) → Page 19.

You can enter an incomplete name, e.g. "mei" for "Meier".

if nec.

If configured (ask your service personnel), you can also search for surname and first name. To separate surname and first name by a space, enter "0". You can enter incomplete names, e.g. "mei p" for "Meier Peter".

if nec.

Delete Character?

Select and confirm each letter to be deleted. The last letter entered is deleted.



In large databases, the results of the search may be incomplete if too few characters are entered → Page 46.

Search?

Confirm.

The name is searched for. This may take a few seconds.

### Step by Step

Call?

or

or

Scroll Next?

or

Scroll Previous?

Call?

Modify search?

Show matches?

Modify search?

#### The result is displayed

If only one name is found, it is displayed.  
Confirm.

If several names are found (max. 50), the first name is displayed.

Scroll to next or previous entry,

confirm,

select and confirm the option shown.

Select and confirm the option shown.

Pay attention to the notes on voice encryption → Page 70.

#### If no name is found

If your search does not yield any name corresponding to your query, you can extend the range of the search, e.g. by deleting characters.

Select and confirm the option shown.

For further procedure, see above.

#### If too many names are found

If more than the maximum of 50 names are found corresponding to your query, only an incomplete list of results can be displayed.

You can view these results, select any of the names, or change the search string (e.g. narrow the search by entering more characters).



In this case it is advisable to narrow down the search so that all corresponding names can be displayed.

Confirm, to view the incomplete list.  
For further procedure, see above.

or

Narrow the search down.

Select and confirm, in order to change the search string.  
For further procedure, see above.

## Step by Step

## Making calls using system speed-dial numbers

**Prerequisite:** You know the system speed-dial numbers (consult your service personnel).



Press the key shown.

\*7=Use speed dialing?

Select and confirm the option shown<sup>[1]</sup>.



Enter a three-digit speed-dial number.

Pay attention to the notes on voice encryption → Page 70.

**if nec. Suffix-dialing**



If necessary, you can suffix-dial additional digits (for example, the user's extension) at the end of the saved station number.

If this feature is configured, a suffix is automatically dialed (for example, "0" for the exchange) if no entries are made within 4 or 5 seconds.

## Dialing with speed-dial keys

**Prerequisite:** You have configured speed-dial keys → Page 47.



Press the key shown.

\*7=Use speed dialing?

Select and confirm the option shown<sup>[1]</sup>.



Press the key shown.



Press the required speed-dial key.

Pay attention to the notes on voice encryption → Page 70.

## Configure a speed-dial key

You can program the keys + to with ten frequently used phone numbers.



Press the key shown.

\*92=Change Speed Dial?

Select and confirm the option shown<sup>[1]</sup>.

Change?

Confirm.



Press the key shown.



Press the required speed-dial key. If the key is already in use, the programmed phone number appears on the screen.

Change

Confirm.

[1] "Differing display view in a Octopus F900 environment" → Page 115

### Step by Step



First enter the external code and then the external station number.

Save

Confirm.

or

**If you make a mistake:**

Previous?

Select and confirm the option shown. This deletes all entered digits.

Next?

Confirm.

or

Change?

Select and confirm the option shown,

or

Delete?

select and confirm the option shown,

or

Exit?

select and confirm the option shown.



\*80=Speaker call?

Open the idle menu → Page 20.

Select and confirm the option shown.



Enter the station number.



Responding to a speaker call → Page 39.

---

 


## Step by Step

## Talking to your colleague with discreet calling

If this function has been configured (ask your service personnel), you can join an ongoing call conducted by an internal user at a system telephone with display.

You can listen in unnoticed and speak to the internal user without being overheard by the other party (discreet calling).



Lift the handset.

Enter the code.

Enter your internal station number.



Your service personnel can protect your telephone against discreet calling.

## Automatic connection setup (hotline)

If this function is configured (contact your service personnel), the system automatically sets up a connection to a preset internal or external destination.



Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a preset **period of time** (hotline after a timeout).

## Reserving a trunk

If configured (ask your service personnel), you can reserve an occupied trunk for yourself.

When the line is free, you receive a call and a note on the display.

**Prerequisite:** "Currently busy" appears on the display.

Confirm.

Reserve trunk

## Reserved line is free:

Your telephone rings. "Trunk is free" appears on the display.



Lift the handset. You will hear the dial tone.



Enter the external phone number.

## Step by Step

### Assigning a station number

If this function has been configured (contact your service personnel), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.



Press the key shown.

**\*41=Temporary MSN?**

Select and confirm the option shown.



Enter the DID number you wish to use.

Dial the external number.

### Associated dialing/dialing aid

If this function has been configured (contact your service personnel), you can use a dialing aid to dial numbers and set up calls for your telephone.

The operating procedure depends on whether the dialing aid is connected to the **S<sub>0</sub> bus** or the **a/b (T/R) port**.

You can also use your system telephone as a dialing aid for other telephones.

#### Dialing aid on the S<sub>0</sub> bus

On the PC, select a destination and start dialing.



The speaker on your telephone is switched on. Lift the handset when the other party answers.

#### Dialing aid at the a/b (T/R) port

On the PC, select a destination and start dialing.

"Lift the handset" appears on the PC screen.



Lift the handset.

#### Dialing aid from your telephone for another telephone:



Press the key shown.

**\*67=Associated dial?**

Select and confirm the option shown.



Enter the internal station number ("Dial for:").

Enter the number you wish to dial.

## Step by Step

## During a call

## Using call waiting (second call)

Callers can still reach you while you are engaged in another call. A signal alerts you to the waiting call. You can ignore or accept the second call. When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on. You can block the second call or the signal tone (→ Page 52).

**Prerequisite:** You are engaged in a phone call and hear a tone (every six seconds).

## Ending the first call and answering the waiting call:



Replace the handset. Your telephone rings. Pay attention to the notes on voice encryption → Page 70.



Answer the second call. Lift the handset.

## Placing the first call on hold and answering the second call:

Call waiting?

Select and confirm the option shown. Pay attention to the notes on voice encryption → Page 70.

You are immediately connected to the second caller. The first party is placed on hold.

## Ending the second call and resuming the first one:

Quit and return?

Confirm.

or



Replace the handset. "Recall appears on the display: ..." appears on the screen.



Lift the handset.

### Step by Step

#### Preventing and allowing call waiting (automatic camp-on)

If this function has been configured (ask your service personnel), you can prevent or allow a second call → Page 51 from being signaled by automatic camp-on during an ongoing call.



Press the key shown.

#490=Call wait.trm.off?

Select and confirm the option shown<sup>[1]</sup>,

or

\*490=Call wait.term.on?

select and confirm the option shown.

#### Turning the call waiting tone on and off

You can suppress the call waiting tone (every six seconds) for external calls. A one-time special dial tone then alerts you to the waiting call.

##### Activating



Open the idle menu → Page 20.

Waiting tone off?

Select and confirm the option shown.

##### Deactivating



Open the idle menu → Page 20.

Waiting tone on?

Select and confirm the option shown.

#### Saving a number

You can save your call partner's station number for subsequent redialing from the caller list → Page 43.

**Prerequisite:** You are conducting a call.

Save number?

Select and confirm the option shown.

[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

## Parking a call

You can park up to ten calls, either internal, external, or both. Parked calls can be displayed on and picked up from another telephone. This feature is useful if you want to continue a call at another phone.

**Prerequisite:** You are conducting a call.

Press the key shown.



\*56=Park a call?

Select and confirm the option shown.



Enter the number of the park slot (0 - 9) and make a note of it. If the park slot number you entered is not displayed, it is already in use; enter another one.

## Retrieving a parked call

**Prerequisite:** One or more calls have been parked. The phone is idle.

Press the key shown.



Retrieve call?

Select and confirm the option shown<sup>[1]</sup>.



Enter the park slot number you noted earlier. If the park slot number you enter is not in use, you cannot retrieve the call.



If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

 
[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

**Held on line: 801**



if nec.



**Retrieve line**

or



or



### Holding external calls

If you have programmed a hold key on your phone → Page 61, you can put external calls on hold.

Then all other stations can accept the call on the assigned trunk.

Press the "Hold" key.

The message of the relevant trunk appears (e.g. 801) and note the trunk number.

If available, the LED of the assigned trunk key flashes slowly.

Replace the handset or press the key shown.

Depending on the configuration, this may be necessary so other members can also pick up the call on hold.

### Accepting call on hold

**Prerequisite:** One or more calls are on hold. The phone is idle.

Press the key shown.

Select and confirm the option shown.

If the "Retrieve" key is available → Page 61, press it.

Enter the noted trunk number.

If there is a "Line:" key available for the relevant trunk, it flashes slowly. Press the key shown.

## Step by Step

### Conducting a conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.



You can only add parties to or remove them from a conference if you initiated the conference.



**Start conference?**

Call the first party.

Select and confirm the option shown.



**Conference?**

Call the second party. Announce the conference.

Select and confirm the option shown.

A tone sounds every 30 seconds to indicate that a conference is in progress.



If voice encryption is not activated or not available on a conference party's phone, the entire conference is not secure. It may be indicated that the call is not secure → Page 70.

#### If the second party does not answer

**Return to held call?**

Confirm.

#### Adding up to five parties to a conference

**Add party?**

Confirm.



**Conference?**

Call the new party. Announce the conference.

Select and confirm the option shown.

#### Viewing the conference parties

**View conf parties?**

Select and confirm the option shown. The first party is displayed.

**Next?**

To display other parties, confirm each subsequent display.

**Exit list?**

To exit the list: Select and confirm the option shown.

### Step by Step

**View conf parties?**

#### Removing parties from the conference

Select and confirm the option shown. The first party is displayed.

**Next?**

Confirm as often as required until the desired party appears.

**Remove party?**

Select and confirm the option shown.



If a participant that was connected to the conference via an unencrypted line leaves, the conference remains unsecured.

---

**Leave conference?**

#### Leaving a conference

Select and confirm the option shown.

or



Replace the handset, if this feature is configured (contact your service personnel).

**End conference?**

#### Ending a conference

Select and confirm the option shown.

or



Replace the handset, if this feature is configured (contact your service personnel).

**Drop last conf. party?**

#### Removing the ISDN central office party from the conference

Select and confirm the option shown.



## Step by Step

## Activating tone dialing/DTMF suffix-dialing

You can transmit dual-tone multifrequency (DTMF) signals to control devices such as an answering machine or automatic information system.



Press the key shown.

\*53=DTMF dialing?

Select and confirm the option shown.



You can use the keys through and to transmit DTMF signals.



Ending the call also deactivates DTMF suffix dialing.

Your system may be configured so that you can start DTMF suffix-dialing immediately after setting up a connection.

## Recording a call

If configured (contact your service personnel), you can record an on-going call.

**Prerequisite:** You are on a call, the "Recording" key is configured → Page 61.



Press the "Recording" key. The LED lights up.

You and the other party hear an acoustic announcement, indicating that recording has started, and an acoustic signal is emitted approx. every 15 seconds during the entire recording session.



During recording, it is not possible to add further call parties.

## Stopping recording



Press the illuminated "Recording" key. The LED goes out.

## Listening to a recording

Playback of the recording depends on the voice recording system used (see the associated user guide).

## Step by Step

Consultation?



\*80=Speaker call?



or

Transfer?



\*51=Trunk flash?



### Transferring a call after a speaker call announcement in a group

If this function has been configured (contact your service personnel), you can use a speaker call (announcement, → Page 100) to announce a call in progress to a group of users → Page 48. After a member of the group has accepted the call request, you can transfer the waiting party.

**Prerequisite:** You are conducting a call.

Confirm. The other party is placed on hold.

Press the key shown.

Select and confirm the option shown.

Enter the group's station number.

Announce the call.

When a member of the group accepts the call → Page 39, you are connected to this party.

Replace the handset.

Select and confirm the option shown<sup>[1]</sup>.



If the connection between the two other parties is not established within 45 seconds, the call from the first part returns to you (recall).

### Sending a trunk flash

To activate ISDN-type services and features through the network carrier's analog trunks or those of other communications platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

**Prerequisite:** You have set up an external connection.

Press the key shown.

Select and confirm the option shown.

Enter the service code and/or telephone number.

[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

## If you cannot reach a destination

## Call waiting (camp-on)

**Prerequisite:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Wait (approx. 5 seconds) until "Camp-on" appears on the display and the busy tone is followed by the ring tone.

The called party can then respond → Page 51.



The called party can prevent automatic call waiting  
→ Page 52.

If this feature is configured (contact your service personnel), you will hear the ring tone and the message "Camp-on" is immediately displayed.

Camp-on

## Busy override – joining a call in progress

This function is only available if it has been configured by the service technician (contact your service personnel).

**Prerequisite:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Select and confirm the option shown.

The called party and person to whom this party is talking hear an alerting tone every two seconds.

If the called party has a system telephone with display, the following appears on the screen: "Override: (Number or name)".

You can now start talking.

Override?

### Step by Step

## Using night answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by service personnel ( standard night answer service) or by you ( temporary night answer service).



Special features must be taken into consideration if your telephone operates with Octopus F IP-Netpackage (system networking via PC network) → Page 107!

Night answer on?

Select and confirm the option shown.

\*=default?

Press the "OK" dialog key to confirm ( standard night answer service).

or



Enter the code ( standard night answer service).

or



Enter the destination number ( temporary night answer service).

Save?

Confirm.

Night answer off?

Select and confirm the option shown.

Service personnel can also configure an "automatic night answer service". The automatic night answer service activates at specific times for your telephone depending on how it is programmed.

You can deactivate the automatic night answer service or replace it with a night answer service you configured (see above).


Step by Step

## Programming the function keys

You can program frequently used functions, station numbers Octophon F615 HFA or procedures onto the function keys on your or key module.

### Configuring function keys

See also → Page 18.

 A list of all available functions is displayed, see the overview → Page 62.

#### Example: Programming the Shift key



Open the Program/Service menu → Page 23.

\*91=Prog. feature key

Select and confirm the option shown.



Press the key shown.

Change key

Confirm.

More features



Select and confirm the option shown.

Shift Key

Confirm.

if nec.

Save incomplete

Select and confirm the option shown.

Some functions (e.g. with "Call forwarding") cannot be saved completely. This means that when later initiating the function by pressing the button, further inputs are required.

Exit

Confirm.

or

Another key

Select and confirm the option shown.

The LED displays show the status of the function → Page 18 and → Page 62.

## Step by Step

### Overview of functions

The functions are split into the following menus:

- Destinations
- Feature Settings
- PIN and Authorization
- Calls
- More features



The available functions depend on your configuration. If a function is missing, contact your service personnel.

### Saved function LED messages

Call forwarding, Forwarding - trunk, Forward Line, Night answer, Do not disturb, Telephone lock, Advisory message, Ringer cutoff, HF answerback on/off, Join/leave group, Caller ID suppression, Call wait.term., Waiting tone off, Ring Transfer, Recording, Door opener on/off, Control Relay (only for Octopus F100/200/400/650), Ringing group on, Shift Key, UCD (Available on/off, Work on/off), Night answer on/off, MULAP Privacy Release:



Saved function is not activated.



Saved function is activated.

#### Callback:



You have no entry for callback.



You have an entry for callback.

#### Redial key (Internal), Direct station select:



Party not on a call.



Party is on a call or has activated DND.



Flashing quickly - I'm being called, please accept.

Flashing slowly - another party is being called and has not yet answered.

#### Call key, General call key, Trunk key, MULAP Key, Temporary MSN:



No call via corresponding trunk.



Active call via the corresponding trunk.





Flashing quickly - call on the relevant trunk, call pickup is possible by pressing the key.



Flashing slowly - a call is placed on hold on the relevant trunk.

Step by Step


**Trunk group key:**

-  At least one trunk is free.
-  All lines in this trunk group are occupied.



**View call charges:**

-  No chargeable calls have been set up since the last check.
-  Chargeable calls have been set up since the last check.



**Call forwarding, Forward Line:**

-  Flashing slowly - your line is a call forwarding destination.



 
**Fax details:**

-  No fax received or no message on the answering machine.
-  Fax received or message on the answering machine.

**View number of calls:**

-  No waiting callers.
-  Flashing quickly - callers waiting (certain number is exceeded).  
Flashing quickly - callers waiting (certain number is reached).

**Data I/O Service:**

-  No connection to an application.
-  Active connection to an application.
-  Flashing slowly, connection to an application is temporarily interrupted.

**The following functions programmed on keys do not have a LED function:**

Redial key (external), Procedure key, Trace call, Speed dial, Clear, Lock all phones, Send message, Directory (1=internal, 2=LDAP), Call waiting, Toggle/Connect, Conference, Speaker call, Retrieve line, Reserve trunk, Release trunk, Temporary Phone, Override, Park a call, Pickup - directed, Pickup - group, Account code, Show call charges, Page, Answer page, Answer, Timed reminder, Open door, DTMF dialing, Recall-key, Room monitor, Hold key, Consult internal, Consultation, Associated dial, Associated serv., Tel. data service, Rufnr. tauschen, Mobile Login, Discreet Call.

## Step by Step

\*91=Prog. feature key

Change key

More features →

Procedure key →



if nec. ■

Save

or

previous

Exit

or

Another key

## Programming a procedure key

Numbers and functions which require further input, i.e. which contain several operating steps, can be saved on a key on your telephone. The relevant service personnel must be granted appropriate authorization.

For example the function "Associated dialing" → Page 50 together with the required input (phone number to be dialed) can be saved on a key.

Numbers which require further input can also be saved.

Open the Program/Service menu → Page 23.

Select and confirm the option shown.

Press the key shown.

Confirm.

Select and confirm the option shown.

Select and confirm the option shown.

Enter procedure. Example: \*67 231 123456

Code for associated dial.

Number of the phone to for which the call should be made the number to be called.

Press "Pause" to enter pauses (a "P" appears on the display).

Confirm.

### If you make a mistake:

Select and confirm the option shown. This deletes all entered digits.

Confirm.

Select and confirm the option shown.



Select the saved procedure by pressing the key.

Procedures with activatable/deactivatable functions are activated with one press of the button and deactivated with the next.

You can press the procedure key during a call to automatically send the saved digits as DTMF signals → Page 57. For display messages when saving procedures, see → Page 116.



Step by Step



\*91=Prog. feature key



Change key

if nec.

+|=Next layer

Destinations



Redial key



previous

Exit

or

Another key



\*91=Prog. feature key



Clear key

## Configuring redial keys

You can also program internal and external station numbers on the second level. The LED function is not available for internal station numbers on the second level. To program the second level, you must program a "Shift" key → Page 61 .

See also → Page 18.

Open the Program/Service menu → Page 23.

Select and confirm the option shown.

Press the key shown.

Confirm.

Select and confirm the option shown.

Confirm.

Confirm.

Enter the station number.

### If you make a mistake:

Select and confirm the option shown. This deletes all entered digits.

Confirm.

Select and confirm the option shown.



You dial the saved number by pressing the key → Page 27.

You can also save a number during a call.

## Deleting function key programming

Open the Program/Service menu → Page 23.

Select and confirm the option shown.

Press and hold the assigned key.

Select and confirm the option shown.

### Step by Step

## Displaying and assigning call charges

### Displaying call charges

#### For the current call:

Call charges are shown by default on the display when a call ends. If you want to display call charges as they occur during a chargeable call, your service personnel must request this option from the network operator.

Call charge display must be requested from the network operator and configured by the relevant service personnel.

Depending on the setting, call charges are displayed during or after a call.

Depending on the network operator, free external calls are also displayed. The message "Free of Charge" appears on the screen either before or during the call.

If the cost indication facility has not been installed, the display will show the dialed number and/or the length of the telephone call.



If a call is forwarded, call charges are assigned to the destination of the call transfer operation.

#### For all calls and for the last call

Connection charges for the last chargeable call made are displayed first. After five seconds, the accumulated connection charge (total) is displayed.



Press the key shown.

**\*65=Show call charges?**

Select and confirm the option shown<sup>[1]</sup>.

[1] "Differing display view in a Octopus F900 environment" → Page 115

Step by Step

### Displaying call charges for another telephone

If configured (contact your service personnel), you can also display and print out information on chargeable calls for other phones (such as a pay phone).

**Prerequisite:** You have programmed the function "Show call charges" on a key → Page 61.

The LED lights up to indicate that you have conducted a chargeable call since the last time you viewed the charges.

■ Press the "Call Charges" key. Chargeable calls are displayed.

Next

Press to display further chargeable calls.

Print

Select and confirm the option shown

or

Clear

select and confirm the option shown

or

Add'l information

select and confirm the option shown

or

Exit

select and confirm the option shown.

## Step by Step

### Dialing with call charge assignment

You can assign external calls to certain projects.

**Prerequisite:** Your service personnel have defined account codes for you.



Press the key shown.

\*60=Account code?

Select and confirm the option shown.



Enter the account code.

if nec. #

Press this key.

or

#=Save?

Confirm.

Depending on the required configuration; Contact your service personnel.



Enter the external phone number.



You can also enter the account code during a call.


---

---

Step by Step

## Privacy/security

### Voice encryption (only for Octopus F270 IT/F100/F200/ F400/F650/IP-Netpackage)

 Please see also the explanations on → Page 11.

#### Displaying status

##### in call mode

During calls, you can check if your call is secure.

If a key is configured with the "Security call status" function, this illuminates when the call is secure.

Security Call Status ▲

Select and confirm the option shown.

or



Press the "Security call status" key (if configured).

Secure Call

The call is secure.

or

Standard Call

The call is not secure.

##### in idle mode

You can see whether voice encryption is active on your phone from the display, when the phone is in idle mode.



Open the idle menu → Page 20.

Security status ▲

Select and confirm the option shown.

Secure client

Voice encryption is activated for your telephone.

or

Standard client

Voice encryption is not activated for your telephone.

## Step by Step

### Notes on voice encryption

Your service personnel can define on your communication system whether you are notified of unencrypted calls and how. You will then receive a warning tone and/or a message on the display when you accept a call, accept a consultation call or are connected to a conference.



Warning tone.

and/or

**Standard call**

Display for an unencrypted call.

or

**Secure call**

Display for encrypted call.

### Turning ringer cutoff on and off

If you do not wish to take calls, you can activate the ringer cutoff function. Calls are only identified by **one** ring signal, and they are shown on the display.

#### Activating



Open the idle menu → Page 20.

**Ringer cutoff on?**

Select and confirm the option shown<sup>[1]</sup>,

#### Deactivating



Open the idle menu → Page 20.



**Ringer cutoff off?**

Select and confirm the option shown.

[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

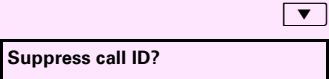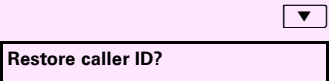

## Activating/deactivating "Do not disturb"

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the busy tone, external callers are connected to another phone, which you can specify (contact your service personnel).

### Activating

Open the idle menu → Page 20.

Select and confirm the option shown.

### Deactivating

Open the idle menu → Page 20.

Confirm.



When you lift the handset, you will hear a special tone (continuous buzzing) reminding you that "Do not disturb" is activated.

Authorized internal callers automatically override the DND feature after five seconds.

## Caller ID suppression

You can prevent your station number or name from appearing on the displays of external parties you call. The feature remains active until you deactivate it.

### Activating

Open the idle menu → Page 20.

Select and confirm the option shown.

### Deactivating

Open the idle menu → Page 20.

Select and confirm the option shown.



Your service personnel can activate/deactivate caller ID suppression for all phones.

## Step by Step

**\*88=Room monitor?**



Press the key shown.

Select and confirm the option shown.

You can either leave the telephone in speakerphone mode or lift the handset and leave it directed towards the noise source.



Press the lit key. The LED goes out.

or



Replace the handset.



### Monitoring the room

Enter the internal station number of the phone located in the room that you wish to monitor.

**\*84=Trace call?**



Press the key shown.

Select and confirm the option shown.



If the trace is successful, the transmitted data is stored by your network operator. Contact your service personnel.



## Step by Step

## Locking the telephone to prevent unauthorized use

You can prevent unauthorized parties from using your phone during your absence.

### Locking the phone



Open the idle menu → Page 20.

Lock phone?

Select and confirm the option shown.

or

Unlock phone?

select and confirm the option shown.



Enter code (telephone lock) → Page 75.



When the phone is locked, a special dial tone sounds when the handset is lifted. Within the system, users can make calls as normal.

Your phone can also be locked or unlocked by an authorized party → Page 74.

### Unlocking the phone



Open the idle menu → Page 20.

Unlock phone

Select and confirm the option shown.



Enter code (telephone lock) → Page 75.

## Step by Step

### Locking another telephone to prevent unauthorized use

If configured (contact your service personnel), you can lock and unlock other telephones to prevent unauthorized access.

If a phone user locks his or her phone and forgets the personal lock code, you can use this function to unlock the phone.



Press the key shown.

**\*943=Lock all phones?**

Select and confirm the option shown.



Enter the internal station number of the phone you wish to lock/unlock.

**\*=lock phone?**

Confirm,

or

**#=unlock phone?**

select and confirm the option shown.

## Step by Step

## Saving your PIN

Enter the lock code to use the functions

- for locking the telephone to prevent unauthorized use → Page 73
- for using another telephone like your own → Page 80.

You can save this code.



Press the key shown.

\*93=Change PIN?

Confirm.



Enter the current five-digit PIN.

If you have not yet set a PIN, use "00000" the first time.



Enter the new PIN.



Re-enter the new PIN.



If you forget your code, contact your service personnel. Your code can be reset to "00000".

## Step by Step

## More functions/services

### Appointments function

You can configure your phone to call you to remind you about appointments → Page 77.

You must save the required call times. You can enter a single appointment that will take place in the next twenty-four hours or you can enter a daily recurring appointment.

### Saving appointments



Press the key shown.

\*46=Timed reminder on?

Confirm.



Enter 4-digit times e. g. 0905 for 9.05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m.).

possibly or

If the selected language is "US English" (configure → Page 113) you can enter the code 2 for "am" or 7 for "pm" (default = "am").

One time only?

Confirm.

or

Daily?

Select and confirm the option shown.

Save?

Confirm.



Press the key shown.

#46=Timed reminder off?

Confirm.

Delete?

Confirm.

or

Exit?

Select and confirm the option shown.

### Deleting and checking a saved appointment

## Step by Step

Reminder at 1200



or



## Using timed reminders

**Prerequisite:** You have saved a reminder → Page 76. The saved time arrives.

The phone is ringing. The appointment time is displayed.

Press key twice.

Lift the handset and replace it again.



If you do not answer the timed reminder, it is repeated five times and then deleted.

## Sending a message

You can send short text messages to individual stations or groups of stations with system telephones.

## Creating and sending a message

Send message?



Open the idle menu → Page 20.

Select and confirm the option shown.



Enter the internal station number of the recipient or group.

0=Please callback?

Select predefined text (can be changed by service personnel) and confirm.

or



Enter the code directly.

The code is shown on your display with the corresponding message.

or

Enter message text?



Select and confirm the option shown.

Text entry (up to 24 characters) → Page 19.

Send?

Confirm.



Transmitted text messages are saved as callback requests on system telephones with no display and on ISDN, pulse or tone dialing telephones.

## Step by Step



View sent message?

Message sent?

Delete?



or

View messages?↕

Message sent?

Time/date sent?

Call sender?

Delete?

### Displaying and deleting messages you have sent

**Prerequisite:** The recipient has not yet accepted a sent message. Open the idle menu → Page 20.

Select and confirm the option shown.

Confirm.

The text message is displayed.

Select and confirm the option shown.

The message is deleted.

### Viewing and editing incoming messages

Pay attention to the notes on → Page 21.

The LED lights up. Press the key shown.

Confirm.

The sender's caller ID appears on the display.

Confirm.

The text message appears on the display.

### Viewing the transmission time

Confirm.

### Calling the sender

Select and confirm the option shown.

### Deleting messages

Select and confirm the option shown.

## Step by Step

## Leaving an advisory message

You can leave messages/advisory messages on your phone's display for internal callers that wish to contact you in your absence.

When you receive a call, the message appears on the caller's display.

Open the idle menu → Page 20.

Select and confirm the option shown.

Select predefined text (can be changed by service personnel) and confirm.

or

Enter the code directly.

The code is shown on your display with the corresponding message.



Predefined messages with a colon can be completed by entering a digit.

or

Select and confirm the option shown.

Enter message (up to 24 characters) → Page 19.

Confirm.

## Deleting advisory messages

Open the idle menu → Page 20.

Select and confirm the option shown.

▼  
Advisory msg. on

0=Will return at:

□ + ... 9 wxyz

Enter message text?



Save?


▼

Advisory msg. off?

## Step by Step

### Displaying the number of waiting calls/ overload display

You can show the number of external waiting calls on the display if you programmed the "View number of calls" key → Page 61.

 
 Press the "Calls in Q" key.

If the number of waiting calls exceeds a preset limit while you are engaged in another call (overload), the LED on the key lights up. Contact your service personnel to find out the waiting call limit.

- LED off:  
There are no waiting calls.
- LED is flashing slowly:  
The set limit has been reached.
- LED is flashing quickly:  
The limit has been exceeded (overload).

### Using another telephone like your own for a call

Other parties can temporarily use your phone like their own for an outgoing call.

 Press the key shown.

**PIN and Authorization** ↕

Select and confirm the option shown.

**\*508=Temporary Phone?**

Select and confirm the option shown<sup>[1]</sup>.



Enter the number of the other user.

Enter the other user's lock code → Page 75.

if nec.

**Change PIN?**

If the other user has not set a PIN, he or she is prompted to do so on his or her phone.



Dial the external number.

This state is canceled as soon as the call is ended.

[1] "Differing display view in a Octopus F900 environment" → Page 115



## Step by Step

## Using a mobile phone number at a random phone

You can program a mobile phone number that was set up especially for you by your service personnel at a system-based Octophon phone of your choice. The original "guest telephone" setting is deactivated. The mobile phone number remains available until you log off the "guest telephone".

### Logging on to the "guest telephone"

Log on to the "guest telephone" with a mobile phone number.

**Prerequisite:** You received a mobile phone number and, where applicable, a password (consult your service personnel).



Enter the code for "Mobile Login ( Log on)", see → Page 124). You see the prompt "New num".



Enter the mobile phone number.

if nec.

Enter your password.



Press the key shown.

or

Entry complete

Confirm

The logon procedure begins.

Your mobile phone number will appear on the left of the display when you are correctly logged on → Page 20.

You can no longer see the original user settings for the "guest telephone" but you can now use your mobile connection. Entries are only temporarily saved in the call lists and personal phonebook, that is, they are not there the next time you log on.

### Moving the connection to the next telephone

If you want to move your connection from the first "guest telephone" to a second "guest telephone", log onto the second "guest telephone" in the usual fashion (see → Page 81).

The message "Log off successful" is output on the first "guest telephone". The "home telephone" remains locked. You can now use the second "guest telephone" in the same way as the first one.

## Step by Step

### Logging off the "guest telephone"



Enter the code for "Mobile Login (log off)", (see → Page 124).  
The logoff procedure begins.

The "guest telephone" is now available again with its original phone number, features and functions.

Your old and new telephone are the first telephones at each connection. The telephones are in idle state.

The following procedure is carried out on the new phone.



Open the Program/Service menu → Page 23.

#### Relocate



Select and confirm the option shown.

Enter own station number.



Enter code (telephone lock) → Page 75.  
(Not necessary if you have not set a code.)

#### Complete relocate

Confirm.



 
If you change numbers of different system phones, programmed keys are replaced with the default assignment. You can however connect your phone to a different port and then carry out the procedure.

## Step by Step

## Fax details and message on answering machine

If a fax or answering machine is connected to your system and you have assigned the "Fax details" function to a programmable key → Page 61, the key lights up when a fax or a message has been received.


### Deactivating signaling

 Press the flashing "Fax service" key. The LED goes out.

## Resetting services and functions (system-wide cancellation for a telephone)

A general reset procedure is available for initiated functions. The following functions are deleted, if enabled:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunt group off
- Suppress call ID
- Call waiting tone off
- Do not disturb on
- Ringer cutoff on
- Received messages:
- View callbacks

 Press the key shown.

**#0=Reset services?**

Select and confirm the option shown<sup>[1]</sup>.

[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

### Activating functions for another telephone

If configured (contact your service personnel), you can activate and deactivate the following functions for other phones (associated service):

- Do not disturb,  
code: \*97/#97 → Page 71
- Call forwarding, code \*11, \*12, \*13/#1 → Page 32
- Lock and unlock phone,  
code \*66/#66 → Page 73
- Ringing group  
code \*81/#81 → Page 100
- Leave an advisory message,  
code \*69/#69 → Page 79
- Group call,  
code \*85/#85 → Page 100
- Reset services and functions,  
code #0 → Page 83
- Control relays,  
code \*90/#90 → Page 89
- Night answer,  
code \*44/#44 → Page 60
- Timed reminders,  
code \*46/#46 → Page 76



Press the key shown.

**\*83=Associated serv?**

Confirm.



Enter the internal station number of the phone where you wish to activate the function.



Enter code (for example, \*97 for "Do not disturb on").

For any additional input, follow the instructions on your display.

## Step by Step

## Using system functions from outside DISA (direct inward system access)

If configured (contact your service personnel), you can use an external phone like an internal station to set up an outgoing external connection via the system. You can also activate or deactivate the following system functions:

- Reset services and functions, code #0 → Page 83
- Call forwarding, code \*1/#1 → Page 32
- Lock and unlock phone, code \*66/#66 → Page 73
- Save your PIN, code \*93 → Page 75
- Send a message, code \*68/#68 → Page 77
- Leave an advisory message, code \*69/#69 → Page 79
- Ringing group, code \*81/#81 → Page 100
- Group call, code \*85/#85 → Page 100
- Caller ID suppression, code \*86/#86 → Page 71
- Camp-on tone, code \*87/#87 → Page 52
- Open door, code \*61 → Page 40
- Release door opener, code \*89/#89 → Page 41
- Control relays, code \*90/#90 → Page 89
- Do not disturb, code \*97/#97 → Page 71
- Ringer cutoff, code \*98/#98 → Page 70
- Dial using speed dial, code \*7 → Page 47
- Associated service, code \*83 → Page 84

**Prerequisite:** Your phone supports tone dialing (DTMF) or you can switch your phone to tone dialing. The phone is not connected to the system.



Establish a connection to the system. Enter the station number (contact your service personnel).



Wait for the continuous tone (if necessary, switch phone to tone dialing) and enter the internal number assigned to you and the corresponding PIN.



Enter the code (only required if programmed in the system).



Wait for the dial tone and enter the code for example, \*97 for Do not disturb on. If necessary, make further entries; refer also to the user guide for dial pulse/DTMF phones.

or



Dial the external number.

## Step by Step



You can only perform one function/establish one outgoing connection at a time.

The connection is cleared as soon as the function is successfully activated.

In the case of an external call, the connection is cleared as soon as one of the call partners hangs up.

## Using functions in ISDN via code dialing (keypad dialing)

If authorized (contact your service personnel), you can access ISDN functions in some regions using codes.



Press the key shown.

**\*503=Keypad dialing?**

Confirm.



Enter the required trunk number (contact your service personnel).

Entering a code for required ISDN function (contact your service personnel).



Contact your network provider to find out which ISDN functions can be code-operated in your country.

Deutsche Telekom AG shall not be liable for damages/costs which may be incurred by fraudulent activities or remote operation (such as toll fraud).

## Step by Step

## Controlling connected computers/ programs/telephone data service

If this function has been configured (contact your service personnel), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

**Prerequisite:** You have set up a connection.



Press the key shown.

\*42=Tel. data service?

Confirm.

For entering data, you are guided by the connected computer. However, depending on configuration (contact your service personnel), you must activate your entries in one of the following ways:

### Inputs in en-bloc mode:



Enter data.



Complete entry.

or

Entry complete?

Confirm.

or

### Inputs in online mode:

The connected computer processes your entries directly.



Enter the code.

 


Enter data.

Step by Step

## Communicating with PC applications over a CSTA interface

 
If configured (contact your service personnel), you can use your phone to communicate with PC applications (CSTA = Computer Supported Telecommunications Applications). You send information to the application and receive information from the application, for example, via your phone display.



Enter the code.



Enter the three-digit ID for the application you wish to control.



Use the relevant keys to communicate with the application.

### Temporarily interrupting communication with the application



The phone is ringing. You answer the call.

The LED on the "Data I/O" key flashes: Communication to the application is automatically interrupted.

### Resuming communication with the application



Press the flashing "Data I/O" key. The LED lights up.

### Ending communication with the application



Select and confirm the relevant CSTA message.

or



Lift the handset and replace it again.



## Step by Step

## Controlling relays (only for Octopus F100/200/400/650)

If this function has been configured (contact your service personnel), you can use up to four relays to enable/disable different devices (such as a door opener).

Depending on how you program the relays, you can activate and deactivate them manually them or configure them to activate and deactivate automatically (after timeout).



Special features must be taken into consideration if your telephone operates with Octopus F IP-Netpackage (system networking via PC network) → Page 109!

**\*90=Control Relay On?**

or

**#90=Control Relay Off?**



Select and confirm the option shown,

select and confirm the option shown.

Enter the relay.

## Sensors (Octopus F100/200/400 only)

If configured (contact your service personnel), sensors are able to recognize signals, call your phone, and display an appropriate message on the screen.

## Step by Step

### Radio paging

If radio paging equipment (PSE) is connected to your system (contact your service personnel), you can locate people via their pocket receivers.

Pocket receivers signal a call request to the person you want to page. This person can then answer the page at the nearest phone.

#### Paging persons

To ensure that you can be found, you must have enabled a ringing group → Page 102, call forwarding → Page 32 or call forwarding-no answer (service technician) to the internal station number of your PSE.

 
A call request is signaled automatically.

#### Answering the page from the nearest telephone

Lift the handset.

Enter the code.

Enter own station number.



### Step by Step

## Making calls in the team/executive/secretary configuration

If configured (consult your service personnel), you belong to a team of subscribers with multiple lines (multi-line → Page 12). Your phone features trunk keys (MULAP keys) → Page 92.

### Lines

A distinction is made between primary and secondary lines. Each of these line types can be used on a private or shared basis → Page 91.

#### Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls are signaled on this line.

#### Secondary line

The secondary line on your phone is used as a primary line by another subscriber. Your primary line, which is configured on another telephone, simultaneously functions as the secondary line on that telephone.

### Line utilization

#### Private line

A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.

#### Shared line

A line that is configured on multiple telephones. The line status (if configured) is displayed for all telephones that share this line. If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones.

#### Direct call line

A line with a direct connection to another telephone. You can see the status of the line from the LED.

### Line seizure

Line seizure must be configured (consult your service personnel). If automatic line seizure is configured, a trunk is automatically assigned when you lift the handset or press the trunk key.

### Step by Step

## Trunk keys


 
 
The programmable sensor keys on multi-line phones function as trunk keys. Every sensor key programmed as a "Trunk key" (key label: Transfer Trk) corresponds to a trunk with the result that you can configure up to eight trunks in Octophon F615 HFA.

As a team member, you can independently program the following functions on sensor keys → Page 61:

- Direct station select
- Join/leave group  
(not available on executive phone in an executive/secretary team)
- Ring Transfer: On/Off  
(only in an executive/secretary team)

You can also program a sensor key with the function "Forward Line" (call forwarding) for each line.

### LED displays on trunk keys


LED		Explanation
	Off	- The line is in idle mode.
	Flashing <sup>[1]</sup>	- Incoming call on the line - Hold reminder is activated - The line is on "Hold".
	On	- The line is busy.

[1] In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

## Step by Step

### Answering calls with the trunk keys

**Prerequisite:** Your telephone rings or the trunk key flashes quickly.

if nec. 

Press the trunk key that is flashing quickly.  
(not necessary if "Prime Line" is active).



Lift the handset.

or

On-hook dialing: Speakerphone mode.

### Dialing with trunk keys

if nec. 

Press the free trunk key you wish to use to establish the connection  
(not necessary if "Prime Line" is active).



Dial the phone number.



If the party does not answer: Lift the handset.

or

On-hook dialing: Speakerphone mode.

### Placing a call on hold on a trunk key and retrieving the held call

 
**Prerequisite:** You are conducting a call via one of your group's trunks.  
The "Hold" key has been programmed on your telephone → Page 61.

#### Hold



Press the "Hold" key.

if nec.



or

Replace the handset or press the disconnect key.

Depending on the configuration (contact your service personnel),  
this may be necessary so other team members can also pick up the  
call on hold.

#### Retrieving the call



Press the trunk key flashing slowly.

### Step by Step

#### Making calls on multiple lines alternately

**Prerequisite:** You are conducting a call via one of your group's trunks. Another trunk key is flashing.



Press the flashing trunk key. The first call party is on hold on the other trunk.



Press the trunk key flashing slowly. The second call party is on hold.

You can switch between lines as often as you wish. Press the trunk key flashing slowly each time.

#### MULAP conference release

If configured (consult your service personnel), you can program a sensor key on your phone with the function "MULAP Privacy Release" → Page 61. The default label is "Priv Release".

If you program this key, you do not have to use the menu to set up a conference. Your team partner only has to press the flashing trunk key associated with your trunk on his or her phone to immediately join the conference.



You are conducting a call.



Press the "Priv Release" key. The LED lights up.

Up to three team members can now join the conference.

**Prerequisite:** The trunk on which you are speaking is configured on the other phone as a trunk key.



Press the flashing trunk key.

### Step by Step

#### Direct station selection key

Each team member has a direct station selection key for every other team member.

This means that each team member can be reached directly by other team members at the touch of a button.

#### Understanding LED messages from DSS keys



LED on the DSS key is off - the team member is not engaged in a phone call.

or



LED on the DSS key is lit - the team member is engaged in a phone call or has activated do not disturb.



or

LED on the DSS key is flashing **rapidly** - a call has arrived for you and needs to be answered.



or

LED on the DSS keys is flashing **slowly** - a caller is trying to reach another member of your team, who has not yet answered.

#### Using DSS keys to answer calls

**Prerequisite:** Your telephone rings or the DSS key flashes.

if nec.

Press the flashing DSS key.

This is not necessary if you are called directly (DSS key flashes quickly).



Lift the handset.

or

On-hook dialing: Speakerphone mode.

#### Calling a team member directly



Press the DSS key.

or



If the team member you wish to reach is engaged in another call, the DSS key on your telephone is lit. You can still make the call in this case.




If the party does not answer: Lift the handset.


or

On-hook dialing: Speakerphone mode.

 
### Step by Step

#### Transferring a call in progress

 Press the DSS key and announce the call if necessary.


 Replace the handset.

or

 Press the key shown.

#### Accepting a call for another team member

 Press the flashing DSS key or trunk key.

 Lift the handset.

or On-hook dialing: Speakerphone mode.



Step by Step

## Forwarding calls on trunks

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system).

Activating call forwarding for one trunk activates the function for all trunk keys assigned to this trunk in your group.



Open the Program/Service menu → Page 23.

**Forward Line: On**

Select and confirm the option shown.

or



If available, press the "CFW MULAP" key.  
(You have programmed a key with the incomplete "CFW MULAP" function, excluding the call forwarding type and destination → Page 61.)



Press the required trunk key.

or



Enter the required trunk number.

**1=all calls**

Select and confirm the option shown,

or

**2=external calls only**

select and confirm the option shown,

or

**3=internal calls only**

select and confirm the option shown.



Enter the destination number.

**Save**

Confirm.

or



If available, press the "CFW MULAP" key. (You have stored the call forwarding type and destination on the "CFW MULAP" key, → Page 61.)

### Step by Step


or



or



### Deactivating call forwarding

Open the Program/Service menu → Page 23.

Select and confirm the option shown.

Press the required trunk key.

Enter the required trunk number.

If available, press the "CFW MULAP" key.



---

If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.

---

### Understanding LED messages of the "CFW MULAP" key



The LED on the "CFW MULAP" key is off - call forwarding is not active for this trunk.

or



The LED on the "CFW MULAP" key lights up - call forwarding is active for this trunk.

or



The LED on the "CFW MULAP" key flashes **slowly** - the trunk is the destination of call forwarding.

Step by Step

## Transferring calls directly to the executive phone

Normally, all calls for the executive are audibly signaled only by the secretary phone.

You can set audible signaling so calls are signaled only by the executive phone or by a second phone assigned to it.

**Prerequisite:** On your phone there is a sensor key programmed with the function "Ring Transfer". The default label is "Ring xfer".

### Activating


 Press the "Ring xfer" key. The LED lights up.

or


 Open the Program/Service menu → Page 23.

Ring Transfer: On

Select and confirm the option shown.

 Press the required trunk key.

or

 Enter the required trunk number.

### Deactivating


 Press the "Ring xfer" key. The LED goes out.

or


 Open the Program/Service menu → Page 23.

Ring Transfer: Off

Select and confirm the option shown.

 Press the required trunk key.

or

 Enter the required trunk number.

Step by Step

## Using team functions

If configured (consult your service personnel), your telephone is part of a team. The team consists of internal phones that are able to use certain functions.

### Activating/deactivating a group call



Special features must be taken into consideration if your telephone operates with Octopus F IP-Netpackage (system networking via PC network) → Page 105!

If configured (consult your service personnel), you belong to one or more groups of stations, which can be reached via hunt group or group call station numbers.

Incoming calls are signaled one after the other (= hunt group) or simultaneously (= group call) on all phones in the group, until a group member answers the call.

Each station in the group can still be reached via their personal station number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group.

#### You are part of a hunt group or call group



Open the idle menu → Page 20.

Leave group?

Select and confirm the option shown<sup>[1]</sup>,

or

Join group?

select and confirm the option shown.



Press the "Hunt group".



Open the idle menu → Page 20.

Leave group?

Select and confirm the option shown<sup>[1]</sup>,

or

Join group?

select and confirm the option shown.



Press the "Hunt group".

301 X Group name

If an "X" appears between group/trunk number (such as 301) and group name, the audible tone is active for this group or trunk.

[1] "Differing display view in a Octopus F900 environment" → Page 115

## Step by Step

or

**301 Group name**

No "X" means that the audible tone is deactivated.

**Next?**

Confirm. The next group/trunk number is displayed with a group name.

or

**Leave group?**Select and confirm the option shown<sup>[1]</sup>.

The audible tone for the group/trunk displayed is deactivated.

or

**Join group?**Select and confirm the option shown<sup>[1]</sup>.

The audible tone for the group/trunk displayed is activated.

or

**#=Leave all groups**

Select and confirm the option shown.

The audible tone for all groups and trunks is deactivated.

or

**\*=Rejoin all groups**

Select and confirm the option shown.

The audible tone for all groups and trunks is activated.



If you have activated the audible tone for another group/trunk or deactivated the audible tone for all groups/trunks you belong to, you will hear a special dial tone when you lift the handset.

[1] "Differing display view in a Octopus F900 environment" → Page 115

### Step by Step

## Accepting a call for another member of your team

You can use your own telephone to accept calls for other telephones in your team, even while on a call (call pickup groups; contact your service personnel).

**Prerequisite:** Your telephone rings briefly. "Call for:" appears on the upper display line with the station number or name of the originator; the station number or name of the caller appears on the lower line.

Pickup - group?

Confirm.

## Ringling group

You can have calls for your telephone signaled audibly at up to five other internal phones. The phone that answers the call first receives the call.



Special features must be taken into consideration if your telephone operates with Octopus F IP-Netpackage (system networking via PC network) → Page 108!

## Saving, displaying, and deleting telephones for the ringing group



Press the key shown.

\*81=Ringling group on?

Select and confirm the option shown.

Follow the display prompts (enter the internal station number).



If your phone belongs to a ringing group, your display will show the station number or the name of the originator on the upper line and that of the caller on the lower line.

Ringling group off?

Select and confirm the option shown.

## Step by Step

## Uniform Call Distribution (UCD)

If configured (consult your service personnel), you may belong to a group of stations (agents), to which calls are distributed. An incoming call is always assigned to the agent idle the longest.

**Logging on and off at the beginning and end of your shift**

Press the key shown.

UCD?

Select and confirm the option shown.

\*401=Log on?

Confirm,

or

#401=Log off?

select and confirm the option shown.



To log on, enter your identification number ("Agent:"). Contact your service personnel to find out what it is.

**Logging on and off during your shift**

Press the key shown.

UCD?↕

Select and confirm the option shown.

#402=Not available?

Confirm.

or

\*402=Available?

select and confirm the option shown.

### Step by Step



UCD?

#### Requesting and activating a work time

You can request/activate work time to ensure you have enough time to wrap up the last call. Your phone is excluded from call distribution for a set period or until you log back on.

Press the key shown.

Select and confirm the option shown.

\*403=Work on?

Confirm.

or

#403=Work off?

select and confirm the option shown.



UCD?

Press the key shown.

Select and confirm the option shown.

\*404=UCD night on?

Confirm.

or

#404=UCD night off?

select and confirm the option shown.



UCD?

#### Display the number of waiting calls

Press the key shown.

Select and confirm the option shown.

\*405=Calls in queue?

Confirm.




## Step by Step

## Special functions in the LAN

If your telephone is operating in a Octopus F IP-Netpackage environment, multiple Octopus F270 IT/Octopus F100/200/400/650 systems are interconnected via a LAN (Local Area Network, such as a proprietary PC network). You are conducting a call via the LAN (PC network).

In this instance, you must note certain particularities for some functions. These are described in this section.

 Octopus F470 UC can not be operated in a Octopus F IP-Netpackage environment.

## Leaving hunt group/group call

**Prerequisite:** You are part of a hunt group/group call → Page 100 in another Octopus F270 IT/Octopus F100/200/400/650:

Open the idle menu → Page 20.

Select and confirm the option shown.

Enter the (DISA) number of the other Octopus F270 IT/Octopus F100/200/400/650.

Confirm your entry.

Enter the (DISA) station number of your phone.

Confirm your entry.

Select and confirm the option shown,

or

select and confirm the option shown.

**You belong to multiple groups associated with another Octopus F270 IT/Octopus F100/200/400/650**

Enter group number for "directed joining/leaving".

DISA intern?

OK or #

OK or #

Leave group?

Join group?

## Step by Step

### Setting up "follow me" call forwarding

You can activate/deactivate call forwarding Octopus F IP-Netpackage for your phone from other phones in the → Page 32 environment.



Open the idle menu → Page 20.

DISA intern?

Select and confirm the option shown.



(DISA) number of the Octopus F270 IT/Octopus F100/200/400/650.

OK or #

Confirm your entry.



Enter the (DISA) station number of your phone.

OK or #

Confirm your entry.



Open the idle menu → Page 20.

Forwarding on?

Select and confirm the option shown.

1=all calls?

Confirm,

or

2=external calls only?

select and confirm the option shown,

or

3=internal calls only?

select and confirm the option shown.



Enter the destination phone number.

Save?

Confirm.



Open the idle menu → Page 20.

Forwarding off?

Select and confirm the option shown.

#### Activating

#### Deactivating

## Step by Step

## Using night answer

If authorized (contact your service personnel), you can set telephones in other Octopus F270 IT/Octopus F100/200/400/650 communications platforms as the night answer → Page 60.



Open the idle menu → Page 20.

**DISA intern?**

Select and confirm the option shown.



Enter the (DISA) number of the other Octopus F270 IT/Octopus F100/200/400/650.

OK or #

Confirm your entry.



Enter the (DISA) station number of your phone.

OK or #

Confirm your entry.

## Activating



Open the idle menu → Page 20.

**Night answer on?**

Select and confirm the option shown.



Enter the destination number (= temporary night answer service).

**Save?**

Confirm.

## Deactivating



Open the idle menu → Page 20.

**Night answer off?**

Select and confirm the option shown.

## Step by Step

### Ringling group

You can have calls for your telephone signaled audibly at external telephones or at telephones in other Octopus F270 IT/ Octopus F100/200/400/650 communications platforms  
→ Page 102.

#### Saving, displaying, and deleting telephones for the ringing group



Press the key shown.

\*81=Ringling group on?

Select and confirm the option shown.

Add to ringling group?

Select and confirm the option shown,

or

Add another station?

select and confirm the option shown,

or

Display/remove?

select and confirm, then follow the operating instructions.



Enter the station number.

#=Entry complete?

Confirm.

Save?

Confirm.

Exit?

Select and confirm the option shown.



Open the idle menu → Page 20.

Ringling group off?

Select and confirm the option shown.

#### Removing all telephones in a call ringling group

## Step by Step

## Controlling relays (only for Octopus F100/200/400/650)

If this feature is configured (contact your service personnel), you can also control relays → Page 89 in other Octopus F100/200/400/650 communications platforms.



Open the idle menu → Page 20.

DISA intern?

Select and confirm the option shown.



Enter the (DISA) station number of the Octopus F100/200/400/650 where you wish to control the relay.

OK or #

Confirm your entry.



Enter the (DISA) station number of the phone you wish to use to control the relay.

OK or #

Confirm your entry.

\*90=Control Relay On?

Confirm,

or

#90=Control Relay Off?

select and confirm the option shown.

1 ... 4ghi

Enter the relay.

## Step by Step

### Opening a door

If configured (contact your service personnel), you can also activate the door opener → Page 40 in other Octopus F270 IT/Octopus F100/200/400/650 communications platforms.

Open the idle menu → Page 20.

Select and confirm the option shown.

DISA intern?



Enter the (DISA) number of the Octopus F270 IT/Octopus F100/200/400/650 where you wish to control the door opener.

OK or #

Confirm your entry.



Enter the (DISA) station number of the phone you wish to use to control the door opener.

OK or #

Confirm your entry.

Open door?

Select and confirm the option shown.



Dial the entrance telephone number.

## Step by Step

## Individual phone configuration

## Setting contrast

The display has four contrast levels that you can set according to your light conditions.

or

Press one of the keys shown in idle mode.

**Display contrast?**

Select and confirm the option shown.

or

Change the display contrast. Press the key repeatedly until the desired level is obtained.

Save.

### Step by Step

## Adjusting audio settings

Optimize the audio settings on your Octophon F615 HFA for your work environment and according to your personal requirements.

## Adjusting the receiving volume during a call

You are conducting a call.

or

Raise or lower the volume. Keep pressing the key until the desired volume is set.

Save.

## Adjusting the ring volume

or

Press one of the keys shown in idle mode → Page 20.

Ring volume?

Confirm.

or

Raise or lower the volume. Keep pressing the key until the desired volume is set.

Save.

## Adjusting the ring tone

or

Press one of the keys shown in idle mode → Page 20.

Ring tone?

Select and confirm the option shown.

or

To adjust the ring tone: Keep pressing the keys until the desired tone is set.

Save.

## Adjusting the attention ring volume

If you are part of a team with trunk keys, other calls can be signaled acoustically in the team during a call. You will hear the attention ring.

or

Press one of the keys shown in idle mode → Page 20.

Attention Ring Vol.

Select and confirm the option shown.

or

Raise or lower the volume. Keep pressing the key until the desired volume is set.

Save.



## Step by Step

or

**Speakerphone mode?**

or

**More features?↕**

**\*48= Select language?**

**15=Spanish?**

## Adjusting the speakerphone to the room acoustics

To help the other party understand you clearly while you are talking into the microphone, you can adjust the telephone to the acoustics in your environment: "Quiet room," "Normal room" and "Noisy room."

Press one of the keys shown in idle mode → Page 20.

Select and confirm the option shown.

To set the room type: Keep pressing these keys until the setting you want appears on the screen.

Save.

## Turn ringtone on/off

Hold down the key shown.

## Language for system functions

Press the key shown.

Select and confirm the option shown.

Select and confirm the option shown.

Select the language you wish to use (such as "Spanish") and press the "OK" dialog key to confirm.

## Step by Step

### Testing the phone

#### Phone functions, testing

You can test your phone's functionality.

**Prerequisite:** The phone is in idle mode.



Press the key shown.

More features?↕

Select and confirm the option shown.

\*940=Phone test?

Select and confirm the option shown.

If everything is functioning correctly:

- all LEDs on the phone flash (only the menu key LED is continuously lit)
- your station number is displayed,
- all pixels are active on the display,
- the ring tone is audible

#### Checking the key assignment

You can check key assignment on your phone to determine which functions are assigned to which keys.



Open the Program/Service menu → Page 23.

Prog. feature key

Select and confirm the option shown.



Press any key. The key assignment is displayed.

Exit

Select and confirm the option shown.

## Differing display view in a Octopus F900 environment

Depending on the system configuration, some functions may not always be offered in the display as described in this document.

In addition, display texts may differ from those described in this document according to the system configuration.

The following table provides an overview:

Octopus F270 IT/ Octopus F100/200/400/650 Octopus F470 UC display	Octopus F900 display	Description
Program/Service	Service menu?	→ Page 23
Transfer	Transfer?	→ Page 31
View callbacks	Show callback destinations?	→ Page 37
Caller list	Call list/log?	→ Page 43
Use speed dialing	Use speed dialing?	→ Page 47
Change Speed Dial	Speed dial?	
Call wait.term.	Second call release?	→ Page 52
Call wait.trm.off	Second call on/off	
Ringer cutoff on/off	Ringer cutoff on/off?	→ Page 70
Join/leave group	Hunt group on/off?	→ Page 100

### Step by Step

Invalid entry

## Fixing problems

### Responding to error messages

**Possible causes:**

Station number is incorrect.

**Possible reaction:**

Enter correct station number.

Not authorized

**Possible cause:**

Locked function selected.

**Possible reaction:**

Apply to service personnel for authorization for relevant function.

Currently not possible

**Possible causes:**

Dialed a non-existent station number. Called phone is unplugged.

**Possible reactions:**

Enter correct station number. Call this station again later.

Invalid station number

**Possible cause:**

Dialed your own station number.

**Possible reactions:**

Enter correct station number.

### Contact partner in the case of problems

Contact your service personnel if a fault persists for more than five minutes, for example.

## Step by Step

## Troubleshooting

**Pressed key does not respond:**

Check if the key is stuck.

**Telephone does not ring:**

Check whether the "Do not disturb" function is activated on your telephone (→ Page 71). If so, deactivate it.

**You cannot dial an external number:**

Check whether your telephone is locked.

If the phone is locked, enter your PIN to unlock it → Page 73.

**To correct any other problems:**

First contact the relevant service personnel. If the service personnel are unable to correct the problem, they must contact Customer Service.

## Caring for your telephone

- Never allow the telephone to come into contact with coloring, oily or aggressive agents.
- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use aggressive or alcohol-based cleansers on plastic parts. The use of scouring agents is also forbidden.

### Labeling keys

You can chose from the following options to label the keys with the functions/call numbers saved (→ Page 13, → Page 61):

#### Labeling

- by hand:  
Labeling strips are delivered with your Octophon F615 HFA and key module. Write the function or a name on the matching strips within the white field and attach them to your Octophon.
- with a computer:  
You have avail of a CD Rom (ask your service personnel) with the electronic operating instructions for your platform → Page 3. You can label your keypads for each PC.

Put the labeled strips in the relevant key pad on your Octophon and place the transparent cover over them (mat page above).

# Index

## A

Accept (Call) .....	38, 102
Account code .....	68
Activating door opener .....	40
Advisory message .....	79
deleting .....	79
Agents .....	103
Alternating .....	30
Announcement .....	48
Answer timed reminder .....	77
Answering machine .....	83
Assigning DID number .....	50
Associated dialing/dialing aid .....	50
Associated service .....	84
Attention ring volume .....	112
Audio keys .....	17
Automatic call waiting .....	
preventing and allowing .....	52
Automatic connection setup .....	49
Automatic line seizure .....	27

## B

Busy override .....	59
---------------------	----

## C

Call	
accepting .....	24
accepting in a team .....	96
accepting, directed .....	38
accepting, group .....	102
answering .....	24
distributing .....	103
entrance telephone .....	40
forwarding .....	32
forwarding in a team .....	97
forwarding MSN in CO .....	35
holding .....	54
in a team with trunk keys .....	93
parking .....	53
rejecting .....	29
retrieving from park .....	53, 54
transfer after announcement .....	58
transferring .....	31, 96
using DSS keys in a team .....	95
Call charge assignment .....	68
Call charges	
for another phone .....	66
for your phone .....	66
Call duration .....	66
Call forwarding .....	32
in the event of telephone failure .....	34
MSN in CO .....	35
Call log .....	22
Call request .....	22
Call signal .....	24
Call volume .....	24, 112
Call waiting .....	59
accepting .....	51
tone off .....	52
Call waiting tone on/off .....	52
Callback .....	36
Caller ID suppression .....	71
Caller list, using .....	43
Calling a second party .....	30
Calls in queue .....	80, 103
CE marking .....	2
Central speed dial .....	47
Central telephone lock .....	74
CFNR .....	33
Charges	
for another phone .....	66
for your phone .....	66
Checking the key assignment .....	114
Code dialing in ISDN .....	86
Conference .....	30
Connection options .....	14
Connection setup	
automatic .....	49
Consultation .....	30
Control relays .....	89
CSTA .....	88

**D**

Details, fax .....	83
Dial	
with en-bloc dialing .....	42
Dialing	
from the caller list .....	43
from the internal directory .....	44
from the LDAP database .....	45
internal/external calls .....	27
on-hook dialing .....	27
using DDS keys .....	27
using redial .....	28
using speed dial .....	47
with the dialing aid .....	50
Dialing aid	
S0 bus .....	50
Dialing internal calls .....	27
Differences .....	11
Direct Inward System Access .....	85
Direct station select .....	62, 95
DISA .....	85
Discreet calling .....	49
Display contrast .....	111
Display view for	
Octopus F900 environment .....	115
Distributing calls .....	103
Do not disturb .....	71
Door release .....	41
DTMF suffix dialing (tone dialing) .....	57

**E**

Editing a dialed number .....	42
Editing number .....	42
En-bloc dialing .....	42
Encrypted call .....	69
Entrance telephone .....	40
External code .....	27

**F**

Fax details .....	83
Forwarding .....	32
multiple subscriber numbers (MSN) .....	35
Forwarding MSN in CO .....	35
Forwarding multiple subscriber numbers (MSN) ..	35
Function key	
programmable .....	18
Functions	
for another phone on/off .....	84
programming a key .....	61
resetting .....	83
using from the outside .....	85

**G**

General information .....	10
Group call .....	100

**H**

Handsfree answerback .....	39
off .....	39
on .....	39
Hold .....	54
Hotline .....	49
Hotline delayed .....	49
Hunt group .....	100

**I**

Important information .....	3
Incoming calls .....	22
Individual speed dial .....	47
Internal directory .....	44
IP telephony .....	105



**K**

Key module .....	16
key module for Octophon F615 HFA .....	16
Keypad .....	19
Keypad dialing .....	86
Keys	
programming .....	61
save incomplete .....	61

**L**

LAN telephony .....	105
LDAP directory .....	45
Leaving an advisory message .....	79
LED	
trunk keys .....	92
LED display	
direct station selection keys .....	18
function keys .....	18
LED messages, understanding .....	62, 95, 98
Line seizure, automatic .....	27
Line utilization .....	91
Location of the telephone .....	3
Locking/unlocking .....	73
Loudspeaker .....	25

**M**

Mailbox key .....	13, 17
Making external calls .....	27
Making mobile calls .....	80
Making trunk calls .....	27
Menu key .....	13, 17
Message	
answering .....	78
receiving .....	78
Message(text)	
deleting/viewing .....	77
sending .....	77
MULAP conference release .....	94
MULAP keys, trunk keys .....	91
Multi-line telephone .....	12

**N**

Name plate .....	11
Navigation keys .....	17
Night answer .....	60
Number	
assigning .....	50
correcting .....	42
deactivating display .....	71
saving .....	65
suppressing .....	71

**O**

Octophon F615	
speakerphone mode .....	25, 26
notes .....	3, 11, 25
set room character .....	113
Octopus F IP-Netpackage	
"follow me" call forwarding .....	106
group call .....	105
hunt group .....	105
night answer .....	107
opening a door .....	110
relays .....	109
ringing group .....	108
Open door .....	40
with code .....	40
Open listening .....	26
Operating instructions .....	2
Operating steps	
programming a key .....	64
Operational elements .....	13
Outgoing calls .....	22
Overload .....	80

## P

Parking a call .....	53
Personal identification number .....	75
Phone	
locking another phone .....	74
locking/unlocking centrally .....	74
testing .....	114
using another phone like your own .....	80
Phone functions, testing .....	114
Phone settings .....	111
PIN .....	75
for a telephone .....	73
Placing a call on hold	
in the team .....	93
Primary line .....	91
Private line .....	91
Procedure	
programming a key .....	64
Product designation .....	11
Product variants .....	11
Program/Service menu .....	23
Programmable function key .....	18
Programming free keys .....	61
Programming your telephone .....	111
Project calls .....	68

## R

Radio paging equipment (PSE) .....	90
Recall .....	58
Receiving volume .....	24, 112
Redialing a number .....	28
from the caller list .....	43
Relays .....	89
Resetting functions .....	83
Resetting services .....	83
Ring tone .....	112
Ring transfer	
in an executive/secretary team .....	99
Ring volume .....	112
Ringer cutoff .....	70
Ring group .....	102
Room monitor .....	72

## S

Safety precautions .....	2
Save PIN .....	75
Second call	
accepting .....	51
allowing .....	52
preventing .....	52
Second level .....	27
Secondary line .....	91
Secure call .....	11, 69
connection status .....	70
encrypted call .....	69
information .....	70
unencrypted call .....	69
Secure connection .....	11, 69
Sensors .....	89
Serial number .....	11
Settings .....	111
Settings on your telephone .....	111
Shared line .....	91
Shift .....	27
Shift key .....	27
Single-line telephone .....	12
Speaker call .....	48
Speakerphone mode	
function .....	25, 26
information .....	3, 11, 25
notes .....	3, 11, 25
set room character .....	113
setting the volume .....	113
speakerphone distance .....	3
Special dial tone .....	71
Speed dial	
central .....	47
dialing .....	47
save individually .....	47
Speed-dialing	
suffix-dialing .....	47
Suffix-dialing	
automatic .....	47
DTMF tone dialing .....	57
System-wide cancellation .....	83

**T**

Tel. data service .....	87
Telephone	
locking .....	73
locking/unlocking .....	73
settings .....	111
Telephone lock	
central .....	74
Telephone maintenance .....	117
Telephone test .....	114
Temporary Phone .....	80
Testing the telephone .....	114
Text	
answering .....	78
receiving .....	78
Three-party conference .....	30
Timed reminder .....	76
Toggle/connect	
in the team .....	94
Tone dialing .....	57
Trace call .....	72
Transfer (call) .....	31, 96
after announcement .....	58
Troubleshooting .....	117
Trunk keys .....	92

**U**

UCD .....	103
Unanswered calls .....	22
Unencrypted call .....	69, 70
Unsecured connection .....	11, 69
User support .....	10
Using Ethernet switches .....	15
Using network ports more efficiently .....	15

**V**





 
Variable call forwarding .....	32
Voice encryption .....	11, 69
connection status .....	70
encrypted call .....	69
information .....	70
unencrypted call .....	69
Volume	
keys .....	17

 

**W**

Waiting calls .....	80
Work time .....	104



 


## Overview of functions and codes



 


The following table lists all available functions, as shown on the display. If configured (contact your service personnel), functions can be activated interactively (select and confirm) via the Program/Service menu (select and confirm or enter a code).

Functions (=display)	... Interactively	... Via the Program/Service menu	Code
	 	   → Page 23	
Account code		✓	*60
Advisory msg. on	✓	✓	*69
Advisory msg. off	✓	✓	#69
Associated dial		✓	*67
Associated serv.		✓	*83
Call waiting	✓	✓	*55
Waiting tone off	✓	✓	*87
Waiting tone on	✓	✓	#87
Call wait.term.on		✓	*490
Call wait.trm.off		✓	#490
Callback	✓	✓	*58
View callbacks/Delete	✓	✓	#58
Caller list	✓	✓	#82
Save number	✓	✓	*82
Conference	✓	✓	*3
Start conference	✓		
Add party	✓		
End conference	✓	✓	#3
View conf parties	✓	✓	
Remove party	✓	✓	
Drop last conf. party			*491
Consultation	✓		
Return to held call	✓	✓	*0
Quit and return	✓	✓	*0
Transfer/Accept call	✓		
Data I/O Service			*494

Functions (=display)	... Interactively	... Via the Program/Service menu	Code
	 	 → Page 23  	
Directory			
1=internal	✓		*54
2=LDAP	✓		*54
DISA			
DISA intern	✓	✓	*47
Discreet Call			*945
DND on	✓	✓	*97
DND off	✓	✓	#97
Door opener on		✓	*89
Door opener off		✓	#89
DTMF dialing		✓	*53
En-bloc dialing			
Dial	✓		
Forwarding on	✓	✓	*1
1=all calls	✓	✓	*11
2=external calls only	✓	✓	*12
3=internal calls only	✓	✓	*13
Forwarding off	✓	✓	#1
CFNR on		✓	*495
CFNR off		✓	#495
Trunk FWD on	✓	✓	*64
Trunk FWD off	✓	✓	#64
HF answerback on	✓	✓	*96
HF answerback off	✓	✓	#96
Hotline			
Join group	✓	✓	*85
Leave group	✓	✓	#85
In hunt group	✓	✓	*85*
Out of hunt group	✓	✓	#85#
Keypad dialing		✓	*503
Lock all phones		✓	*943

## Overview of functions and codes

Functions (=display)	... Interactively	... Via the Program/Service menu	Code
	 	 → Page 23  	
Lock phone	✓	✓	*66
Unlock phone	✓	✓	#66
Change PIN		✓	*93
Mute on		✓	*52
Mute off		✓	#52
Night answer on	✓	✓	*44
Night answer off	✓	✓	#44
Open door		✓	*61
Override	✓	✓	*62
Page			
Answer page		✓	*59
Park a call		✓	*56
Retrieve call		✓	#56
Phone test		✓	*940
Pickup - directed		✓	*59
Pickup - group	✓	✓	*57
Accept call	✓		
Redial	✓		
Rejecting calls	✓		
Release			
Reset services		✓	#0
Ringer cutoff on	✓	✓	*98
Ringer cutoff off	✓	✓	#98
Ringin group on		✓	*81
Ringin group off		✓	#81
Room monitor		✓	*88
Select language		✓	*48
Send message	✓	✓	*68
View sent message	✓	✓	#68
View messages	✓	✓	#68
Mailbox			
Show call charges (own phone)		✓	*65

Functions (=display)	... Interactively	... Via the Program/Service menu	Code
	 	 → Page 23  	
Speaker call		✓	*80
Suppress call ID	✓	✓	*86
Restore caller ID	✓	✓	#86
Tel. data service			*42
Temporary MSN	✓	✓	*41
Temporary Phone		✓	*508
Timed reminder on		✓	*46
Timed reminder off		✓	#46
Toggle/Connect	✓	✓	*2
Trace call		✓	*84
Transfer	✓		
Trunk flash		✓	*51
UCD			
Log on		✓	*401
Log off		✓	#401
Available		✓	*402
Not available		✓	#402
Work on		✓	*403
Work off		✓	#403
UCD night on		✓	*404
UCD night off		✓	#404
Calls in queue		✓	*405
Use speed dialing		✓	*7
Change Speed Dial? (station)		✓	*92

---

**Important telephone numbers**

---

For problems:

---

---

For questions regarding sales:

---

---

Upon delivery of the equipment, please enter  
telephone numbers!

---

Issued by:  
Deutsche Telekom AG

Right of modification reserved.  
Reference number: A31003-T9000-U116-1-7619  
SW version: 7.0  
Status: 11/2009

Printed on environmentally compatible  
recycled paper.