


Octopus F100/200/400/650

IP-Netpackage

Octophon F660/680 TDM

key module for Octophon F660/680

Operating Instructions



Important information



For safety reasons, the telephone should only be supplied with power:

- using the original power supply unit.
Part number: L30250-F600-C14x (x: 1=EU, 2=UK, 3=US).



Never open the telephone or a key module. Should you encounter any problems, contact the responsible service personnel.

Use only original accessories. The use of other accessories may be hazardous and will render the warranty, extended manufacturer's liability and the CE marking invalid.

Trademarks



The device conforms to the EU directive 1999/5/EC as attested by the CE marking.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

Proper disposal and separate collection of your old appliance will help prevent potential damage to the environment and human health. It is a prerequisite for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.

The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the directive 2002/96/EC. Countries outside the European Union may impose other regulations regarding the disposal of electrical and electronic equipment.

Location of the telephone

- The telephone should be operated in a controlled environment with an ambient temperature between 5°C and 40°C.
- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the plastic casing.
- Do not operate the telephone in damp environments such as bathrooms.

Software update



During a software update, the phone must not be disconnected from the power supply unit or the phone line.

An update action is indicated by messages on the display and/or by flashing LEDs.

Documentation

These operating instructions can be found on CD-ROM (ask the service personnel) in HTML and PDF format.

To view or print the operating manual in PDF format, you need a computer on which the free Adobe Acrobat Reader program is installed.

To view the operating manual in HTML format, you need a computer with a Web browser, for example, Microsoft Internet Explorer.

Contents

Important information 2

Trademarks	2
Location of the telephone	3
Software update	3
Documentation	3

General information 11

About this manual	11
Service	11
Intended use	12
Telephone type	12
Speakerphone quality and display legibility	12
Multi-line telephone, executive/secretary functions	12
Team functions	12

Getting to know your Octophon F660/680 phone . . . 13

The user interface of your Octophon F660/680 TDM	13
Ports on the underside of the phone	14
OpenStage Manager	15
Features	15
key module for Octophon F660/680	16
Keys and controls	17
Function keys	17
Audio controls	17
Mode keys	18
TouchGuide	19
Programmable sensor keys	21
Keypad	23
Graphic display	24
Appearance	24
Display keyboard	25
Context-dependent displays	27
Idle mode	27
Telephony dialogs	28
Messages	28
Context menus	29
Pop-up window	29
Application tab	30

Applications available on your Octophon F660/680 phone 31

Application navigation	31
Telephony interface.....	32
Phonebooks	33
Personal phonebook.....	34
LDAP directory.....	35
System phonebook	35
Call lists	36
Managing call lists.....	36
Entry details.....	37
Mailbox.....	38
Messages.....	38
Voicemail.....	38
Menu	39
Settings – Service Menu.....	39
Settings – telephone user menu.....	39
Settings – administration	40
Help function	41

Basic functions 42

Answering a call	42
Answering a call via the handset	42
Answering a call via the loudspeaker (speakerphone mode).....	43
Accepting a call via the headset.....	43
Switching to speakerphone mode	44
Switching to the handset	44
Open listening	44
Making calls	45
Off-hook dialing	45
En-bloc dialing	45
On-hook dialing	46
Dialing with the headset connected.....	46
Dialing with DDS keys.....	46
Ending a call	47
Rejecting a call	47
Turning the microphone on and off.....	47
Calling a second party (consultation)	48
Switching to the held party (alternating).....	48
Transferring a call	48
Using callback	49
Storing a callback	49
Accepting a callback.....	49
Viewing and deleting a stored callback	50

Enhanced phone functions	51
Answering calls	51
Accepting a call via the headset	51
Answering a call for another phone	51
Using the speakerphone	52
Answering calls from the entrance telephone and opening the door	53
Accepting a call from an answering machine	54
Making calls	55
Redialing from a call list	55
Using a personal phonebook	55
Using a system phonebook	56
Using the LDAP directory	57
Making calls using system speed-dial numbers	57
Dialing with speed-dial keys	58
Talking to your colleague with a speaker call	59
Talking to your colleague with discreet calling	59
Automatic connection setup/hotline	59
Reserving a trunk	60
Assigning a station number	60
Associated dialing/dialing aid	61
During a call	62
Using call waiting (second call)	62
Preventing and allowing a second call (call waiting)	63
Activating/deactivating the camp-on tone	63
Parking a call	64
Placing an external call on hold	65
Conducting a conference	66
Activating tone dialing/DTMF suffix-dialing	68
Recording a call	68
Transferring a call after a speaker call announcement in a group	69
Sending a trunk flash	70
If you cannot reach a destination	71
Call waiting (camp-on)	71
Busy override – joining a call in progress	71
Using night answer	72
 Call forwarding	 73
Active call forwarding indication	73
Overview of call forwarding types	74
Call forwarding key	74
Editing call forwarding instructions	74
Editing forwarding destinations	75
Forwarding express activation for "all calls"	77
Activating call forwarding via the Program/Service menu	77
Configuration via the Program/Service menu	77

Deactivating call forwarding	78
Using system forwarding instructions	79
Call forwarding no reply (CFNR)	79
Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN)	80

Programming sensor keys 81

Configuring function keys	81
Overview of functions	82
Programming a procedure key	84
Configuring redial keys	86
Changing the label	87
Deleting sensor key programming	88

Phonebooks and call lists 89

Personal phonebook	89
Creating a new contact	89
Changing contact data	91
Managing the phonebook	92
Managing groups	93
LDAP database	95
Finding an LDAP entry	95
Call lists	97
View details	97
Deleting entries	97
Copying entries from the call logs into the personal phonebook	98

Displaying and assigning call charges 99

Displaying call charges	99
Displaying call charges for another telephone	100
Dialing with call charge assignment	101

Privacy/security 102

User password	102
Turning ringer cutoff on and off	103
Deactivating the ring tone	103
Do not disturb	104
Suppressing your phone number on the called party's phone	104
Silent Monitor	105
Monitoring a room	105
Trace call: identifying anonymous callers	106
Locking the telephone to prevent unauthorized use	107
Locking another telephone to prevent unauthorized use	108
Saving your PIN	109

More functions/services 110

- Appointments function. 110
 - Saving appointments 110
 - Using timed reminders. 111
- Sending a message 112
 - Creating and sending a message 112
 - Viewing and editing incoming messages 113
- Leaving an advisory message. 114
 - Deleting advisory messages 114
- Displaying the number of waiting calls/overload display 115
- Using another telephone like your own for a call 115
- Change number (exchanged phone/move/relocate) 116
- Fax details and message on answering machine. 117
- Resetting services and functions (system-wide cancellation for a telephone) 117
- Activating functions for another telephone 118
- Using system functions from outside DISA (direct inward system access) 119
- Using functions in ISDN via code dialing (keypad dialing) 121
- Controlling Connected Computer or Their Programs/Tel. Data Service. 122
- Communicating with PC applications over a CSTA interface 123
- Controlling relays (only for Octopus F100/200/400/650) 124
- Sensors (Octopus F100/200/400 only) 124
- Paging persons 125

**Making calls in the team/executive/
secretary configuration. 126**

- Lines 126
 - Line utilization 126
 - Line seizure 126
- Trunk keys 127
 - Answering calls with the trunk keys 128
 - Dialing with trunk keys 128
 - Placing a call on hold on a trunk key and retrieving the held call 128
 - Making calls on multiple lines alternately 129
 - MULAP conference release 129
- Direct station selection key 130
 - Using DSS keys to answer calls 130
 - Calling a team member directly 130
 - Transferring a call in progress 131
 - Accepting a call for another team member 131
- Forwarding calls on trunks 132
- Transferring calls directly to the executive phone 134

Using team functions	135
Activating/deactivating a group call	135
Accepting a call for another member of your team	137
Ringing group	137
Uniform Call Distribution (UCD)	138
Special functions in the LAN	140
Leaving hunt group/group call	140
Setting up "follow me" call forwarding	141
Using night answer	142
Ringing group	143
Controlling relays (only for Octopus F100/200/400/650)	144
Opening a door	145
Individual phone configuration	146
Adjusting display settings	146
Adjusting the display to a comfortable reading angle	146
Screensaver	146
Color scheme	149
Lamp brightness for TouchSlider	150
Set the sensitivity of the TouchGuide	151
Contrast for the key module for Octophon F660/680	152
Adjusting audio settings	153
Volumes	153
Room character	154
Setting headset port use	155
Ringtone	156
Activating/deactivating the ringer	156
Adjusting the volume during a call	156
En-bloc dialing	157
Language for system functions	157
Configuring Bluetooth	158
Bluetooth settings	158
Connecting/disconnecting a Bluetooth device	160
Managing Bluetooth devices	161
Context menu	164
Closing automatically	164
Setting the automatic display duration	165
Resetting user data	166
Phone test	167

Bluetooth	168
Discoverability	168
Linking	168
Transferring contacts	169
Receiving a vCard	169
Sending a vCard	170
Using a Bluetooth headset	171
Testing a Bluetooth headset	171
Data backup to USB memory stick	172
Backing up user data	173
Restoring user data	174
Restoring all user data	174
Restoring selected user data	175
Checking backups	176
Deleting backups	176
Differing display view in a Octopus F900 environment	177
Fixing problems	178
Responding to error messages on the screen	178
Contact partner in the case of problems	179
Troubleshooting	180
Caring for your telephone	180
Index	181
Overview of functions and codes	185
Display icons	190

General information

About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The respective features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you, this may be due to one of the following reasons:

- The function is not configured for you or your telephone. Please contact your system support representative.
- Your communications platform does not feature this function. Please contact your service personnel for information on how to upgrade.

This user guide is intended to help you familiarize yourself with Octophon F660/680 TDM and all of its functions. It contains important information on the safe and proper operation of your Octophon F660/680 TDM phone. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

These instructions should be read and followed by every person installing, operating or programming an Octophon F660/680 TDM phone.



For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

This user guide is designed to be simple and easy to understand, providing clear step-by-step instructions for operating your Octophon F660/680 TDM phone.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

Service



The service department can only help you if you experience problems or defects with the phone.

Should you have any questions regarding operation, your specialist retailer or network administrator will gladly help you.

For queries regarding connection of the telephone, please contact your network provider.

If you experience problems or defects with the phone, please dial the service number for your country.

Intended use

The Octophon F660/680 TDM phone was designed as a device for voice transmission and should be used on a desk. Any other use is regarded as unauthorized.

Telephone type

The identification details (exact product designation and serial number) of your telephone can be found on the nameplate on the underside of the base unit. Specific details concerning your communications platform can be obtained from your service technician. Please have this information ready when you contact our service department regarding faults or problems with the product.

Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear.
The optimum handsfree distance is 20 in. (50 cm).
- Proceed as follows to optimize display legibility:
 - Turn the phone to tilt the display. This ensures you have a frontal view of the display while eliminating light reflexes.

Multi-line telephone, executive/secretary functions

Your Octophon F660/680 TDM is a "multi-line telephone". This means that your service personnel can configure multiple lines on your phone, which is not the case with single-line phones. Each line is assigned an individual phone number which you can use to make and receive calls.

The programmable sensor keys function as line keys on multi-line phones → Page 127.

When using a multi-line phone to make and receive calls, certain particulars must be taken into account → Page 128 ff.


The executive-secretary configuration is a special case. This is a multi-line telephone with special features (e.g. "Ring Transfer" and "Accept call"), configured especially for executive/secretary use → Page 126 ff.

Team functions

To increase the efficiency of telephony, your service personnel can configure various Team functions such as pickup groups, hunt groups, and call distribution groups.

Getting to know your Octophon F660/680 phone

The following sections describe the most frequently used operating elements and the displays on your Octophon F660/680 TDM phone.

 The only difference between the Octophon F680 TDM and Octophon F660 TDM is in their casing.


The user interface of your Octophon F660/680 TDM

The diagram shows an Octophon F660 TDM, the description applies to both product variants.



1	You can make and receive calls as normal using the handset .
2	The large graphic display permits intuitive operation of the phone → page 24.
3	Using the mode keys you can conveniently use the phone's applications. To select a tab within an function press the relevant key repeatedly until the required tab is displayed → page 18.
4	Use the TouchGuide to navigate conveniently through the applications on your telephone → page 19.
5	You can customize your telephone by assigning phone numbers and functions to the programmable sensor keys → page 21.
6	The function keys allow you to call up the most frequently used functions during a call (e.g. Disconnect) → page 17.
7	Audio keys are also available, allowing you to optimally configure the audio features on your telephone → page 17.
8	The TouchSlider allows you to adjust the current volume (e.g. telephone rings - ringer volume) → page 17.
9	Incoming calls are visually signaled via the call display .
10	The keypad can be used to enter phone numbers and text → page 23.

Ports on the underside of the phone

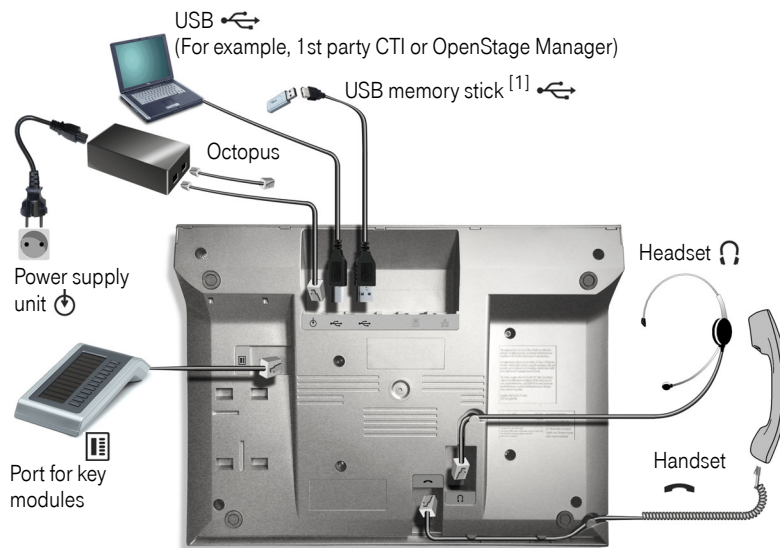

Octophon F660/680 TDM operating features

	Octophon F660/680	680 TDM	660 TDM
Display type		Color TFT 320x240	Color TFT 320x240
Illuminated display		✓	✓
Programmable sensor keys		8	8
Full-duplex speakerphone function		✓	✓
Headset		✓	✓
Bluetooth		✓	✓
USB master/slave ^[1]		✓	✓
Interface for key modules		✓	✓
Phone/analog adapter for Octophon F660/680		✓	✓

[1] Use an extension cable such as C39195-Z7704-A5 to connect the USB memory stick. The port is not suitable for USB hubs.

OpenStage Manager

This program offers an additional option for tailoring your phone to your personal needs.

OpenStage Manager is suitable for the following models:

- Octophon F660 HFA
- Octophon F660 TDM
- Octophon F680 HFA
- Octophon F680 TDM

Features

- Phonebook management
- Assignment of images to contacts
- Synchronization of contacts
- Save and restore
- Key programming
- Screensaver
- Ring tones



Contact your service personnel for the latest version of OpenStage Manager.

key module for Octophon F660/680

The key module for Octophon F660/680 is a key module attached to the side of the phone that provides 12 additional illuminated, programmable keys.

Like keys on the phone, these keys can be programmed and used according to your needs
→ page 21.






The diagram shows an key module for Octophon F660/680 for Octophon F680 TDM.

You can attach up to two key module for Octophon F660/680s to your Octophon F660/680 TDM.

Keys and controls

Function keys







Key	Function when key is pressed
	End (disconnect) call → page 47.
	Call forwarding ^[1] → page 73.
	Key currently has no function.

[1] If the LED key flashes on the phone, your phone was configured as a forwarding destination.

Audio controls

Audio keys



Key	Function when key is pressed
	Activate/deactivate the loudspeaker → page 43.
	Activate/deactivate headset → page 51.
	Activate/deactivate microphone (also for speakerphone mode) → page 47.

TouchSlider

Similar to the TouchGuide → page 19, you can set properties for your telephone, such as the volume, by sliding your finger over the TouchSlider.



Icon used in the manual:



The blue illuminated slider control displays the volume setting for the current tone (ring tone, handset tone and loudspeaker tone). You can adjust the volume by moving the slider left or right.

Set the lamp brightness of the TouchSlider → page 150.

Mode keys

These sensor keys allow you to switch to the required application with the simple stroke of a key. To select a tab within an application press the relevant key repeatedly until the required tab is displayed.



Key	Function when key is pressed	LED display
	Display telephony interface → page 32	Blue: Application is active
	Display phonebooks → page 33	Blue: Application is active
	Display call lists → page 36	Blue: Application is active White: New entry in call list
	Display messages → page 38	Blue: Application is active White: New voicemail
	Display user/applications menu → page 39	Blue: Application is active
	Display Help function → page 41	Blue: Application is active













The icons for the mode keys also appear on the display → page 30.

TouchGuide





Before using the telephone, remove the protective covering from the TouchGuide ring surface.






With this control, you can manage most of your phone's functions, as well as its displays.


Operation	Functions when key is pressed
 Press 	In idle mode: <ul style="list-style-type: none"> Open the idle menu → page 27 In lists and menus: <ul style="list-style-type: none"> Go to next level Entry selected: <ul style="list-style-type: none"> Perform action You can now access a context menu: <ul style="list-style-type: none"> Open the context menu
 Press 	In lists and menus: <ul style="list-style-type: none"> One level back Entry selected: <ul style="list-style-type: none"> cancel action In input fields: <ul style="list-style-type: none"> Delete character to the left of the cursor
 Press 	In lists and menus: <ul style="list-style-type: none"> Scroll down Hold down: Jump to the end of the list/menu
 Press 	In lists and menus: <ul style="list-style-type: none"> Scroll up Hold down: Jump to the start of the list/menu
 Move your finger around the inner wheel 	In lists and menus: <ul style="list-style-type: none"> Scroll up or down In input fields: <ul style="list-style-type: none"> Select a character in the display keyboard → page 25 Set sensitivity → page 151.
 Press 	Entry selected: <ul style="list-style-type: none"> Perform action Initiate call In idle mode: <ul style="list-style-type: none"> Open the idle menu → page 27

Browsing in the call list and phonebook tabs

If you are in the phonebook, you normally navigate between the "Personal" and "Corporate" tabs using the  key or if you are in the call lists you navigate between the "Missed", "Received", "Dialled" and "Forwarded" tabs using the  key,


Alternatively you can use the TouchGuide to navigate between the tabs.


Firstly enter the tab line using the  key and then browse left or right using the  and  keys. Once you have reached the required tab, press the  or  key to enter the corresponding selection list.

If you are in one of the phonebook or caller lists or in one of the settings menu, you are go back to the telephony interface by repeatedly pressing the  key.

Programmable sensor keys


Your Octophon F660/680 TDM has eight illuminated sensor keys to which you can assign functions or numbers.

 Increase the number of programmable sensor keys by connecting a key module
→ page 16.



Depending on how they are programmed, you can use the sensor keys as:

- Function keys → page 81
- Redial keys → page 86
- Procedure keys → page 84

 You can program internal and external station numbers on the second level for all programmable sensor keys (except the Shift key). The LED function is not available for internal station numbers on the second level.




Touch the key to activate the programmed function or dial the stored number.

Press and hold a function key or redial key to open a menu for programming it. Direct station selection (DSS) keys can only be programmed via the service menu.


A label indicating the key's function is displayed to the left of the key; it cannot be changed. You can change the labels for redial or DSS keys according to your requirements
→ page 87.

The status of a function is shown by the LED on the corresponding sensor key.

Meaning of LED displays on function keys

LED		Meaning of function key
	Off	The function is deactivated.
	Flashing ^[1]	Indicates the function status.
	On	The function is activated.


[1] In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.


 The programmable sensor keys on multi-line phones function as trunk keys
→ page 127.


Text input

Example: Changing the key label → page 87.

Enter the required characters via the keypad.

Select the functions using the keys  and .

Confirm your entry with .

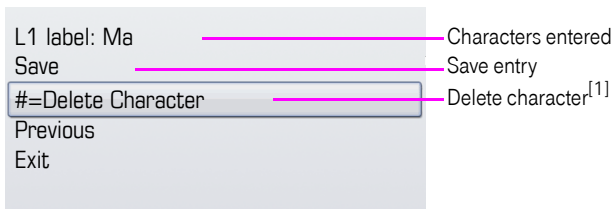

[1] Alternatively, press the key .

Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x
	[1]	1			
	a	b	c	2	
	d	e	f	3	
	g	h	i	4	
	j	k	l	5	
	m	n	o	6	
	p	q	r	s	7
	t	u	v	8	
	w	x	y	z	9
	+	.	-	0	
	[2]				
	[3]				

[1] Space


[2] Next letter in upper case

[3] Delete character

Keypad

Text input

In cases where text input is possible, you can use the keypad to input text, punctuation and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.

Example: To enter the letter "h", press the number  key on the keypad twice. When entering the text, all available characters for this key are displayed. After a short while, the character in focus is displayed in the input field.





To speed up the input, you can confirm your entry by pressing "OK" on the Touch-Guide after you have selected the required character.

To enter a digit in an alphanumerical input field, press the relevant key and hold it down. You no longer need to scroll through the entire list of possible characters.

Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700-PATTERN = 0700 - 7288376).

Multi-function keys

Function		
Long press (key held down)	Turn ringtone on/off → page 103.	Turn phone lock on/off → page 107.
Key label → page 22.	Next letter in upper case.	Delete character.
Display keyboard → page 25	Write special characters.	Switch between upper and lower-case text and number entry.


Graphic display

Your Octophon F660/680 TDM is equipped with a tilt-and-swivel color display → page 14.

Appearance

You can customize your display to suit your personal requirements:



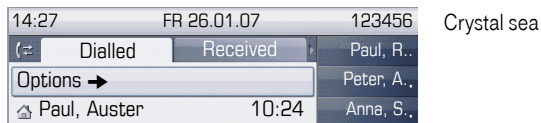

- Angle the display as required → page 12.
- Angle the display as required → page 12. Select your preferred display design → page 149.



Status bar

The time, weekday, date, and your phone number are displayed in the status bar.

In addition, different icons represent different situations and switches:


Icon	Explanation
	The ring tone is deactivated → page 103
	The "Do not disturb" function is activated → page 104
	The phone lock is activated → page 107
	The Bluetooth function is activated → page 158

Display keyboard





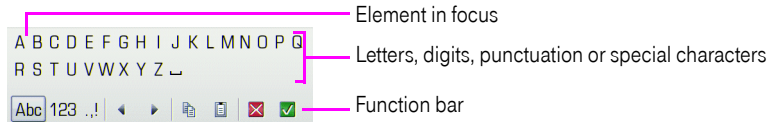

Simple text and characters can also be entered at any time using the keypad
→ page 23.










Depending on the context, the display keyboard is displayed with different elements.



Use the TouchGuide to operate the display keyboard → page 19.

Operation	Function
Move your finger around the wheel	Set the focus on the next/previous element
Press 	Select the element in focus (enters the character or performs the function)
Press 	Delete character to the left
Press 	Set focus to 

You can select the following functions from the function bar:

Element	Explanation
	Switch to upper/lower case characters for first letter of words (initial letter upper case, all subsequent letters lower case).
	Switch to lower case characters.
	Switch to numeric characters
	Switch to punctuation and special characters
	Move cursor one character to the right/left
	Copy entire content of the active field to the clipboard
	Insert clipboard content at cursor position. Existing content is not overwritten.
	Cancel action without changes.
	Confirm changes.

Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x
	1	[1]												
	a	b	c	2	ä									
	d	e	f	3										
	g	h	i	4										
	j	k	l	5										
	m	n	o	6	ö									
	p	q	r	s	7	ß								
	t	u	v	8	ü									
	w	x	y	9										
	0	+												
	.	*	#	,	?	!		-	()	@	/	:	_
	[3]													

[1] Space

[2] Additional special characters are available on the display keyboard

[3] Switch between upper and lower-case text and number entry


Context-dependent displays

Depending on the situation at hand, the graphic display on your Octophon F660/680 phone displays different content, to which you can respond intuitively.

Idle mode

If there are no calls taking place or settings being made, your Octophon F660/680 is in idle mode.

In addition to the status bar and the programmable sensor key list, the graphic display offers a wide range of context-dependent displays.

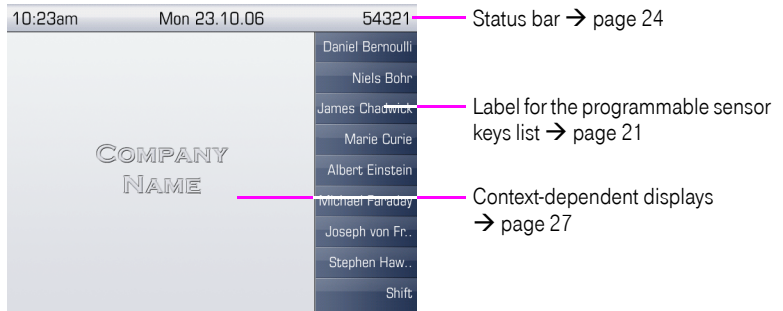

Idle menu

In idle mode, press **→** on the TouchGuide → page 19 to display the idle menu. You can call up various functions here. The sequence and status of the entries correspond to the status of the function.

It may contain the following entries:


- Caller list
- Forwarding on
- Lock phone
- Do not disturb on
- Advisory msg. on
- Ringer cutoff on
- Send message
- View callbacks^[1]
- Phonebook
- HF answerback on
- Join group
- Suppress call ID
- Call waiting tone off
- DISA intern

[1] Only appears if callback requests are saved

Telephony dialogs

The dialogs in the lower area of the display prompt you to input data or provide you with information about the call states.

Example: You dialed the phone number of a contact saved in the phonebook.

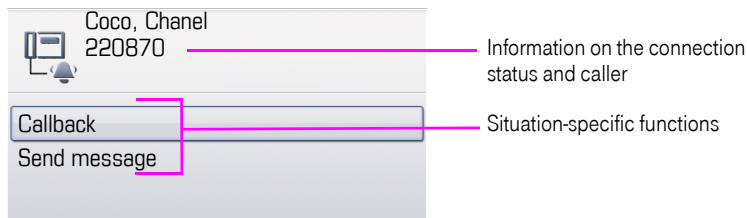


The pop-up menu (→ page 29) provides functions suited to the situation, which you can select and confirm using the TouchGuide → page 19.

Messages

The messages displayed in the upper left area of the display advise you of current settings or events.

Example:

- Call forwarding is activated for all calls.
All calls are forwarded to the party named "Coco Chanel"^[1].
- You received a message while you were absent.
- A call list contains a new entry



Explanation of all message icons:


Icon	Explanation
	You have received one or more new messages
	One or more new entries have been added to the call lists
	Call forwarding is active

[1] The display depends on whether you defined a party from the personal phonebook or the system phonebook as the forwarding destination.

Context menus

If the arrow icon ➔ appears next to a selected entry, additional menu levels or selection options are available in the form of a context menu. Navigate through these options using the TouchGuide ➔ page 19.

You can set context menus to automatically close in certain situations (for example, during a connection) ➔ page 164. You can also select the display duration ➔ page 164.

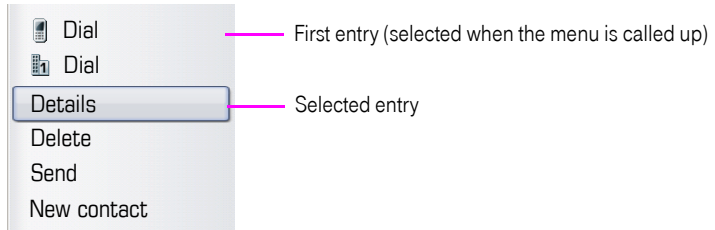

Pop-up window

In certain situations, a pop-up window opens automatically in the lower third of the display.


Pop-up menu

You will be prompted to use a pop-up menu to select situation-dependant functions and to confirm them or to make entries.

You can use the TouchGuide to navigate within the pop-up menu ➔ page 19.

Example:

The following pop-up menu opens after you change a setting and press the ↵ key on your TouchGuide.

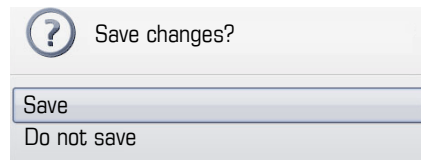


Pop-up message

Pop-up messages only indicate actions or states for which further action is not required.

Example:


The following pop-up message appears briefly when you change a setting.









Application tab

In many cases you can select further content within an application using tabs.



Example: Press the  mode key to open the call lists → page 18. Press this key repeatedly to switch between the various tabs.

The icon displayed to the left of the tab indicates the application you are currently working in.

Icon	Explanation
	Telephony interface → page 32
	Phonebooks → page 33
	Call lists → page 36
	Messages → page 38
	Menu → page 39
	Help function → page 41

Applications available on your Octophon F660/680 phone

The following descriptions provide an overview of the various applications available on your phone.

Application navigation

Activating an application

You can switch to the relevant application using the mode keys → page 18.

Scrolling through application tabs

If an application has more than one tab, you can press a mode key repeatedly to select the relevant tab → page 30.

Scrolling through lists


You can use the TouchGuide to scroll through entries and confirm the functions you want → page 19.


Opening context menus

If the arrow → appears beside an entry, a context menu is available for this entry → page 29.


Telephony interface

Additional information is displayed in the telephony interface when your phone rings, when you dial a number or during a call, for instance.





 The same information is available on multi-line telephones for the selected line in the "Overview" tab.


To access the menu: Press the  key.

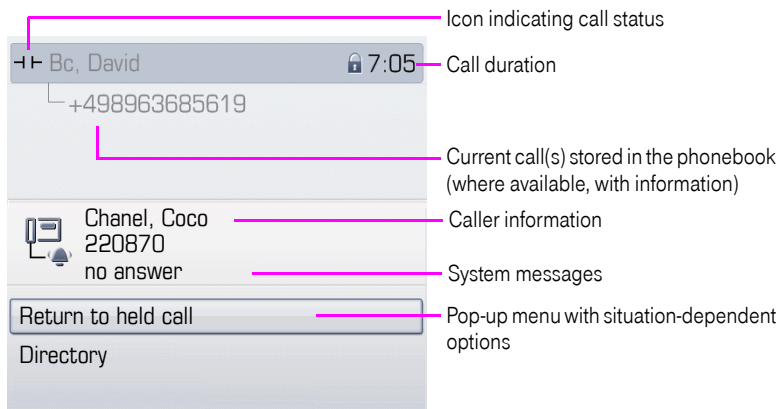Example:



Icons for frequent call states

Icon	Explanation
	The call is active.
	The call has been disconnected.
	You have placed the call on hold (e.g. consultation hold).
	Your call partner has placed the call on hold.


 Detailed descriptions of the various functions can be found in the sections "Making calls – basic functions" → page 42 and "Making calls – enhanced phone functions" → page 51.

Phonebooks






In addition to the personal phonebook, this application contains entries from other directory services such as an LDAP corporate directory and the company's internal phonebook.

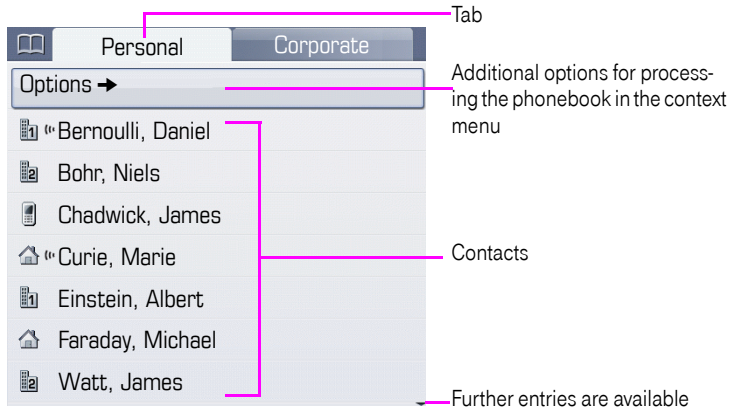To access the menu: Press  repeatedly until the required tab is displayed.

Example:




Phonebook icons

Icon	Explanation
	Primary business number
	Secondary business number
	Mobile phone number
	Private phone number
	The phone number is not saved in the personal phonebook.

Search contacts

When in the phonebook or directory list view, press the keypad key that corresponds to the first letter of your search term.

A field opens for you to enter the search term:



Enter your search term using the keypad → page 23.

The cursor jumps to the first entry in the list that matches the character you entered in the search field.

Personal phonebook

The "Personal" tab contains your personal phonebook. You can store up to 1000 contacts in this phonebook. The entries are sorted in alphabetical order in the phonebook list and displayed with the icon for the specified default phone number.

There are two ways of creating new contacts:

- Via the phonebook list context menu → page 89

Contact details

The type of data displayed for a call in the telephony interface → page 32 is dependent on the information you have stored for the contact in your personal phonebook.

A contact consists of the entry in the "First name" or "Last name" fields and at least one phone number → page 89.

In addition, you can store non-telephony-specific data (e.g. address, function, etc.) for each entry.

You can store several phone numbers for each contact. In this case, however, you should define a preferred number → page 89.

Classify your contacts into groups → page 93.

Store a picture of the contact → page 90.

Managing contacts

All saved contacts are listed in alphabetical order in the "Personal" tab.

You can use the "Options" context menu to

- create new contacts → page 89
- define contact display format → page 92
- sort contacts into groups → page 93
- delete the entire phonebook list → page 92



To manage your contact data professionally and to synchronize your data with the Outlook e-mail program, we recommend using OpenStage Manager → page 15.

Using contacts

The following functions are available via the context menu of a selected contact:

- Calling a contact → page 55
- Editing a contact → page 91
- Deleting a contact → page 92

LDAP directory

If you have access to an LDAP directory (contact the responsible service personnel), you can search contacts in a company-wide directory.

Searching for a contact

- Searching for an entry → page 95

Using a contact

- Call contact → page 57


System phonebook

The "System" tab contains the central speed-dial directory, which is configured and maintained by your service personnel. This directory contains all internal phone numbers and speed-dial numbers that were assigned a name.

- Dialing from the system phonebook → page 56
- Dialing with system speed-dial numbers → page 57


Call lists

All calls and numbers dialed on your phone are logged in chronological order in call lists.

 Callers with suppressed numbers cannot be saved in the call lists.

The following call lists are displayed individually on separate tabs:

- "Missed" tab: missed calls
- "Received" tab: answered calls
- "Dialled" tab: dialed numbers

 Callers with suppressed numbers cannot be saved in the call lists.

When new entries are added to the call lists, a message appears (→ page 28) on the idle display and the LED of the mode key (⊕) (→ page 18) lights up white.


To access the menu: Press (⊕) repeatedly until the required tab is displayed.

Managing call lists

Each call list may contain up to 30 entries. Once this limit is reached, the oldest entry in the log is deleted.

Multiple calls from the same number are only listed once. The number of call attempts is logged in the "Details" context menu.

Example: "Missed" tab



The screenshot shows a mobile phone interface with two tabs: 'Missed' and 'Received'. The 'Missed' tab is active. Below the tabs is an 'Options' menu. The main list shows call entries with names, phone numbers, and dates. Annotations with pink lines point to various elements:


- Additional tabs:** Points to the 'Received' tab.
- Selected new entry with context menu:** Points to the 'Options' menu.
- Date of call:** Points to the date '18.10.' for the first entry.
- Number of call attempts:** Points to the number '(1)' for the first entry.
- Old entry:** Points to the date '17.10.' for the third entry.

Name	Phone Number	Date	Attempts
Bernoulli, Daniel	1238765341	18.10.	(1)
Curie, Marie	441234567890	18.10.	(2)
Bohr, Niels	12782356823	17.10.	(2)

You can select the following function in the "Options" context menu:

- Delete All → page 97

Example: "Dialled" tab

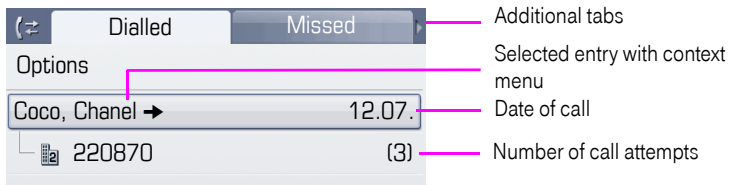


The following functions are available via the context menu of a selected entry:

- Dial → page 55
- Details → page 97
- Delete → page 97
- Transfer entry to personal phonebook → page 98


Entry details

Up to ten call attempts/calls can be stored under "Details" for each entry.

Example: entry in the "Missed" tab

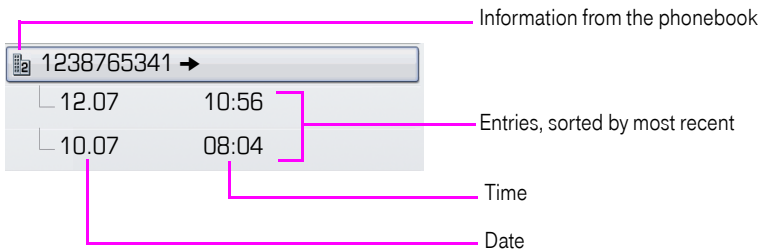


Example: entry in the "Dialled" tab

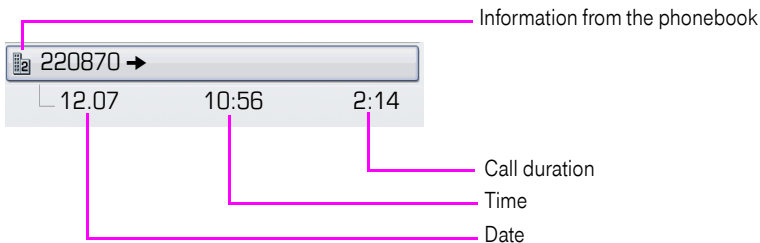

In this view, the context menu contains the following entry:

- Dial → page 55

 If a caller is already entered as a contact in the local phonebook, the stored data is displayed.

Mailbox

Depending on the type and configuration of your communications platform (contact the relevant service personnel), messages from services, such as ComCenter Office Messaging System (UMS) are displayed in this application in addition to messages received.


The following messages are displayed individually on separate tabs:

- "Messages" tab: Messages
- "Voice Mail" tab: Voicemail

Messages


You can send short text messages to individual internal stations or groups.


In idle mode (→ page 27) the following signals alert you to the presence of new messages:

-  key LED illuminates
- Display → page 28.

To access the menu: Press  repeatedly until the "Messages" tab is displayed.

Example:

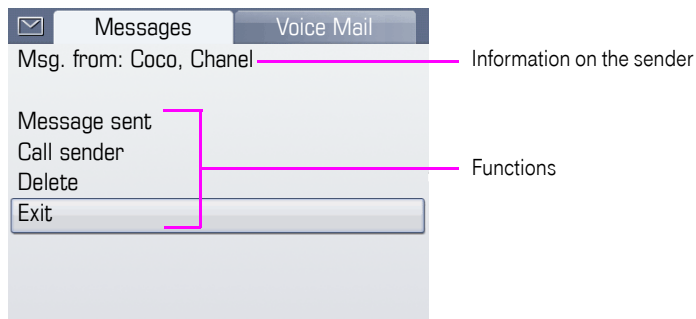

 For a description of how to edit the entries → page 112.

Voicemail


If your telephone is connected to a voicemail system (such as Entry Voice Mail), the Mailbox key will also light up to alert you to any messages that have arrived.


An appropriate message also appears on the display (for instance, in Entry Voice Mail: "<x> new messages").

To play back your voicemail, follow the instructions on the display.

Menu

This menu includes a configuration area for users and administrators, as well as an area for any available applications (contact service personnel).

To access the menu: Press the  key.

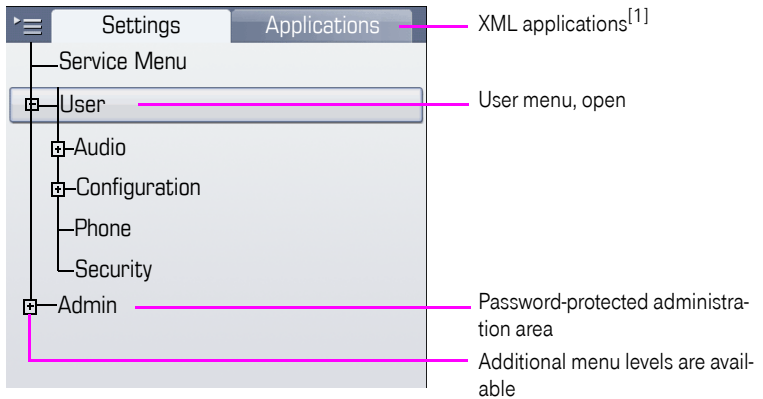


[1] This function is not yet available.

Settings - Service Menu

Open the Program/Service menu in your communication system and use the comprehensive functions it offers.

To access the menu: Press  repeatedly until the "Settings" tab is displayed.

Confirm the "Service Menu" entry by pressing .

 An overview of the maximum functions available can be found at [→ page 185](#).

Settings - telephone user menu


Here you can configure settings for your Octophon F660/680.

To access the menu: Press  repeatedly until the "Settings" tab is displayed.

Select and confirm the "User" entry using the TouchGuide [→ page 19](#).

If necessary, enter the user password [→ page 102](#).

The menu structure comprises several levels.

 Go to the page references next to the menu entries below to view descriptions of the corresponding parameters.

Audio

Optimize the volumes, audio settings and ring tones of your Octophon F660/680 for your environment and according to your personal requirements.

Volumes → page 153

Settings → page 154, → page 156

Configuration

Call forwarding → page 73

Set up call forwarding for your telephone.

Context menu → page 164

Define whether context menus should close automatically, and define the display duration.

Bluetooth → page 158

Prepare your phone for Bluetooth operation.

Phone

Adjust the display design settings and program the sensor keys on your Octophon F660/680.

Screensaver → page 146

Display → page 146

Key programming → page 73

Security

Protect your settings and data by assigning a password → page 102.

Reset user data

Delete all personal settings here → page 166.

Settings – administration


You can access the administration area via the "Admin" menu and by entering the administration password.


Refer to the administration manual supplied with your phone for more detailed information on this topic.

Help function

You can call up the "Help" function at any time, even during a call.


Calling up the "Help" function

Press . The "Help" function is activated.

If service personnel have activated a function on your phone, which continuously transmits operating data to a server, you will see the flashing icon  in the upper display line.

Step by Step


Basic functions

 Please read the introductory chapters "Getting to know your Octophon F660/680 TDM phone" → page 13 and "Applications available on your Octophon F660/680 TDM phone" → page 31 carefully before performing any of the steps described here on your phone.

Answering a call

Your Octophon F660/680 TDM phone rings with the tone signal set when an incoming call is received. The call is also visually signaled on the call display.

- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.

 Your service personnel can adjust the ring cadence for external and internal calls for you. In other words, different ring cadences can be set for different internal callers.

If transmitted, calling party information (name, phone number) appears on the graphic display.

 An incoming call will interrupt any ongoing telephone setting operations.

Answering a call via the handset

The phone is ringing. The caller is displayed.

Lift the handset.

if nec. 

Set the call volume.

Step by Step

Answering a call via the loudspeaker (speakerphone mode)

Suggestions for using speakerphone mode

- Tell the other party that speakerphone mode is active.
- Adjust the call volume while speakerphone mode is active.
- The ideal distance between the user and the phone in speakerphone mode is about 50 cm.

The phone is ringing. The caller is displayed.



Press the key shown. The LED lights up.

or

Answer

Confirm.

The speakerphone function is activated.

if nec.

Set the call volume.

Ending a call



Press the key shown. The LED goes out.

or



Press the key shown.

Accepting a call via the headset

Prerequisite: A headset is connected.



Make sure your headset port is set up properly → page 155.

The phone rings. The key flashes.



Press the key shown.

if nec.


Set the call volume.

Step by Step

Switching to speakerphone mode

People present in the room can participate in your call.

Prerequisite: You are conducting a call via the handset.




Hold down the key and replace the handset. Then release the key and proceed with your call.

Set the call volume.

U.S. mode

If your communication system is set to US mode (contact your service personnel), you do not have to hold down the speaker key when replacing the handset when switching to speakerphone mode.



Press the key shown.

Replace the handset. Proceed with your call.

Set the call volume.

Switching to the handset

Prerequisite: You are conducting a call in speakerphone mode.




Lift the handset.

The LED key goes out.

Open listening

People present in the room can silently monitor your call.

 You are recommended not to activate the speakerphone feature when using a Bluetooth headset → page 171 because depending on headset and environment, this can lead to reduced speech quality.

People present in the room can silently monitor your call.

Prerequisite: You are conducting a call via the handset.

Activating



Press the key shown. The LED lights up.

Deactivating



Press the lit key. The LED goes out.

Step by Step

Making calls

Off-hook dialing



Lift the handset.



Internal calls: Enter the station number.

External calls: Enter the external code and the station number.

The called party does not answer or is busy



Replace the handset.

En-bloc dialing

If "en-bloc dialing" is activated, the connection to the entered number is only set up when you have confirmed "Dial".



internal: Enter the station number.

External calls: Enter the external code and the station number.

if nec. 

Delete existing characters.

Dial

Confirm the option shown. The connection is set up.



The speaker key lights up. The party you are calling answers via loud-speaker. You can use speakerphone mode.



You can pick up the handset before or after dialing.

Step by Step



On-hook dialing

Internal calls: Enter the station number.
External calls: Enter the external code and the station number.



Your system may also be programmed so that you have to press the Internal key before you dial an internal number. To call an external party, you have to enter an external code before dialing the party's telephone number (Prime Line is not active; contact your service personnel).

The other party answers with speaker:



Lift the handset.

or

On-hook dialing: Speakerphone mode.

The called party does not answer or is busy:



Press the key shown. The LED goes out.

Dialing with the headset connected



Prerequisite: The headset is connected.
internal: Enter the station number.
External calls: Enter the external code and the station number.



The headset key lights up.

The connection is established as soon as your input is complete.



Make sure your headset port is set up properly → Seite 155.

Dialing with DDS keys

Prerequisite: You have saved a number on a sensor key → page 86.



Press the programmable repdial key.

If the required phone number is on a different level, first press the programmed sensor key to shift levels "Layer X".



You can press the DDS key during a call and automatically initiate a callback → page 48.

Step by Step

Ending a call



Replace the handset.



Press the key shown.

or



Press the key shown.

Reject call

Rejecting a call

The phone is ringing. The caller is displayed.

Select and confirm the option shown.

The connection is cleared down. The caller receives the message "Currently not possible".

Turning the microphone on and off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone. You can also switch on the handsfree microphone to answer an announcement via the → page 52 telephone speaker.

Prerequisite: A connection is set up, the microphone is activated.



Press the key shown. The LED lights up.

or



Press the lit key. The LED goes out.

Step by Step

if nec. →

Consultation



Return to held call

or

Quit and return

Toggle/Connect

Conference

Leave conference

if nec. →

Consultation



Transfer

Calling a second party (consultation)

You can call a second party while a call is in progress. The first party is placed on hold.

Open the context menu → page 29.

Confirm.

Call the second party.

Returning to the first party

Confirm.

Select and confirm the option shown.

Switching to the held party (alternating)

Select and confirm the option shown.

Initiating a three-party conference

Select and confirm the option shown.

Joining calling parties from a conference

Select and confirm the option shown.

For more information on conferences, see → page 66.

Transferring a call

If the person you are speaking to wants to talk to another colleague of yours, you can transfer the call that colleague.

Open the context menu → page 29.

Confirm.

Enter the number of the party to which you want to transfer the call.

Announce the call, if necessary.

Replace the handset.

Select and confirm the option shown^[1].

Step by Step

Using callback

You can request a callback if the station called is busy or if nobody answers. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback,

- When the other party is no longer busy,
- When the user who did not answer has conducted another call.



When configured (contact your service personnel), all callback requests are automatically deleted over night.

Storing a callback

Prerequisite: You have reached a busy line or no one answers.

Confirm.

Callback

Accepting a callback

Prerequisite: A callback was saved. Your telephone rings. "Callback: ..." appears on the display.



or



or

Answer



Lift the handset.

Press the key shown. The LED lights up.

Confirm.

You hear a ring tone.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step



Open the idle menu → page 27.

View callbacks

Select and confirm the option shown^[1].

Next callback

Select and confirm to display additional entries.

Delete

Confirm.

Exit

Select and confirm the option shown.

or



Press the key shown. The LED goes out.

Viewing and deleting a stored callback

Deleting a displayed entry

Ending retrieval

[1] "Differing display view in a Octopus F900 environment" → page 177


Step by Step

Enhanced phone functions

Answering calls

Accepting a call via the headset

Prerequisite: You have connected a headset or are using a Bluetooth headset → page 171.

 Make sure your headset port is set up properly → Seite 155.



The LED flashes when a call is received.
Press the key shown.

or

 Answer

Confirm.

if nec.



Set the call volume.

Ending a call



Press the key shown. The LED goes out.

or



Press the key shown. The LED goes out.

Answering a call for another phone

You hear another telephone ring.



Press the flashing key.

or



Open the Program/Service menu → page 39.

 Calls →

Select and confirm the option shown^[1].

 Pickup - directed

Select and confirm the option shown.


 Answer

Confirm.

or



If you know the number of the telephone that is ringing, enter it directly.

 Accepting a call in a team → page 135.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Using the speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement. The other party's name or station number appears on the screen.

You can conduct the call with the handset or in speakerphone mode.



or

Mute off

Press the "OK" key to confirm your selection and answer the call.

or



Press the key and answer the call.



If "handsfree answerback" is enabled (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode. If handsfree answerback is disabled (default setting), follow the procedure described above.

Placing a speaker call to a colleague → page 59.

Enabling and disabling handsfree answerback



Open the idle menu → page 27.

HF answerback on

Select and confirm the option shown,

or

HF answerback off

select and confirm the option shown.

Step by Step

Answering calls from the entrance telephone and opening the door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener.

If you have the proper authorization (contact your service personnel), you can activate the door opener, enabling visitors to open the door themselves by entering a 5-digit code (using a DTMF transmitter or the keypad installed).

Speaking to visitors via the entrance telephone

Prerequisite: Your telephone rings.



Lift the handset within 30 seconds. You are connected to the entrance telephone immediately.

or



Lift the handset and answer the call.



Dial the entrance telephone number.

Open door

Opening the door from your telephone during a call from the entrance telephone

Confirm.

Opening the door from your telephone without calling the entrance telephone



Open the Program/Service menu → page 39.

Open door

Select and confirm the option shown.



Dial the entrance telephone number.



Special features must be taken into consideration if your telephone operates with IP-Netpackage (system networking via PC network) → page 145!

Opening the door with a code (at the door)



After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a doorbell call signal may or may not be forwarded.

Step by Step



More features →

Open the Program/Service menu → page 39.

Door opener on

Select and confirm the option shown.

Select and confirm the option shown.



Dial the entrance telephone number.



Confirm the five-digit code to change the code.

or

3=change password

Select the displayed function and press the "OK" dialog key to change the code.

1=enable with ring

Select and confirm the option shown.

or

2=enable w/o ring

Select and confirm the option shown. You can also open the door without a doorbell ring.



More features →

Open the Program/Service menu → page 39.

Door opener off

Select and confirm the option shown.

Select and confirm the option shown.

Accepting a call from an answering machine

Prerequisite: An answering machine is configured (consult your service personnel).



The LED lights up. Press the key shown.


For a more detailed description of how this function works, see → page 38.

Step by Step

Making calls

Redialing from a call list


For information about the call lists as well as sample entries, refer to → page 36.

 Press the key until the call list you want is active.

Niels, Bohr → 18.10.

Select and confirm the entry you want.
The phone number is dialed immediately.


or

 Open the context menu.

Dial


Confirm.
The phone number is dialed.

or

 Open the context menu.

Details

Select and confirm the option shown.

 Open the context menu.


Dial

Confirm.
The phone number is dialed.

Using a personal phonebook

For information about the personal phonebook as well as sample entries, refer to → page 33. For a description of how to create contacts, see → page 89.

Calling a contact from the phonebook list


 Press the key shown until the "Personal" tab is active.

Search for a contact → page 33


or

 **Niels, Bohr →**

Select with the TouchGuide.

 Confirm. The phone number defined as the default number (→ page 89) is dialed.

or

 Open the context menu.

 **Dial**

Select and confirm the required phone number using the icons.

Explanation of the icons → page 33.

Step by Step

Calling a contact from a group



Press the key shown until the "Personal" tab is active.

Options →

Select and confirm the option shown.



Open the context menu.

Groups

Select and confirm the option shown.

VIP →

Select the required group.



Open the context menu.

View

Confirm.

Niels, Bohr →

Select group member.



Confirm. The phone number defined as the default number (→ page 89) is dialed.

or



Open the context menu.

Dial

Select and confirm the required phone number using the icons.

Explanation of the icons → page 33.

Using a system phonebook

For information about the system phonebook, see → page 35.



Press the key shown until the "System" tab is active.

or



Open the idle menu → page 27.

Directory

Select and confirm the option shown.

if nec.

If the system phonebook contains multiple directories:

1=internal

Confirm.

Search for a contact → page 33

or

Marie, Curie →

Select with the TouchGuide.



Confirm. The phone number is dialed immediately.

or



Open the context menu.

Call

Select and confirm the option shown.

Step by Step

Using the LDAP directory

For information about the LDAP directory, refer to → page 35.

Prerequisite: You searched for and selected a contact in an LDAP database (→ page 95).

Confirm; the phone number is dialed immediately.

or



Open the context menu.

Confirm.

or

Select and confirm the option shown.

Making calls using system speed-dial numbers

Prerequisite: You know the system speed-dial numbers (consult your service personnel).



Open the Program/Service menu → page 39.

Select and confirm the option shown^[1].



Enter a three-digit speed-dial number.

if nec.

Suffix-dialing



If necessary, you can suffix-dial additional digits (for example, the user's extension) at the end of the saved station number. If this feature is configured, a suffix is automatically dialed (for example, "0" for the exchange) if no entries are made within 4 or 5 seconds.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Use speed dialing



Destinations →

Change Speed Dial



Change



Save

or

previous

Next

or

Change

or

Delete

or

Exit

Dialing with speed-dial keys

Prerequisite: You have configured speed-dial keys → page 58.
Open the Program/Service menu → page 39.

Select and confirm the option shown^[1].

Press the key shown.

Press the required speed-dial key.

Configure a speed-dial key

You can program the keys **[0+]** to **[9wxyz]** with ten frequently used phone numbers.

Open the Program/Service menu → page 39.

Confirm.

Select and confirm the option shown^[1].

Press the key shown.

Press the required speed-dial key. If the key is already in use, the programmed phone number appears on the screen.

Confirm.

First enter the external code and then the external station number.

Confirm.

If you make a mistake

Select and confirm the option shown.
This deletes all entered digits.

Confirm.

Select and confirm the option shown.


Select and confirm the option shown.

Select and confirm the option shown.

Step by Step

Calls →

Speaker call



Talking to your colleague with a speaker call

You can make a loudspeaker announcement through a loudspeaker if connected (ask your service personnel), or to an internal user with a system telephone without any action on their part.

Open the Program/Service menu → page 39.

Select and confirm the option shown.

Select and confirm the option shown^[1].

Enter the station number.



Responding to a speaker call → page 52.

Talking to your colleague with discreet calling

If this function has been configured (ask your service personnel), you can join an ongoing call conducted by an internal user at a system telephone with display.

You can listen in unnoticed and speak to the internal user without being overheard by the other party (discreet calling).

Lift the handset.

Enter the code.

Enter your internal station number.



Your service personnel can protect your telephone against discreet calling.

Automatic connection setup/hotline

If this function is configured (contact your service personnel), the system automatically sets up a connection to a preset internal or external destination.

Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a preset **period of time** (hotline after a timeout).

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Reserve trunk

Reserving a trunk

If configured (ask your service personnel), you can reserve an occupied trunk for yourself.

When the line is free, you receive a call and a note on the display.

Prerequisite: "Currently busy" appears on the display.

Confirm.

Reserved line is free



Your telephone rings. "Trunk is free" appears on the display.



Lift the handset.



You will hear the dial tone.



Enter the external phone number.

Assigning a station number

If this function has been configured (contact your service personnel), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.



Open the Program/Service menu → page 39.

Calls →

Select and confirm the option shown.

Temporary MSN

Select and confirm the option shown.



Enter the DID number you wish to use.



Enter the external phone number.

Step by Step

Associated dialing/dialing aid

If this function has been configured (contact your service personnel), you can use a dialing aid to dial numbers and set up calls for your telephone.

The operating procedure depends on whether the dialing aid is connected to the **S₀ bus** or the **a/b (T/R) port**.

You can also use your system telephone as a dialing aid for other telephones.

Dialing aid on the S₀ bus:

On the PC, select a destination and start dialing.

The speaker on your telephone is switched on. Lift the handset when the other party answers.

Dialing aid at the a/b (T/R) port:

On the PC, select a destination and start dialing.

"Lift the handset" appears on the PC screen.



Lift the handset.

Associated dialing from your telephone for another telephone

Open the Program/Service menu → page 39.

Select and confirm the option shown.



Enter the internal station number ("Dial for:").



Enter the number you wish to dial.

Associated dial

Step by Step

During a call

Using call waiting (second call)

You can be reached by a caller even if you are already conducting a call. The call waiting tone signals a second call.

You can ignore or accept the second call.

When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on.

You can block the second call or the signal tone (→ page 63).

Prerequisite: You are conducting a call and hear the camp-on tone (approximately every six seconds).

Ending the first call and answering the second call



Replace the handset. Your telephone rings.



Answer the second call. Lift the handset.

Placing the first call "on hold" and answering the second call

Call waiting

Select and confirm the option shown.

You are immediately connected to the second caller. The first party is placed on hold.

Quit and return

Ending the second call and resuming the first one

Confirm.

or



Replace the handset. "Recall" appears on the display.



Lift the handset.

You are reconnected with the first party.

Step by Step

Preventing and allowing a second call (call waiting)

If this function has been configured (ask your service personnel), you can prevent or allow a second call → page 62 from being signaled by automatic camp-on during an ongoing call.



Open the Program/Service menu → page 39.

Call wait.term.off

Select and confirm the option shown^[1],

or

Call wait.term.on

Select and confirm the option shown.

Activating/deactivating the camp-on tone

You can suppress the camp-on tone (every six seconds) for external calls. A one-time special dial tone then alerts you to the waiting call.

Activating the call waiting tone



Open the idle menu → page 27.

Waiting tone on

Select and confirm the option shown.

Deactivating the call waiting tone



Open the idle menu → page 27.

Waiting tone off

Select and confirm the option shown.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Parking a call

You can park up to ten calls, either internal, external, or both. Parked calls can be displayed on and picked up from another telephone. This feature is useful if you want to continue a call at another phone.

Prerequisite: You are conducting a call.

Open the Program/Service menu → page 39.

Select and confirm the option shown.

Select and confirm the option shown.

Enter the number of the park slot (0 - 9) and make a note of it. If the park slot number you entered is not displayed, it is already in use; enter another one.

Retrieving a parked call


Prerequisite: One or more calls have been parked. The phone is idle.

Open the Program/Service menu → page 39.

Select and confirm the option shown.

Select and confirm the option shown. Select and confirm the option shown.^[1]

Enter the park slot number you noted earlier. If the park slot number you enter is not in use, you cannot retrieve the call.

 If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

Calls →

Park a call



Calls →

Retrieve call



[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Placing an external call on hold


If you have programmed a hold key on your phone → page 81, you can put external calls on hold.

Then all other stations can accept the call on the assigned trunk.

Press the "Hold" key.


The message of the relevant trunk appears (e.g. 801) and note the trunk number.

If available, the LED of the assigned trunk key flashes slowly.



Held on line: 801

if nec.



Replace the handset or press the key shown.

Depending on the configuration, this may be necessary so other members can also pick up the call on hold.

Picking up a held call:

Prerequisite: One or more calls are on hold. The phone is idle.

Open the Program/Service menu → page 39.

Select and confirm the option shown.



Retrieve line



or

If the "Retrieve" → page 81 key is available, press it.



Enter the noted trunk number.

or




If there is a "Line:" key available for the relevant trunk, this flashes slowly. Press the key shown.

Step by Step

Conducting a conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.

 You can only add parties to or remove them from a conference if you initiated the conference.



if nec. →

Start conference

You are conducting a call.

Open the context menu → page 29.

Select and confirm the option shown.



if nec.

Return to held call

Call a third party.

If the third party does not answer:

Confirm.

Inform this party that you are initiating a conference.

Conference

Select and confirm the option shown.



A tone sounds every 30 seconds to indicate that a conference is in progress.

if nec. →

Add party

Adding up to five parties to a conference

Open the context menu → page 29.

Confirm.



Conference

Call the new party.

Select and confirm the option shown.




Select a station.




Remove party

Open the context menu → page 29.

Select and confirm the option shown.

 If a participant that was connected to the conference via an unencrypted line leaves, the conference remains unsecured.

Step by Step




Open the context menu → page 29.

Select and confirm the option shown.

or



Replace the handset, if this feature is configured (contact your service personnel).




Select a station.



Open the context menu → page 29.

Select and confirm the option shown.




Open the context menu → page 29.

Select and confirm the option shown.

or



Replace the handset, if this feature is configured (contact your service personnel).

Ending a conference

Removing party from the conference

Leaving a conference

Step by Step

Calls →

DTMF dialing



Activating tone dialing/DTMF suffix-dialing

You can transmit dual-tone multifrequency (DTMF) signals to control devices such as an answering machine or automatic information system.

Open the Program/Service menu → page 39.

Select and confirm the option shown.

Select and confirm the option shown.



You can use the keys + through , and to transmit DTMF signals.



Ending the call also deactivates DTMF suffix dialing. Your system may be configured so that you can start DTMF suffix-dialing immediately after setting up a connection.

Recording a call

If configured (contact your service personnel), you can record an ongoing call.

Prerequisite: You are on a call, the "Recording" key is configured → page 81.



Press the "Recording" key. The LED lights up.

You and the other party hear an acoustic announcement, indicating that recording has started, and an acoustic signal is emitted approx. every 15 seconds during the entire recording session.



During recording, it is not possible to add further call parties.

Stopping recording



Press the illuminated "Recording" key. The LED goes out.

Listening to a recording

Playback of the recording depends on the voice recording system used (see the associated user guide).

Step by Step

Transferring a call after a speaker call announcement in a group

If this function has been configured (contact your service personnel), you can use a speaker call (announcement, → page 135) to announce a call in progress to a group of users → page 59. After a member of the group has accepted the call request, you can transfer the waiting party.

Prerequisite: You are conducting a call.

Consultation



Confirm. The other party is placed on hold.

Calls →

Open the Program/Service menu → page 39.

Speaker call

Select and confirm the option shown.



Select and confirm the option shown.

Enter the group's station number.



Announce the call.

When a member of the group accepts the call → page 52, you are connected to this party.



Replace the handset.

or

Transfer

Select and confirm the option shown.^[1]



If the connection between the two other parties is not established within 45 seconds, the call from the first party returns to you (recall).

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Sending a trunk flash

To activate ISDN-type services and features through the network carrier's analog trunks or those of other communications platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

Prerequisite: You have set up an external connection.



Open the Program/Service menu → page 39.

Calls →

Select and confirm the option shown.

Trunk flash

Select and confirm the option shown.^[1]



Enter the service code and/or telephone number.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Camp-on

If you cannot reach a destination

Call waiting (camp-on)

Prerequisite: You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Wait (approx. 5 seconds) until "Camp-on" appears on the display and the busy tone is followed by the ring tone.

The called party can then respond → page 62.



The called party can prevent automatic call waiting → page 63.

If this feature is configured (contact your service personnel), you will hear the ring tone and the message "Camp-on" is immediately displayed.

Override

Busy override – joining a call in progress

This function is only possible if configured by your service personnel.

Prerequisite: You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Select and confirm the option shown.

The called party and person to whom this party is talking hear an alerting tone every two seconds.

If the called party has a system telephone with display, the following appears on the screen: "Override: (number or name)".

You can now start talking.

Step by Step

Night answer on

*=default

or



Save

Night answer off

Using night answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by service personnel (standard night answer service) or by you (temporary night answer service).

Activating

Select and confirm the option shown.

Press the "OK" dialog key to confirm (standard night answer service).

Enter the destination number (temporary night answer service).

Confirm.

Deactivating

Select and confirm the option shown.

Service personnel can also configure an "automatic night answer service". The automatic night answer service activates at specific times for your telephone depending on how it is programmed.

You can deactivate the automatic night answer service or replace it with a night answer service you configured.

Step by Step

Call forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (An external destination requires special configuration in the system.)

Select your preferred method:

- "Call forwarding key" → page 74
- "Activating call forwarding via the Program/Service menu" → page 77

You can program additional call forwarding instructions via the Program/Service menu, "Using system forwarding instructions" → page 79.



When call forwarding is active, a special dial tone sounds when you lift the handset.

If DID DTMF is active (contact your service personnel), you can also forward calls to this destination.

The call forwarding key flashes if you are a call forwarding destination → page 17.

Active call forwarding indication

An active call forwarding instruction is indicated on the display when your phone is idle → page 27:



The LED lights up.

The call forwarding icon, the station number and, where applicable, the name of the forwarding destination are displayed on the first line below the status bar.

The name of the party is used if stored in the phonebook.



220870 Dalai Lama

If call forwarding is activated for internal or external calls, the number is preceded by the abbreviation "INT" or "EXT".



INT Dalai, Lama

Step by Step

Overview of call forwarding types

Different input masks are displayed depending on how you program call forwarding (call forwarding key → page 74 or Program/Service menu → page 77). The entries in the relevant menus correspond as explained in the following table:

Call forwarding key	Program/Service menu
Variable: All calls	1=all calls
All calls are forwarded, the saved number is deleted after shutdown.	
Variable: External calls	2=external calls only
Only external calls are forwarded.	
Variable: Internal calls	3=internal calls only
Only internal calls are forwarded.	

Call forwarding key



The call forwarding key offers a quick way to activate/deactivate call forwarding instructions → page 77 and open the "Forwarding" page where you can edit these instructions → page 74.

Editing call forwarding instructions

Press the call forwarding key to open the "Forwarding" page. It provides an overview of all call forwarding types → page 74. You can select a call forwarding type here and set station numbers as forwarding destinations.



Press the key quickly. The LED lights up.

Edit call forwarding

Select and confirm the option shown.

The "Forwarding" page opens.

Variable: All calls →

Select a call forwarding type → page 74.



Confirm the option shown to enter a forwarding destination directly → page 75.

or



Enter the station number via a context menu → page 75.

The forwarding destination is automatically deleted when call forwarding is deactivated → page 78.




All changes made here take effect immediately after a short timeout.

Step by Step

Editing forwarding destinations

Entering a station number directly

Prerequisite: The cursor is in a station number input field.

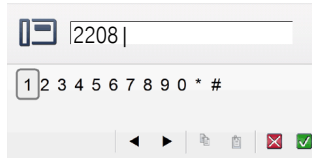

Enter the station number.



or



Select and confirm the option shown to insert the station number just copied → page 75.



Select and confirm the option shown.

Entering a station number via a context menu

Prerequisite: You selected a call forwarding type → page 74.



Open the context menu.

Enter destination

Select and confirm the option shown.



Enter the station number.



Select and confirm the option shown.

or

Paste

Select and confirm the option shown to insert the station number just copied → page 75.

or

220870

Select and confirm a forwarding destination in the list of favorites → page 76.

Copying a station number

Prerequisite: The cursor is in an input field that contains a station number:



Select and confirm the option shown to copy the station number.



The station number copied remains in the clipboard until you copy another station number or you finish editing call forwarding.


Step by Step

Saving a station number as a favorite for call forwarding

You can save up to five station numbers as favorites. These station numbers then appear in the context menu when you are programming a call forwarding destination.

If you use a station number for a contact that is already stored in the personal phonebook, the submenu for the call forwarding type selected shows the relevant name with the appropriate icon rather than the station number.

Example:



Press the key shown.

Edit call forwarding

Select and confirm the option shown.

Variable: All calls →

The "Forwarding" page opens.

Select a call forwarding instruction of your choice.




Open the context menu.

Edit favourites

Select and confirm the option shown.

The "Edit favourite numbers" page opens. Existing station numbers are displayed.



Select and confirm the station number input field, e.g. "1".



Enter the station number → page 75.



Select the "Options" entry.

Save & exit →

Select and confirm the option shown.

Save & exit

Confirm the option shown in the context menu.

Step by Step

Forwarding express activation for "all calls"



Press the key quickly. The LED lights up.



Enter the forwarding destination → page 75.

Set forwarding

Confirm.

or

The last forwarding destination saved for "all calls" is the first entry in the pop-up menu:

1 Dalai, Lama

Select and confirm the option shown.

Call forwarding is now active for all calls. The forwarding destination is automatically deleted when call forwarding is deactivated → page 78.

Activating call forwarding via the Program/Service menu

Configuration via the Program/Service menu



Open the idle menu → page 27.



Special features must be taken into consideration if your telephone operates with IP-Netpackage (system networking via PC network) → page 141!

Forwarding on

Select and confirm the option shown.

1=all calls

Confirm.

or

2=external calls only

Select and confirm the option shown.

or

3=internal calls only

Select and confirm the option shown.



Enter the destination number.

Save

Confirm.

Step by Step

Deactivating call forwarding



Press the lit key. The LED goes out.

or



Open the idle menu → page 27.

Forwarding off

Select and confirm the option shown.

Step by Step

Using system forwarding instructions

Call forwarding no reply (CFNR)

Calls that are not answered after three rings (=default, can be adjusted by service personnel) or that are received while another call is on-going can be automatically forwarded to a specified telephone.



Open the Program/Service menu → page 39.

Destinations →

Confirm.

CFNR on

Select and confirm the option shown.

if nec.

If a phone number is already entered:

Change

Confirm.



Enter the destination phone number.

- Enter the internal station number for internal destinations.
- Enter the external code and the external station number for external destinations.

Save

Confirm.

Deactivating call forwarding/deleting a destination



Open the Program/Service menu → page 39.

Destinations →

Confirm.

CFNR off

Select and confirm the option shown.

Delete

Confirm the option shown to deactivate and delete the forwarding destination.

or

Exit

Select and confirm to deactivate but not delete the forwarding destination.



If CFNR is activated, "CFNR on" appears briefly on the display when you hang up.

Step by Step

Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN)

If this function has been configured (contact your service personnel), you can forward calls to your assigned multiple subscriber number (MSN) (DID number) directly within the carrier network. For example, you can forward your phone line to your home phone after business hours.

Trunk FWD on

Select and confirm the option shown.

1=immediate

Select and confirm the call forwarding type required.

or

2=on no answer

or

3=on busy



Enter your DID number.



Enter the destination number (without the external code).

Save

Confirm.

Deactivating call forwarding

Trunk FWD off

Select and confirm the option shown.

Confirm the displayed call forwarding type.

or

1 or 2 abc or 3 def

Enter the activated call forwarding type.



Enter your DID number.

Step by Step

Programming sensor keys

You can program frequently used functions, phone numbers or procedures on your Octophon F660/680 TDM's sensor keys.

Configuring function keys

See also → page 21.

Example: Programming the Shift key

Assign functionality



Press and hold the required sensor key.

Confirm the option shown.

or



Open the Program/Service menu → page 39.

Key assignments

Select and confirm the option shown.



Press the required sensor key.

If the key is already in use, the programmed phone number appears on the screen.

Change key

Confirm the option shown.



A list of all available functions is displayed, see the overview → page 82.

More features →

Select and confirm the option shown.

Shift Key

Confirm the option shown.

if nec.

Save incomplete

Select and confirm the option shown.

Some functions (e.g. with "Call forwarding") cannot be saved completely. This means that when later initiating the function by pressing the button, further inputs are required.

Save

Confirm.



The programmed function is activated by briefly touching the key. For functions that can be switched on/off such as "Do not disturb", press once to switch the function on and press again to switch the function off. When the function is switched on, the LED lights up.

Step by Step

The label appears automatically and can be altered → page 87.

The LED displays → page 21 and → page 82 show the status of the function.

Overview of functions

The functions are split into the following menus:

- Destinations
- Feature Settings
- PIN and Authorization
- Calls
- More features



The available functions depend on your configuration. If a function is missing, contact your service personnel.

Saved function LED messages

Call forwarding, Forwarding - trunk, Forward line, Night answer, Do not disturb, Telephone lock, Advisory message, Ringer cutoff, HF answerback on/off, Join/leave group, Caller ID suppression, Call wait.term., Waiting tone off, Ring Transfer, Recording, Door opener on/off, Control Relay (only for Octopus F100/200/400/650), Ringing group on, Shift Key, UCD (Available on/off, Work on/off), Night answer on/off, MULAP Privacy Release:



Saved function is not activated.



Saved function is activated.

Callback:



You have no entry for callback.



You have an entry for callback.

Redial key (Internal number, DSS):



Party not on a call.



Party is on a call or has activated DND.



Flashing quickly - I'm being called, please accept.

Flashing slowly - another party is being called and has not yet answered.

Call key, General call key, Trunk key, MULAP Key, Temporary MSN:



No call via corresponding trunk.



Active call via the corresponding trunk.



Flashing quickly - call on the relevant trunk, call pickup is possible by pressing the sensor key.

Flashing slowly - a call is placed on hold on the relevant trunk.

Step by Step

Trunk group key:

At least one trunk is free.



All lines in this trunk group are occupied.

View call charges:

No chargeable calls have been set up since the last check.



Chargeable calls have been set up since the last check.

Call forwarding, Forward Line:

Flashing slowly - your line is a call forwarding destination.

Fax details:

No fax received or no message on the answering machine.



Fax received or message on the answering machine.

View number of calls:

No waiting callers.



Flashing quickly - callers waiting (certain number is exceeded).

Flashing quickly - callers waiting (certain number is reached).

Data I/O Service:

No connection to an application.



Active connection to an application.



Flashing slowly, connection to an application is temporarily interrupted.

The following functions saved on keys do not support LED:

Redial key (external), Procedure key, Trace call, Speed dial, Clear, Lock all phones, Send message, Directory (1=internal, 2=LDAP), Call waiting, Toggle/Connect, Conference, Speaker call, Retrieve line, Reserve trunk, Release trunk, Temporary Phone, Override, Park a call, Pickup - directed, Pickup - group, Account code, Show call charges, Page, Answer page, Timed reminder, Open door, DTMF dialing, Recall-key, Room monitor, Hold key, Consult internal, Consultation, Associated dial, , Tel. data service, Relocate, Mobile Login, Discreet calling.

Step by Step

Programming a procedure key

Numbers and functions which require further input, i.e. which contain several operating steps, can be saved on a key on your telephone.

Assign functionality

Press and hold the required sensor key.

Select and confirm the option shown.

or



Open the Program/Service menu → page 39.

Key assignments

Select and confirm the option shown.

Press the required sensor key.

If the key is already in use, the programmed phone number appears on the screen.

Change key

Confirm the option shown.

Change key

Confirm.

More features →

Select and confirm the option shown.

Procedure key

Confirm.



Enter procedure. Example:



Code for associated dialing.



Number of the phone to for which the call should be made.



the number to be called.

if nec.

Press "Pause" to enter pauses (a "P" appears on the display).

Save

Confirm.

or

If you make a mistake:

previous

Select and confirm the option shown.
This deletes all entered digits.

if nec.

Key label


Select and confirm the option shown → page 87.

Exit

Confirm.

Step by Step

or

Another key

Select and confirm the option shown.



Select the stored procedure by clicking the sensor key. Procedures with activatable/deactivatable functions are activated by pressing the sensor key once and deactivated by pressing it again.

You can press the procedure key during a call to automatically send the saved digits as DTMF signals → page 68.

Step by Step

Configuring repdial keys

You can also program internal and external station numbers on the second level. The LED function is not available for internal station numbers on the second level.

To program the second level, you must program a "Shift" key → page 81.

See also → page 21.



Press and hold the required sensor key.

Assign functionality

Select and confirm the option shown.

or



Open the Program/Service menu → page 39.

Prog. feature key

Select and confirm the option shown.



Press the required sensor key.

If the key is already in use, the programmed phone number appears on the screen.

if nec.

Next layer

Select and confirm to save the phone number on the second level.

Change key

Confirm.

Destinations →

Confirm.

Redial key

Confirm.



Enter the station number.

or

Speed dial

Select and confirm the option shown.



Enter the speed-dial number (the speed-dial numbers correspond to the system phonebook → page 35).

if nec.

Key label

Select and confirm the option shown → page 87.

Exit

Confirm.

or

Another key

Select and confirm the option shown.

Step by Step

Changing the label

The label set when a repdial key was programmed can also be subsequently changed.

Changing the label



Open the Program/Service menu → page 39.

Prog. feature key

Select and confirm the option shown.



Press the required sensor key.
The seizure is displayed on the screen.

Change key

Confirm.

if nec.

+Next layer

Select and confirm to make the change on the second level.

Key label

Select and confirm the option shown.

Change

Confirm.



Enter the required key label text → page 23.

Change

Confirm.

or

Default label

Select and confirm to reset to the default label.

Save

Select and confirm the option shown.

or

Previous

Select and confirm to cancel the entry.

Exit

Confirm.

Step by Step

Deleting sensor key programming

Assign functionality



Hold down the required key.

if nec.

Select and confirm the option shown.

Next layer

Select and confirm the option shown to delete the entries on the second level.

Clear key

Select and confirm the option shown.

Exit

Select and confirm the option shown.

Step by Step

Phonebooks and call lists

Personal phonebook

For a detailed description of this function, see → page 33.

Creating a new contact


 Options →


Press the key until the "Personal" tab is active.

Confirm.


 New contact

Confirm.


The form for entering contact data opens.


 Last name

Confirm.



Enter and confirm text → page 25.


 Business 1

Select and confirm the option shown.



Enter and confirm the phone number → page 23.

if nec.



Select and fill out additional fields.



Select the "Options" entry.


 Save & exit

Select and confirm the option shown.

or




Press the key shown.


 Save

Confirm.

Defining the default number

If you have multiple numbers saved for a contact, you can define the default number here that should be used when dialing directly using the phonebook → page 55.


 Niels, Bohr →


Press the key until the "Personal" tab is active.

Select a contact.



Open the context menu.


 Details


Select and confirm the option shown.

Select the "Default No." entry.

Step by Step




The phone displays the current setting.
Confirm.



Select and confirm the required phone number.



Select the "Options" entry.




Select and confirm the option shown.

or



Press the key shown.



Confirm.

Saving a picture for a contact

Prerequisite: Your service personnel have loaded pictures to the Octophon F660/680.




Press the key until the "Personal" tab is active.



Select a contact.




Open the context menu.




Select and confirm the option shown.

Select the "Picture" entry.




The phone displays the current setting.
Confirm.



Select and confirm the picture you wish to use.



Select the "Options" entry.




Select and confirm the option shown.

or














Press the key shown.



Confirm.

Step by Step

Changing contact data

-  Press the key until the "Personal" tab is active.
-  **Niels, Bohr** → Select a contact.
- Open the context menu.
-  **Details** Select and confirm the option shown.
-  Select the required field.
- if nec.  Delete existing text.
-  Enter and confirm the new text → page 25.
- if nec.  Select and edit additional fields.
-  Select the "Options" entry.
-  **Save & exit** Select and confirm the option shown.
- or
-  Press the key shown.
-  **Save** Confirm.

Step by Step

Managing the phonebook

Defining the contact display format



Press the key until the "Personal" tab is active.

Options →

Confirm.

Display

Select and confirm the option shown in the context menu.



Select and confirm the display format.

Example	Option
Miller, Peter	Lastname, Firstname
Peter Miller	Firstname Lastname
Miller, P	Lastname, F
P Miller	F Lastname



Press the key shown.

The display format is changed immediately.

Deleting contacts from the phonebook



Press the key until the "Personal" tab is active.

Niels, Bohr →

Select a contact.



Open the context menu.

Delete

Select and confirm the option shown.

Delete

Confirm in the pop-up menu.

The selected entry is deleted.

Deleting all phonebook entries



Press the key until the "Personal" tab is active.

Options →

Confirm.

Delete all

Select and confirm the option shown in the context menu.

Delete all entries

Confirm in the pop-up menu.

All entries are deleted.

Step by Step

Managing groups

Creating a group



Press the key until the "Personal" tab is active.

Options →

Confirm.

Groups

Select and confirm the option shown in the context menu.

Options →

Confirm.

New group

Confirm the option shown in the context menu.

Select the "Group name" entry.

Confirm.



Give the group a name → page 25.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

The new group is stored.

Adding a contact to a group



Press the key until the "Personal" tab is active.

1 Niels, Bohr →

Select a contact.



Open the context menu.

Details

Select and confirm the option shown.

Select the "Groups" entry.

No group →

Confirm.

VIP

In the context menu, select and confirm a group.



Select the "Options" entry.


Save & exit

Select and confirm the option shown.

Step by Step



Press the key shown.



Confirm.




Press the key until the "Personal" tab is active.



Select a contact.




Open the context menu.




Select and confirm the option shown.

Select the "Groups" entry.




Confirm.



Select and confirm the option shown in the context menu.




Select the "Options" entry.



Select and confirm the option shown.




Press the key shown.




Confirm.




Press the key until the "Personal" tab is active.




Confirm.




Select and confirm the option shown in the context menu.



Select and confirm a group.



Select and confirm the option shown.



Confirm in the pop-up menu.

The group is deleted and, if necessary, any assigned contacts remain saved in the phonebook.

Step by Step

LDAP database

Information about the LDAP directory can also be found on
→ page 35.

Finding an LDAP entry

If configured (ask your service personnel), you can search for directory data in the LDAP database and dial the number of any subscriber you find there.

Prerequisite: The LDAP search feature has been configured in the system.



Lift the handset.

or



Press the key shown. The LED lights up.

or



Open the idle menu → page 27.

Phonebook

Confirm the option shown.

if nec.

If several directories have been configured:

2=LDAP

Select and confirm the option shown.



Enter the name you wish to search for using the keypad → page 23
(max. 16 characters).

You can enter an incomplete name, e.g. "mei" for "Meier".

if nec.

If configured (ask your service personnel), you can also search for surname and first name. To separate surname and first name by a space, enter "0". You can enter incomplete names, e.g. "mei p" for "Meier Peter".

if nec.

Delete letter

Select and confirm each letter to be deleted. The last letter entered is deleted.



In large databases, the results of the search may be incomplete if too few characters are entered → page 96.


Find

Confirm the option shown.

The name is searched for. This may take a few seconds.

Step by Step

Call



or

Scroll forward

or

Scroll back

Call

Modify search

Display results

Modify search

The result is displayed

If only one name is found, it is displayed.
Confirm the option shown.

If several names are found (max. 50), the first name is displayed.

Press

select and confirm the option shown

select and confirm the option shown

Select and confirm the option shown.

If no name is found

If your search does not yield any name corresponding to your query, you can extend the range of the search, e.g. by deleting characters.

Select and confirm the option shown.
For further procedure, see above.

If too many names are found

If more than the maximum of 50 names are found corresponding to your query, only an incomplete list of results can be displayed.

You can view these results, select any of the names, or change the search string (e.g. narrow the search by entering more characters).



In this case it is advisable to narrow down the search so that all corresponding names can be displayed.

Confirm, to view the incomplete list.
For further procedure, see above.

or

Narrow the search down.

Select and confirm, in order to change the search string.
For further procedure, see above.

Step by Step

Call lists

For a detailed description of this function, see → page 36.

View details



Press the key until the call list you want is active.

Niels, Bohr 18.10.

Select the entry you want.



Open the context menu → page 29.

Details

Select and confirm the option shown.

For illustrated examples and descriptions of the displayed information, refer to → page 37.

Deleting entries

Deleting an individual entry



Press the key until the call list you want is active.

Niels, Bohr 18.10.

Select the entry you want.



Open the context menu → page 29.

Delete

Select and confirm the option shown.

The entry is deleted.

Deleting all entries in a list



Press the key until the call list you want is active.

Options →

Confirm.

Delete All

Confirm the option shown in the context menu.


All entries in the list displayed are deleted.

Step by Step

Copying entries from the call logs into the personal phonebook



Press the key until the call list you want is active.

 **Niels, Bohr 18.10. 07:06am**

Select the entry you want.

Copy as contact

Select and confirm the option shown in the context menu.

You have the following options for "Create contact":

- Saving and changing
- Saving without changing
- Exiting (without saving)

Saving and changing

Saving and changing

Select and confirm the option shown.

The mask to edit a contact in the personal phonebook opens

→ page 91. Fill out the relevant fields accordingly and save the new contact.

Saving without changing

Saving without changing

Select and confirm the option shown.

An entry is created and the message "Contact created" is displayed.

If you open the phonebook, you will be prompted to update the directory. For this type of entries a group "Copied contacts" is created so that you can find them more easily.

Step by Step

Displaying and assigning call charges

Displaying call charges

For the current call

Call charges are shown by default on the display when a call ends. If you want to display call charges as they occur during a chargeable call, your service personnel must request this option from the network operator.

Call charge display must be requested from the network operator and configured by the relevant service personnel.

Depending on the setting, call charges are displayed during or after a call.

Depending on the network operator, free external calls are also displayed. The message "Free of Charge" appears on the screen either before or during the call.

If the cost indication facility has not been installed, the display will show the dialed number and/or the length of the telephone call.



If a call is forwarded, call charges are assigned to the destination of the call transfer operation.

For all calls and for the last call

Connection charges for the last chargeable call made are displayed first. After five seconds, the accumulated connection charge (total) is displayed.



Open the Program/Service menu → page 39.

More features →

Select and confirm the option shown.

Show call charges

Select and confirm the option shown^[1].

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Displaying call charges for another telephone

If configured (contact your service personnel), you can also display and print chargeable calls for another phone (for instance, for a pay phone).

Prerequisite: You have programmed the function "Show call charges" on a key → page 81.

The LED lights up to indicate that you have conducted a chargeable call since the last time you viewed the charges.

Press the "Call Charges" key. Chargeable calls are displayed.



Select a connection.

Print

Select and confirm the option shown,

or

Delete

select and confirm the option shown,

or

Add'l information

select and confirm the option shown,

or

Exit

select and confirm the option shown.

Step by Step

Dialing with call charge assignment

You can assign external calls to certain projects.

Prerequisite: Your service personnel have defined account codes for you.



Open the Program/Service menu → page 39.

Calls →

Select and confirm the option shown.

Account code

Select and confirm the option shown.



Enter the account code.

if nec.



Press the key shown,

or

#=Save

Confirm.

Must be configured (consult your service personnel):



Enter the external phone number.




You can also enter the account code during a call.

Step by Step

Privacy/security

User password

The user password protects access to the user menu → page 39.

 The preset password "000000" is a blank password, that is, the "User" menu is freely accessible.



Press the key shown until the "Settings" tab is active.

User

Confirm.



Enter and confirm the user password → page 23.

Security

Select and confirm the option shown.

Select the "User password" entry.

Confirm.



If applicable, delete the old password.



Enter a new password (at least six digits) and confirm your entry.

Select the "Confirm password" entry.

Confirm.



Re-enter and confirm the password.

Select the "Phone lock" entry.

Disabled →

The phone displays the current setting.

Confirm.

Enabled

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

Step by Step

Turning ringer cutoff on and off

If you do not wish to take calls, you can activate the ringer cutoff function. Calls are only identified by **one** ring signal, an indication on the display, and a key which has been programmed to flash (such as a trunk key).

Activating

Open the idle menu → page 27.

Ringer cutoff on

Select and confirm the option shown.^[1]

Deactivating

Open the idle menu → page 27.

Ringer cutoff off

Confirm.

Deactivating the ring tone

You can deactivate your ring tone if you do not want to be disturbed by your phone ringing.

Deactivating

Press the key shown until the icon for the deactivated ringer appears on the display → page 24.

Activating

Press the key shown until the icon for the deactivated ringer disappears on the display.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

DND on


DND off

Suppress call ID

Restore caller ID

Do not disturb

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the busy tone, external callers are connected to another phone, which you can specify (contact your service personnel).

 In multi-line telephones, "Do not disturb" can only be used for the primary line → page 126.

Activating


Open the idle menu → page 27.

Select and confirm the option shown. The DND icon appears on the status bar → page 24.

Deactivating

Open the idle menu → page 27.

Confirm.

 When you lift the handset, you will hear a special tone (continuous buzzing) reminding you that "Do not disturb" is activated.

Authorized internal callers automatically override the DND feature after five seconds.

Suppressing your phone number on the called party's phone

You can prevent your station number or name from appearing on the displays of external parties you call. This setting remains active until you deactivate it.

Activating


Open the idle menu → page 27.

Select and confirm the option shown.


Deactivating

Open the idle menu → page 27.

Select and confirm the option shown.

 Your service personnel can activate/deactivate caller ID suppression for all phones.

Step by Step



Silent Monitor

When configured (ask responsible service personnel), you can join in an on-going call conducted by an internal user and monitor silently and unnoticed.

Enter the code.

Enter your internal station number.

Monitoring a room

You can use a phone to monitor a room. This function must be enabled on the monitoring phone.

When you call this phone, you can immediately hear what is happening in that room.

Activating the telephone to be monitored



Open the Program/Service menu → page 39.

Select and confirm the option shown.

You can either leave the telephone in speakerphone mode or lift the handset and leave it directed towards the noise source.

Deactivating the telephone to be monitored



Press the lit key. The LED goes out.

or



Replace the handset.

Monitoring the room



Enter the internal station number of the phone located in the room that you wish to monitor.

Room monitor

Step by Step

Trace call: identifying anonymous callers

You can identify malicious external callers. You can record the caller's phone number during a call or up to 30 seconds after a call. In this case, you should not hang up.



Open the Program/Service menu → page 39.

Trace call

Select and confirm the option shown.



If the trace is successful, the transmitted data is stored by your network operator. Contact your service personnel.

Step by Step

Locking the telephone to prevent unauthorized use

You can prevent unauthorized parties from using your phone during your absence.

Locking the phone



Open the idle menu → page 27.

Lock phone

Select and confirm the option shown.

or



Press the key shown.



Enter code (telephone lock) → page 109.

The padlock icon appears on the status bar → page 24.

Unlocking the phone



Open the idle menu → page 27.

Unlock phone

Select and confirm the option shown.

or



Press the key shown.



Enter code (telephone lock) → page 109.



When the phone is locked, a special dial tone sounds when the handset is lifted. Within the system, users can make calls as normal.

Your telephone can also be locked or unlocked again by an authorized party → page 108.

Step by Step

Locking another telephone to prevent unauthorized use

If configured (contact your service personnel), you can lock and unlock other telephones to prevent unauthorized access.

If a phone user locks his or her phone and forgets the personal lock code, you can use this function to unlock the phone.



Open the Program/Service menu → page 39.

Lock all phones

Confirm^[1].



Enter the internal station number of the phone you wish to lock/unlock.

***=lock phone**

Confirm.

or

#=unlock phone

Select and confirm the option shown.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Saving your PIN

Enter the lock code to use the functions

- Locking the phone → page 107
- Use another telephone like your own → page 115
- Change number → page 116

You can change this lock code on your own.



If you forget your code, contact your service personnel to have the default code restored.

The default code is "00000".



Open the Program/Service menu → page 39.

PIN and Authorization →

Select and confirm the option shown.

Change PIN

Select and confirm the option shown.^[1]



Enter the current five-digit PIN.

If you have not yet set a PIN, use "00000" the first time.



Enter the new PIN.



Re-enter the new PIN.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

More functions/services

Appointments function

You can program your telephone to send you a timed reminder call.

You must save the relevant time of the call for this. You can enter a single appointment that will take place in the next twenty-four hours or you can enter a daily recurring appointment.

Saving appointments



Open the Program/Service menu → page 39.

Timed reminder on

Select and confirm the option shown.



Enter a 4-digit time, such as 0905 for 9.05 (= 9.05 a.m.) or 1430 für 14.30 (= 2.30 p.m.).

possibly or

If the selected language is "US English" → page 157, you can enter the code 2 for "am" or 7 for "pm" (standard = "am").

one time only

Confirm.

or

Daily

Select and confirm the option shown.

Save

Confirm.

Deleting and checking a saved appointment



Open the Program/Service menu → page 39.

Timed reminder off

Select and confirm the option shown.

Delete

Confirm.
The reminder is deleted.

or

Exit

Select and confirm the option shown.
The reminder is not deleted.

Step by Step

Reminder at 1200



or



Using timed reminders

Prerequisite: You have saved a reminder → page 110. The saved time arrives.

The phone is ringing. The appointment time is displayed.

Press key twice.

Lift the handset and replace it again.



If you do not answer the timed reminder, it is repeated five times and then deleted.

Step by Step

Sending a message

You can send short text messages to individual stations or groups of stations with system telephones.

Creating and sending a message



Open the idle menu → page 27.

or



Open the context menu during a call

Send message

select and confirm the option shown.




0=Please callback

Enter the internal station number of the recipient or group.

Select predefined text (can be changed by service personnel) and confirm.

or



Enter the code.

The code is shown on your display with the corresponding message.

or

Enter message text

Select and confirm, for information on how to enter text → page 23.

Send

Confirm.



Transmitted text messages are saved as callback requests on system telephones with no display and on ISDN, pulse or tone dialing telephones.

Displaying and deleting messages you have sent



Prerequisite: The recipient has not yet accepted a sent message.

Open the idle menu → page 27.

View sent message

Select and confirm the option shown.

Message sent

Confirm.

The text message is displayed.

Delete

Select and confirm the option shown.

The message is deleted.

Step by Step



or

View messages

Confirm.

Message sent

The sender's caller ID appears on the display.

Confirm.

The text message appears on the display.

Time/date sent

Viewing the transmission time

Confirm.

Call sender

Calling the sender

Select and confirm the option shown.

Delete

Deleting messages

Select and confirm the option shown.

Step by Step

Leaving an advisory message

You can leave messages/advisory messages on your phone's display for internal callers that wish to contact you in your absence. When you receive a call, the message appears on the caller's display.



Open the idle menu → page 27.


Advisory msg. on

Select and confirm the option shown.

0=Will return at:

Select predefined text (can be changed by service personnel) and confirm.

or



Enter the code directly.

The code is shown on your display with the corresponding message.



Predefined messages with a colon can be completed by entering a digit.

or

Enter message text

Select and confirm, for information on how to enter text → page 23.

Save

Confirm.

Deleting advisory messages



Open the idle menu → page 27.

Advisory msg. off

Confirm.

or



The LED lights up if the "Advisory message" key is available → page 81. Press the key shown.

Step by Step

Displaying the number of waiting calls/ overload display

You can show the number of external waiting calls on the display by pressing the "View number of calls" key → page 81.



Press the "Calls in Q" key.

If the number of waiting calls exceeds a preset limit while you are engaged in another call (overload), the LED on the key lights up. Contact your service personnel to find out the waiting call limit.



LED off: There are no waiting calls.



- LED is flashing slowly:
The set limit has been reached.
- LED is flashing quickly:
The limit has been exceeded (overload).

Using another telephone like your own for a call

Other parties can temporarily use your phone like their own for an outgoing call.



Open the Program/Service menu → page 39.

PIN and Authorization →

Select and confirm the option shown.

Temporary Phone

Displaying and deleting messages you have sent



Enter the number of the other user.



Enter the other user's lock code → page 102.

if nec.

Change PIN

If the other user has not set a PIN, he or she is prompted to do so on his or her phone.



Enter the external phone number.

Step by Step

Change number (exchanged phone/ move/relocate)

When configured (consult your service personnel), you can move your number to any other phone.

Your phone to date is then assigned the old number of your new phone; the number including phone settings (e. g. programmed keys) are exchanged.

Prerequisite: Your old and new telephone are the first telephones at each connection. The telephones are in idle state.

The following procedure is carried out on the new phone.



Open the Program/Service menu → page 39.

Relocate

Select and confirm the option shown.



Enter own station number.



Enter code (telephone lock) → page 102.
(Not necessary if you have not set a code.)

Complete relocate

Confirm.



If you change numbers of different system phones, programmed keys are replaced with the default assignment. You can however connect your phone to a different port and then carry out the procedure.

Step by Step

Fax details and message on answering machine

If a fax or answering machine is connected to your system and you have assigned the "Fax details" function to a programmable key → page 81, the key lights up when a fax or a message has been received.

Deactivating signaling



Press the flashing key "Fax service". The LED goes out.

Resetting services and functions (system-wide cancellation for a telephone)

A general reset procedure is available for initiated functions. The following functions are deleted, if enabled:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunt group off
- Suppress call ID
- Call waiting tone off
- Do not disturb on
- Ringer cutoff on
- Received messages:
- View callbacks



Open the Program/Service menu → page 39.

More features →

Select and confirm the option shown.

Reset services

Select and confirm the option shown^[1].

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Activating functions for another telephone

If configured (contact your service personnel), you can activate and deactivate the following functions for other phones (associated service):

- Do not disturb,
code: *97/#97 → page 104
- Call forwarding,
code: *11, *12, *13/#1 → page 77
- Lock and unlock phone,
code *66/#66 → page 107
- Ringing group
code *81/#81 → page 135
- Leave an advisory message,
code *69/#69 → page 112
- Group call,
code *85/#85 → page 135
- Reset services and functions,
code #0 → page 117
- Control relays,
code *90/#90 → page 124
- Night answer,
code *44/#44 → page 72
- Timed reminders,
code *46/#46 → page 110



Open the Program/Service menu → page 39.

Associated serv.

Select and confirm the option shown.



Enter the internal station number of the phone where you wish to activate the function.



Enter code (for example, *97 for "Do not disturb on").

For any additional input, follow the instructions on your display.

Step by Step

Using system functions from outside DISA (direct inward system access)

If configured (contact your service personnel), you can use an external phone like an internal station to set up an outgoing external connection via the system. You can also activate or deactivate the following system functions:

- Reset services and functions, code #0 → page 117
- Call forwarding, code *1/#1 → page 77
- Lock and unlock phone, code *66/#66 → page 107
- Save your PIN, code *93 → page 109
- Send a message, code *68/#68 → page 112
- Leave an advisory message, code *69/#69 → page 114
- Ringing group, code *81/#81 → page 135
- Group call, code *85/#85 → page 135
- Caller ID suppression, code *86/#86 → page 104
- Camp-on tone, code *87/#87 → page 63
- Open door, code *61 → page 53
- Release door opener, code *89/#89 → page 54
- Control relays, code *90/#90 → page 124
- Do not disturb, code *97/#97 → page 104
- Ringer cutoff, code *98/#98 → page 103
- Dial using speed dial, code *7 → page 57
- Associated service, code *83 → page 118

Prerequisite: Your phone supports tone dialing (DTMF) or you can switch your phone to tone dialing. The phone is not connected to the system.



Establish a connection to the system. Enter the station number (contact your service personnel).

Step by Step



Wait for the continuous tone (if necessary, switch phone to tone dialing) and enter the internal number assigned to you and the corresponding PIN.



Enter the code (only required if programmed in the system).



Wait for the dial tone and enter the code for example, *97 for Do not disturb on. If necessary, make further entries; refer also to the user guide for dial pulse/DTMF phones.

or



Dial the external number.



You can only perform one function/establish one outgoing connection at a time.

The connection is cleared as soon as the function is successfully activated.

In the case of an external call, the connection is cleared as soon as one of the call partners hangs up.

Step by Step

Keypad dialing



Open the Program/Service menu → page 39.



Select and confirm the option shown.



Enter the required trunk number (contact your service personnel).
Entering a code for required ISDN function (contact your service personnel).



Contact your network provider to find out which ISDN functions can be code-operated in your country.

Deutsche Telekom AG shall not be liable for damages/costs which may be incurred by fraudulent activities or remote operation (such as toll fraud).

Step by Step

Controlling Connected Computer or Their Programs/Tel. Data Service

If this function has been configured (contact your service personnel), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

Prerequisite: You have set up a connection.

 Open the Program/Service menu → page 39.

Tel. data service

Confirm.

For entering data, you are guided by the connected computer. However, depending on configuration (contact your service personnel), you must activate your entries in one of the following ways:

Inputs in en-bloc mode



Enter data.



Complete entry.

or

Entry complete

Select and confirm the option shown.

Inputs in online mode

The connected computer processes your entries directly.



Complete entry.



Enter data.

Step by Step

Communicating with PC applications over a CSTA interface


If configured (contact your service personnel), you can use your phone to communicate with PC applications (CSTA = **C**omputer **S**upported **T**elecommunications **A**pplications). You send information to the application and receive information from the application, for example, via your phone display.



Press the "Data I/O" key, key programming → page 81.



Enter the three-digit ID for the application you wish to control.



Use the TouchGuide and the keypad for communication with the application.

Temporarily interrupting communication with the application



The phone is ringing. You answer the call.




The LED on the "Data I/O" key flashes: Communication to the application is automatically interrupted.

Resuming communication with the application



Press the flashing "Data I/O" key. The LED lights up.

Ending communication with the application



Select and confirm the relevant CSTA message.

or



Lift the handset and replace it again.

Step by Step

Controlling relays (only for Octopus F100/200/400/650)

If this function has been configured (contact your service personnel), you can use up to four relays to enable/disable different devices (such as a door opener).

Depending on how you program the relays, you can activate and deactivate them manually them or configure them to activate and deactivate automatically (after timeout).



Special features must be taken into consideration if your telephone operates with IP-Netpackage (system networking via PC network) → page 124!

Control Relay On

or

Control Relay Off



Enter the relay.

Sensors (Octopus F100/200/400 only)

If configured (consult your service personnel), sensors are able to recognize signals, call your phone, and display an appropriate message on the screen.

Step by Step

Paging persons

If radio paging equipment (PSE) is connected to your system (contact your service personnel), you can locate people via their pocket receivers.

Pocket receivers signal a call request to the person you want to page. This person can then answer the page at the nearest phone.

Paging persons

To ensure that you can be found, you must have enabled a ringing group → page 135, call forwarding → page 73 or call forwarding-no answer to the internal station number of your PSE.

A call request is signaled automatically.

Answering the page from the nearest telephone



Lift the handset.



Enter the code.



Enter own station number.

Making calls in the team/executive/secretary configuration

If configured (consult your service personnel), you belong to a team of subscribers with multiple lines (multi-line → page 12). Your phone features trunk keys (MULAP keys) → page 127.

Lines

A distinction is made between primary and secondary lines. Each of these line types can be used on a private or shared basis → page 126.

Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls are signaled on this line.

Secondary line

The secondary line on your phone is used as a primary line by another subscriber. Your primary line, which is configured on another telephone, simultaneously functions as the secondary line on that telephone.

Line utilization

Private line

A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.

Shared line

A line that is configured on multiple telephones. The line status (if configured) is displayed for all telephones that share this line. If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones.

Direct call line

A line with a direct connection to another telephone.

You can see the status of the line from the LED.

Line seizure

Line seizure must be configured (consult your service personnel). If automatic line seizure is configured, a trunk is automatically assigned when you lift the handset or press the trunk key.

Step by Step

Trunk keys




The programmable sensor keys on multi-line phones function as trunk keys. Every sensor key programmed as a "Trunk key" (key label: Transfer Trk) corresponds to a trunk with the result that you can configure up to eight trunks in Octophon F660/680 TDM.

As a team member, you can independently program the following functions on sensor keys → page 81:

- Direct station select
- Join/leave group
(not available on executive phone in an executive/secretary team)
- Ring Transfer: On/Off
(only in an executive/secretary team)

You can also program a sensor key with the function "Forward Line" (call forwarding) for each line.


LED displays on trunk keys

LED		Explanation
	Off	- The line is in idle mode.
	Flashing ^[1]	- Incoming call on the line - Hold reminder is activated - The line is on "Hold".
	On	- The line is busy.

[1] In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

Step by Step

Answering calls with the trunk keys

if nec. 

Prerequisite: You can see an incoming call on a trunk.

Press the trunk key that is flashing quickly.
(only if Prime Line → page 126 is not active).



Lift the handset.

or

Speakerphone mode.

Dialing with trunk keys

if nec. 

Select a line (only if Prime Line → page 126 is not active).



Enter the station number.



Lift the handset.

or

Speakerphone mode.

Placing a call on hold on a trunk key and retrieving the held call


Prerequisite: You are conducting a call via one of your group's trunks. The "Hold" key has been programmed on your telephone → page 81.

Hold



Press the "Hold" key.

if nec.



Replace the handset or press the key shown.

Depending on the configuration (contact your service personnel), this may be necessary so other team members can also pick up the call on hold.

Retrieving the call



Press the trunk key flashing slowly.

Step by Step

Making calls on multiple lines alternately

Prerequisite: You are conducting a call via one of your group's trunks. Another trunk key is flashing.



Press the flashing trunk key. The first call party is on hold on the other trunk.



Press the trunk key flashing slowly. The second call party is on hold.

You can switch between lines as often as you wish. Press the trunk key flashing slowly each time.

MULAP conference release

If configured (consult your service personnel), you can program a sensor key on your phone with the function "MULAP Privacy Release" → page 81. The default label is "Priv Release".

If you program this key, you do not have to use the menu to set up a conference. Your team partner only has to press the flashing trunk key associated with your trunk on his or her phone to immediately join the conference.



You are conducting a call.



Press the "Priv Release" key. The LED lights up.

Up to three team members can now join the conference.

Prerequisite: The trunk on which you are speaking is configured on the other phone as a trunk key.






Press the flashing trunk key.

Step by Step

Direct station selection key

Your phone features a programmable sensor key configured for direct station selection for every team member.


Meaning of LED displays on DSS keys

LED		Meaning of function key
	Off	Team party not on a call.
	Flashing ^[1]	Quickly: I am being called, please accept. Slowly: Another party is being called and has not yet answered.
	On	Team party is on a call or has activated DND.

[1] In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

Using DSS keys to answer calls

Prerequisite: Your telephone rings or the DSS key flashes.

if nec. 

Press the flashing DSS key.



Lift the handset.

or



Press the key shown.

Calling a team member directly



Press the DSS key.

or



If the team member you wish to reach is engaged in another call, the DSS key on your telephone is lit. You can still make the call in this case.




Lift the handset.


or


Speakerphone mode.

Step by Step


Transferring a call in progress


 Press the DSS key and announce the call if necessary.

 Replace the handset.
or

 Press the key shown.

Accepting a call for another team member

 Press the flashing DSS key or trunk key.

 Lift the handset.

or Speakerphone mode.

Step by Step

Forwarding calls on trunks

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system).

Activating call forwarding for one trunk activates the function for all trunk keys assigned to this trunk in your group.



Open the Program/Service menu → page 39.

Forward Line: On

Select and confirm the option shown.



Press the required trunk key.

or



Enter the required trunk number.

or



If available. Press the "CFW MULAP" key.

(You have programmed a key with the incomplete "CFW MULAP" function, excluding the call forwarding type and destination → page 81.)

1=all calls

Confirm,

or

2=external calls only

select and confirm the option shown,

or

3=internal calls only

select and confirm the option shown.

or

1 or **2** abc or **3** def

Enter the code.



Enter the destination phone number.

Confirm.

or



If available. Press the "CFW MULAP" key. (You have programmed the "CFW MULAP" key with the call forwarding type and destination, → page 81.)

Step by Step

Forward Line: Off



Open the Program/Service menu → page 39.

Select and confirm the option shown.



Press the required trunk key.

or



Enter the required trunk number.

or



If available. Press the "CFW MULAP" key.



If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.

Understanding the LED displays on the sensor key for "CFW MULAP"



The LED on the "CFW MULAP" key is off - call forwarding is not active for this trunk.



The LED on the "CFW MULAP" key lights up - call forwarding is active for this trunk.



The LED on the "CFW MULAP" key is flashing **slowly**, the trunk is the call forwarding destination.

Step by Step

Transferring calls directly to the executive phone

Normally, all calls for the executive are audibly signaled only by the secretary phone.

You can set audible signaling so calls are signaled only by the executive phone or by a second phone assigned to it.

Prerequisite: On your phone there is a sensor key programmed with the function "Ring Transfer". The default label is "Ring xfer".



This function is only available for the executive/secretary configuration.

Activating



Press the "Ring xfer" key. The LED lights up.

or



Open the Program/Service menu → page 39.

Ring Transfer: On

Select and confirm the option shown.



Press the required trunk key.

or



Enter the required trunk number.

Deactivating



Press the "Ring xfer" key. The LED goes out.

or



Open the Program/Service menu → page 39.

Ring Transfer: Off

Select and confirm the option shown.



Press the required trunk key.

or



Enter the required trunk number.

Step by Step

Using team functions

If configured (consult your service personnel), your telephone is part of a team. The team consists of internal phones that are able to use certain functions.

Activating/deactivating a group call

If configured (consult your service personnel), you belong to one or more groups of stations, which can be reached via hunt group or group call station numbers.

Incoming calls are signaled one after the other (= hunt group) or simultaneously (= group call) on all phones in the group, until a group member answers the call.

You can also belong to a team (including executive/secretary configurations) in which station numbers are programmed on trunk keys → page 126.

Every group member can still be reached at his or her personal phone number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group (including executive/secretary).

If the LED on a programmed "Hunt group" key is illuminated → page 81, this means that the audible tone was activated for at least one group.



This function is not available for the executive phone in team/executive/secretary configurations.



Special features must be taken into consideration if your telephone operates with IP-Netpackage (system networking via PC network) → page 140!




Open the idle menu → page 27.

Leave group

or

Join group

or



or



Press the "Hunt group".

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

You belong to multiple groups or to one group with trunk keys (including executive/secretary configuration).



Open the idle menu → page 27.


Leave group

Select and confirm the option shown^[1],

or

Join group

select and confirm the option shown.



Press the " Hunt group".

301 X Group name

If an "X" appears between group/trunk number (such as 301) and group name, the audible tone is active for this group or trunk.

or

301 Group name

No "X" means that the audible tone is deactivated.

Next

Confirm. The next group/trunk number is displayed with a group name.

or

Leave group

Select and confirm the option shown^[1].
The audible tone for the group/trunk displayed is deactivated.

or

Join group

Select and confirm the option shown^[1].
The audible tone for the group/trunk displayed is activated.

or

#=Leave all groups

Select and confirm the option shown.^[1]
The audible tone for all groups and trunks is deactivated.

or

*=Rejoin all groups

Select and confirm the option shown^[1].
The audible tone for all groups and trunks is activated.



If you have activated the audible tone for another group/trunk or deactivated the audible tone for all groups/trunks you belong to, you will hear a special dial tone when you lift the handset.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Pickup - group

Destinations →

Ringing group on

Ringing group off

Accepting a call for another member of your team

You can use your own telephone to accept calls for other telephones in your team, even while engaged in an ongoing call. To do this, contact your service personnel to find out if a pickup group has been configured.

Prerequisite: Your telephone rings briefly. "Call for:" appears on the upper display line with the station number/name of the originator; the station number/name of the caller appears on the lower line. Select and confirm the option shown.

Ringing group

You can have calls for your telephone signaled audibly at up to five other internal phones. The phone that answers the call first receives the call.



Special features must be taken into consideration if your telephone operates with IP-Netpackage (system networking via PC network) → page 143!

Saving, displaying, and deleting telephones for the ringing group



Open the Program/Service menu → page 39.

Confirm.

Select and confirm the option shown.^[1]

Follow the display prompts (enter the internal station number).



If your phone belongs to a ringing group, your display will show the station number or the name of the originator on the upper line and that of the caller on the lower line.

Removing all telephones in a call ringing group



Open the idle menu → page 27.

Select and confirm the option shown.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Uniform Call Distribution (UCD)

If configured (consult your service personnel), you may belong to a group of stations (agents), to which calls are distributed. An incoming call is always assigned to the agent idle the longest.

Logging on and off at the beginning and end of your shift



Open the Program/Service menu → page 39.

Destinations →

Confirm.

UCD →

Select and confirm the option shown.^[1]

Log on

Confirm,

or

Log off

select and confirm the option shown.



To log on, enter your identification number ("Agent:"). Contact your service personnel to find out what it is.

Logging on and off during your shift



Open the Program/Service menu → page 39.

Destinations →

Confirm.

UCD →

Select and confirm the option shown^[1].

Not available

Confirm,

or

Available

select and confirm the option shown.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Requesting and activating a work time

You can request/activate work time to ensure you have enough time to wrap up the last call. Your phone is excluded from call distribution for a set period or until you log back on.



Open the Program/Service menu → page 39.

Destinations →

Confirm.

UCD →

Select and confirm the option shown.^[1]

Work on

Confirm,

or

Work off

select and confirm the option shown.

Turning the night service on and off for UCD

Open the Program/Service menu → page 39.

Destinations →

Confirm.

UCD →

Select and confirm the option shown^[1].

UCD night on

Confirm,

or

UCD night off

select and confirm the option shown.

Display the number of waiting calls

Open the Program/Service menu → page 39.

Destinations →

Confirm.

UCD →

Select and confirm the option shown^[1].

Calls in queue

Confirm.

[1] "Differing display view in a Octopus F900 environment" → page 177

Step by Step

Special functions in the LAN

If your telephone is operating in a IP-Netpackage environment, multiple Octopus F100/200/400/650 systems are interconnected via a LAN (Local Area Network, e. g. proprietary PC network). You are conducting a call via the LAN (PC network). In this instance, you must note certain particularities for some functions. These are described in this section.

Leaving hunt group/group call

Prerequisite: You are part of a hunt group/group call → page 135 in another Octopus F100/200/400/650.




Open the idle menu → page 27.

DISA intern

Select and confirm the option shown.




Enter the (DISA) station number of the other Octopus F100/200/400/650.



Confirm your entry.



Enter the (DISA) station number of your phone.



Confirm your entry.

Leave group

Confirm,

or

Join group

select and confirm the option shown.

You belong to multiple groups associated with another Octopus F100/200/400/650



Enter group number for "directed joining/leaving".

Step by Step

Setting up "follow me" call forwarding

You can activate/deactivate call forwarding IP-Netpackage for your phone from other phones in the → page 77 environment.



Open the idle menu → page 27.

DISA intern

Select and confirm the option shown.



(DISA) station number of your Octopus F100/200/400/650.



or



Confirm your entry.



Enter the (DISA) station number of your phone.



or



Confirm your entry.

Activating



Open the idle menu → page 27

Forwarding on

Select and confirm the option shown.

1=all calls

Confirm,

or

2=external calls only

select and confirm the option shown,

or

3=internal calls only

select and confirm the option shown.



Enter the destination phone number.

Save

Confirm.

Deactivating



Open the idle menu → page 27.

Forwarding off

Select and confirm the option shown.

Step by Step

Using night answer

If authorized (contact your service personnel), you can define telephones in other Octopus F100/200/400/650 communications platforms as the night answer → page 72.




Open the idle menu → page 27.

DISA intern

Select and confirm the option shown.




Enter the (DISA) station number of the Octopus F100/200/400/650 where the night answer phone is connected.



Confirm your entry.



Enter the (DISA) station number of the phone you are using to activate/deactivate night answer.



Confirm your entry.

Activating



Open the idle menu → page 27.

Night answer on

Select and confirm the option shown.



Enter the destination number (= temporary night answer service).

Save

Select and confirm the option shown.

Deactivating



Open the idle menu → page 27.

Night answer off

Select and confirm the option shown.

Step by Step

Ringling group

You can have calls for your telephone signaled audibly at external telephones or at telephones in other Octopus F100/200/400/650 communications platforms → page 135.

Saving, displaying, and deleting telephones for the ringing group



Open the Program/Service menu → page 39.

Destinations →

Confirm.

Ringling group on

Select and confirm the option shown.

Add to ringing group

Confirm,

or

Add another station

select and confirm the option shown,

or

Display/remove

select and confirm, then follow the operating instructions.



Enter the station number.

Entry complete

Confirm.

Save

Confirm.

Exit

Select and confirm the option shown.

Removing all telephones in a call ringing group



Open the idle menu → page 27.

Ringling group off

Select and confirm the option shown.

Step by Step

Controlling relays (only for Octopus F100/200/400/650)

If this feature is configured (contact your service personnel), you can also control relays → page 124 in other Octopus F100/200/400/650 communications platforms.




Open the idle menu → page 27.

DISA intern

Select and confirm the option shown.




Enter the (DISA) station number of the Octopus F100/200/400/650, where you wish to control the relay.



Confirm your entry.



Enter the (DISA) station number of the phone you wish to use to control the relay.



Confirm your entry.

Control Relay On

Confirm,

or

Control Relay Off

select and confirm the option shown.



Enter the relay.

Step by Step

Opening a door

If configured (contact your service personnel), you can also activate the door opener → page 53 in other Octopus F100/200/400/650 communications platforms.




Open the idle menu → page 27.

DISA intern

Select and confirm the option shown.




Enter the (DISA) station number of the Octopus F100/200/400/650, where you wish to control the relay.



Confirm your entry.



Enter the (DISA) station number of the phone you wish to use to control the relay.



Confirm your entry.

Open door

Select and confirm the option shown.



Dial the entrance telephone number.

Step by Step

Individual phone configuration

Adjusting display settings

Adjusting the display to a comfortable reading angle

You can swivel the display unit. Adjust the display unit so that you can clearly read the screen.

Screensaver

Activate a screensaver for the telephone idle state.

Activating the screensaver

Prerequisite: Your service personnel have loaded pictures to the Octophon F660/680.



Press the key shown until the "Settings" tab is active.

User

Confirm the option shown.



Enter and confirm the user password.

Phone

Select and confirm the option shown.

Screensaver

Select and confirm the option shown.

No →

Select the "Enabled" entry.

The phone displays the current setting.
Confirm the option shown.

Yes

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm the option shown.

Step by Step

Automatic screensaver activation

Set how long Octophon F660/680 should be idle before the screen-saver automatically activates.



Press the key shown until the "Settings" tab is active.

User

Confirm the option shown.

if nec.



Enter and confirm the user password.

Phone

Select and confirm the option shown.

Screensaver

Select and confirm the option shown.

Inactivity delay (mins)

Select

30

Confirm^[1].

or

20

Select and confirm the value you want in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm the option shown.

[1] The phone displays the current setting.

Step by Step

Screensaver fade-in time

Set the speed at which the screensaver images change here (5 - 60 seconds).



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.

Enter and confirm the user password.

Phone

Select and confirm the option shown.

Screensaver

Select and confirm the option shown.

Select the "Transition delay (secs)" entry.

10 →

The phone displays the current setting.
Confirm.

15

Select and confirm the value you want in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

Step by Step

Color scheme

Select your preferred appearance for the menu display here.



For sample display themes, see → page 24.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec. 

Enter and confirm the user password.

Phone

Select and confirm the option shown.

Display

Select and confirm the option shown.

Select the "Set skin" entry.

Crystal sea →

The phone displays the current setting.
Confirm.

Warm grey

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

Step by Step

Lamp brightness for TouchSlider

Adjust the brightness of the TouchSlider → page 17 by choosing one of the six settings available.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.

Enter and confirm the user password.

Phone

Select and confirm the option shown.

Display

Select and confirm the option shown.

Select the "Slider brightness" entry.

Confirm.



Setting contrast.



Confirm.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm the option shown.

Step by Step

Set the sensitivity of the TouchGuide



Press the key shown until the "Settings" tab is active.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Phone

Select and confirm the option shown.

TouchGuide

Select and confirm the option shown.

Touchguide setting

Select the option shown.



Confirm the option shown.



By sliding

or



by pressing you can choose one of four levels for the sensitivity.



Confirm the option shown.

Save & exit

Select and confirm the option shown.

Step by Step

Contrast for the key module for Octophon F660/680

If you have connected an key module for Octophon F660/680, you can adjust the key label contrast to suit your ambient lighting.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.

Enter and confirm the user password.

Phone

Select and confirm the option shown.

Display

Select and confirm the option shown.

Select the "Sidecar contrast" entry.

Confirm.



Setting contrast.



Confirm.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save


Confirm.

Step by Step

Adjusting audio settings

Optimize the audio settings on your Octophon F660/680 for your environment and according to your personal requirements.

Volumes

 Use the TouchSlider to adjust the current volume settings
→ page 17.

You can preset different volumes for the following microphones and signals in eight levels:

- Loudspeaker
- Ringer
- Handset
- Headset
- Handsfree
- Rollover
- Warning tone



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec. 

Enter and confirm the user password.

Audio

Select and confirm the option shown.

Volumes

Select and confirm the option shown.

Select the entry you want (e.g. "Ringer").

Confirm.



Set volume.



While setting the volume, you will hear corresponding audio feedback.



Confirm.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

Step by Step

Room character

Configuring the appropriate acoustic settings for your environment:

- Normal
- Echoing
- Muffled



Press the key shown until the "Settings" tab is active.

User

Confirm.



Enter and confirm the user password.

Audio

Select and confirm the option shown.

Settings

Select and confirm the option shown.

Normal →

Select the "Room character" entry.

The phone displays the current setting.
Confirm.

Echoing

Select and confirm the required setting (e.g. "Echoing").



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Confirm the option shown.

Step by Step

Setting headset port use

Here you set whether you are using a wired or cordless DECT headset.



Press the key shown until the "Settings" tab is active.

User

Confirm the option shown.

if nec.

Enter and confirm the user password.

Audio

Select and confirm the option shown.

Settings

Select and confirm the option shown.

Headset port

Select

Wired headset

From the following setting^[1] select and confirm the option shown in the context menu.

- Wired headset
- Wireless headset
- Conference phone



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm the option shown.

[1] The phone displays the current setting.

Step by Step

Ringtone

Select your preferred ringtone from the available audio files. To upload your own files in ".mp3" or ".wav" format, please contact your service personnel.



Press the key shown until the "Settings" tab is active.

User

Confirm the option shown.



Enter and confirm the user password.

Audio

Select and confirm the option shown.

Settings

Select and confirm the option shown.

Select the "Ringer file" entry.

xxx.mp3 →

The phone displays the current setting.
Confirm the option shown.

xxx.mp3

Select and confirm the required file in the context menu. You will immediately hear the associated ringer melody. Confirm the selected ringtone file.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm the option shown.

Activating/deactivating the ringer

You can see whether the function is activated or deactivated from the corresponding icon in the status bar on the display → page 24.



Hold down the key shown.

Adjusting the volume during a call

You are conducting a call.



Set the volume using the TouchSlider → page 17.

Step by Step

En-bloc dialing

If "en-bloc dialing" is activated, you can delete characters with the return key and re-enter them when entering a number. The connection is only set up when you have confirmed "Dial".



Press the key shown until the "Settings" tab is active.

User

Confirm the option shown.

if nec. 

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Outgoing calls

Select and confirm the option shown.

Deactivated →

Select the "en-bloc dialing" entry.

The current setting is shown on the display.

Activated →

Select and confirm the option shown in the context menu.

Save & exit

Select and confirm the option shown.

or 

Press the key shown.

Save

Confirm the option shown.

Language for system functions



Open the Program/Service menu → page 39.

More features →

Select and confirm the option shown.

Select language

Confirm.

Spanish

Select the language you wish to use (such as "Spanish") and press the "OK" dialog key to confirm.

Step by Step

Configuring Bluetooth



Bluetooth is only available on Octophon F660/680 TDM when the function is activated by your service personnel.

You can use the following description to prepare your Octophon F660/680 TDM for Bluetooth connection with another Bluetooth device.

For a brief explanation of function and key terms, see → page 168.

For sample applications, see → page 169.

Bluetooth settings



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Bluetooth

Select and confirm the option shown.

Configuration

Select and confirm the option shown.

The "Bluetooth settings" page opens.

Activating/deactivating Bluetooth

Prerequisite: The "Bluetooth settings" page opens → page 158.

Select the "Active" entry.

No →

The phone displays the current setting.
Confirm.

Yes

Confirm the option shown in the context menu.

Step by Step

No →

Yes

OpenStage (08:0...

if nec. ↩



No →

No

Prompt

Automatic

Discoverability

Set whether your Octophon F660/680 should be discoverable for other Bluetooth devices.

For more information, see → page 168.

Prerequisite: The "Bluetooth settings" page opens → page 158.

Select the "Discoverable" entry.

The phone displays the current setting.
Confirm.

Confirm the option shown in the context menu.

Bluetooth name

Here you can determine which name your Octophon F660/680 TDM should use to register at other Bluetooth devices.



By factory default, the Bluetooth name is: OpenStage [MAC address of your telephone].

Prerequisite: The "Bluetooth settings" page opens → page 158.

Select the "Phone name" entry.
The phone displays the current setting.
Confirm.

Delete preconfigured setting.

Specify and confirm the required name.

Linking

Select how the linking should be implemented here.
For more information, see → page 168.

Prerequisite: The "Bluetooth settings" page opens → page 158.

Select the "Pairing mode" entry.
The phone displays the current setting.
Confirm.
Select and confirm the option shown in the context menu

or

Select and confirm the option shown,

or

select and confirm the option shown.

Step by Step

if nec. ↩



Save & exit

or



Save

 XYZ →

Connect

or

Disconnect

PIN

The PIN contains at least four alphanumeric characters.

Prerequisite: The "Bluetooth settings" page opens → page 158.

Select the "Pairing password" entry.

The phone displays the current setting.
Confirm.

Delete current entry.

Enter and confirm the PIN.

Select the "Options" entry.

Select and confirm the option shown.

Press the key shown.

Confirm.

Connecting/disconnecting a Bluetooth device

Prerequisite: The linking manager list contains entries → page 161.

Select and confirm the required device.

Select and confirm the option shown in the context menu,

select and confirm the option shown.

Step by Step

Managing Bluetooth devices

Linking manager list

Once you have scanned the area for Bluetooth-enabled devices, you can link your Octophon F660/680 TDM to another device → page 168. Once linked, these devices are added to the list.

Black list

Once you have scanned the area for Bluetooth-enabled devices, you can add Bluetooth-enabled devices that you do not wish to connect to your Octophon F660/680 to this list.

You cannot establish connections via Bluetooth with devices in this list, until they have been deleted from the list.

Create list/scan area



Press the key shown until the "Settings" tab is active.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Bluetooth

Select and confirm the option shown.

Paired devices

Select and confirm the option shown.

or

Blacklist

Select and confirm the option shown.

Options →

Confirm.

Add device

Select and confirm the option shown in the context menu.

The search starts automatically.

You receive a list of all Bluetooth devices in the area.



XYZ →

Select and confirm the required device.

Step by Step



Only for the linking manager list

Enter and confirm the agreed PIN → page 160.

If the linking request is confirmed on the corresponding Bluetooth device and the password entered, the link is performed and the device is permanently entered in the list.

Open the list

Prerequisite: The linking manager list or the black list contains entries → page 161.



Press the key shown until the "Settings" tab is active.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Bluetooth

Select and confirm the option shown.

Paired devices

Select and confirm the option shown.

or

Blacklist

Select and confirm the option shown.

Delete all entries from the list.

Options →

Confirm.

Delete all

Select and confirm the option shown in the context menu.

Delete

Confirm.



Step by Step

Change an entry name

A Bluetooth device is entered in the list with the name set in the device. This is often the device type. You can change this name.

Open the required list → page 162.

Select and confirm the required device.



Select and confirm the option shown in the context menu.

if nec. ↶

Delete preconfigured setting.





Enter and confirm the new name.


Deleting a specific entry from a list

Open the required list → page 162.

Select and confirm the required device.



Select and confirm the option shown in the context menu



Confirm.

Step by Step

Context menu

Here you can define whether context menus → page 29 should close automatically, and define the display duration.

Closing automatically



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec. 

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Context menu

Select and confirm the option shown.

No →

Select the "Auto hide allowed" entry.

The phone displays the current setting.

Confirm.

Yes

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

Step by Step

Setting the automatic display duration

Here you can define how long context menus should remain open.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Context menu

Select and confirm the option shown.

Select the "Auto hide time" entry.

10 →

The phone displays the current setting.
Confirm.

20

Select and confirm the value you want in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm the option shown.

Step by Step

Resetting user data

The following user-specific settings changed via the phone menu or the Web interface can be reset to factory settings.

- Display settings
- Screensaver



Personal images for the screensaver are deleted and default images are restored (administration e.g. using the OpenStage Manager).

- Audio settings
 - Volumes
 - Settings



Personal ringtone files are deleted and default ringtone files are restored (administration e.g. using the OpenStage Manager).

- Configuration
 - Context menu
- Bluetooth
 - Configuration and lists

Attention: All listed data are reset without a warning tone. If necessary back up your data on a USB memory stick ().



Press the key shown until the "Settings" tab is active.

User

Confirm the option shown.



Enter and confirm the user password.

Reset

Select and confirm the option shown.

All data

Select and confirm the option shown in the context menu. The user data listed above is reset to factory settings.

Step by Step

Phone test

To check the functionality of your phone, you can open the device test. One after another the LEDs of the function keys, the display and the ringtone are tested.

Prerequisite: The phone is in idle mode → page 27.



Open the Program/Service menu → page 39.

Phone test

Select and confirm the option shown.

Step by Step

Bluetooth

Bluetooth is an open standard for high-performance technology and allows wireless communication between PCs, PDAs, mobile telephones, etc.

In contrast to infrared connections, Bluetooth does not require a visual contact for communication purposes and can be used over distances of up to 10 meters.

To exchange data between Bluetooth-enabled devices, the devices need to undergo a once-off discovery procedure.



For information on how to configure Octophon F660/680 TDM for connection to a Bluetooth device → page 158.

Discoverability

When first enabling a connection to a Bluetooth device, this function must be switched on → page 159.

The Octophon F660/680 TDM is discoverable for other Bluetooth devices by default.

To prevent unauthorized access, we recommend deactivating discoverability once you have enabled the connection to a new Bluetooth device.



A connection is established for devices that are already connected even if the "Discoverable" function is deactivated.

Linking

Linking is the process used by two Bluetooth-enabled devices to "see" one another and to "recognize" that they can exchange data. It is therefore used for checking the access authorization of a Bluetooth device in a Bluetooth network. To do this, a 128 Bit linking key is created for subsequent identification.



Linking is only performed the first time contact is established between a Bluetooth device and your Octophon F660/680 TDM. If the Bluetooth device is successfully linked, no further access authorization checks are necessary. Instead, each subsequent check uses the previously created connection key.

Step by Step

Transferring contacts

The Bluetooth function on your Octophon F660/680 TDM allows you to transfer contacts in **vCard format** (file extension: .vcf) from other Bluetooth devices to your Octophon F660/680 TDM and save them in the phonebook. You can also send phonebook entries as vCards to other Bluetooth-enabled devices.



Due to the diverse range of PCs, mobile telephones and PDA devices currently available, we are unable to provide universal instructions on how to transfer vCard files in this manual.

The instructions for data transfer via Bluetooth provided in the relevant manufacturer documentation should be observed.

Receiving a vCard

Prerequisite: The Bluetooth connection is configured between your Octophon F660/680 TDM and one other device → page 158. A vCard file is saved on the other device.

Launch the data transfer wizard for Bluetooth and follow the instructions.

Once the vCARD is transferred, a message confirming the successful transfer is displayed on your Octophon F660/680 TDM.

Accept

Confirm.

OK

Confirm.

The data is added automatically to the phonebook → page 89.

Step by Step

Sending a vCard

Prerequisite: The Bluetooth connection is configured between your Octophon F660/680 TDM and one other device → page 158. A vCard file is saved on the Octophon F660/680 TDM.

In the phonebook (→ page 89), select the entry you wish to send.




Press the key until the "Personal" tab is active.



Select a phonebook entry.



Open the context menu.




Select and confirm the option shown.

The "Send vCard via Bluetooth" page is displayed.

Sending to a linked device




Select and confirm the option shown.




Select and confirm the option shown in the context menu for device.

or

Sending to an unconnected device




Select and confirm the option shown.



Select and confirm the option shown in the context menu.

A search is started and detected devices listed.



Select and confirm the relevant device in the list.

The vCard is sent.

Perform the necessary steps on the destination device to save the vCard data.

Detected devices are then deleted from the list.

Step by Step

Using a Bluetooth headset

You can connect an approved Bluetooth headset to your Octophon F660/680 TDM. Ask your service personnel about approved headset types.



You are recommended not to activate the speakerphone feature when using a Bluetooth headset → page 44 because depending on headset and environment, this can lead to reduced speech quality.

Prepare your Bluetooth headset for connection with your Octophon F660/680 TDM by following the instructions in the relevant user manual.

Proceed as following to prepare your Octophon F660/680 TDM:

- Activate the Bluetooth function → page 158.
- Enter the headset in the linking list^[1] → page 161.
- Establish the Bluetooth connection → page 160.

Testing a Bluetooth headset

Prerequisite: Octophon F660/680 TDM and the Bluetooth headset are connected (see procedure above).



Press the key shown.



You hear the on-hook signal.



Enter the station number.

The connection is established as soon as your input is complete.

if nec.

Set the call volume.



Make sure your headset port is set up properly → Seite 155.

[1] only necessary the first time

Step by Step

Data backup to USB memory stick

You can save your Octophon F660/680 TDM user settings and personal phonebook entries as files on a USB memory stick and download (restore) all or, where applicable, selected data to your or another Octophon F660/680 TDM.

Every backup is given a separate name and is password-protected. The content of the backup is encrypted by entering the password. The data can be restored again only by entering the password entered previously.

Backup scope

- Entries and referenced data (e.g. image) from the personal phonebook → page 34
- Call list entries → page 36
- User menu settings → page 39
- Screensaver → page 146
- Photos
- Ring tones
- Call forwarding instructions with default destinations → page 73



The settings must be enabled for your phone.

Connecting a USB memory stick

Use a USB extension cable to connect the USB memory stick to the USB master port on the underside of the phone → page 14. The following message appears briefly.



New USB detected

The phone returns to idle mode after a few seconds and you can start to back up/restore your data → page 173, → page 174.

The following steps are only necessary if you respond to the pop-up menu before the automatic timeout.

Confirm the option shown.

Enter and confirm the user password.

You can remove the USB memory stick by simply pulling it out.

Backup/Restore

if nec. 

Step by Step

Backing up user data

Prerequisite: The USB memory stick is correctly plugged in → page 172.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.



Enter and confirm the user password.

Phone

Select and confirm the option shown.

Backup/Restore

Select and confirm the option shown.

Options →

Confirm.

New

Select and confirm the option shown in the context menu.



Select and confirm the entry "Backup name".



Enter and confirm a name for the backup.

or

Replacing an existing backup

17.08.07

14:42

3770 →

Select and confirm the required phone number.

Replace

Select and confirm the option shown in the context menu.



Select and confirm the entry "Backup password".



Enter a password.



Select and confirm the entry "Confirm password".



Re-enter the password.

Start backup →

Select and confirm the option shown.

You can follow the transfer status on the display. A confirmation message appears in a pop-up window when the transfer operation is complete.

Step by Step

Restoring user data

Selecting a backup

Prerequisite: The USB memory stick is correctly plugged in → page 172 and you have created at least one data backup → page 173.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.

Enter and confirm the user password.

Phone

Select and confirm the option shown.

Backup/Restore

Select and confirm the option shown.

17.08.07

14:42

3770 →

Select and confirm the backup you want.

Restoring all user data

This operation overwrites all current user settings → page 172 - irrespective of the status set → page 175 - with the selected backup.



This can result in the loss of settings made since the last backup.

Restore

Confirm the option shown in the context menu.

The "Restore {1}:" page is displayed.



Select and confirm the entry "Backup password".



Enter the password set during the backup.

Restore all →

Select and confirm the option shown to start the data transfer.

Step by Step

Restoring selected user data

This operation only overwrites data in "Restore" status with the selected backup.

Prerequisite: You have selected a backup and opened the context menu → page 174.



Confirm the option shown in the context menu.



The "Restore {1}:" page is displayed.

Select an entry, such as "Phone book":



The phone displays the current setting.
Confirm.

Select and confirm the option shown in the context menu to replace the phonebook data with the data backup.

Set or check the status for all other options:

- "Call logs" (for call lists)
- "Menu data" (for the user menu, incl. call forwarding)
- "Screensaver images"
- "All clip images"
- "All ringer tones"
- "All midlet data"^[1]



Select and confirm the entry "Backup password".



Enter the password set during the backup.



Select and confirm the option shown to start the data transfer.

You can follow the transfer status on the display. A confirmation message appears in a pop-up window when the transfer operation is complete.

[1] No midlets available yet.

Step by Step

Full ID

Delete

Delete

Checking backups

Check which backups are stored on the USB memory stick.

Prerequisite: You have selected a backup and opened the context menu → page 174.

Select and confirm the option shown in the context menu.

The available information is indicated in a pop-up message.

Deleting backups

You can delete invalid or old backups on your USB memory stick.

Prerequisite: You have selected a backup and opened the context menu → page 174.

Select and confirm the option shown in the context menu.

A security prompt is displayed:

Confirm.

Differing display view in a Octopus F900 environment

Depending on the system configuration, some functions may not always be offered in the display as described in this document.

In addition, display texts may differ from those described in this document according to the system configuration.

The following table provides an overview:

Octopus F100/200/400/650 display	Octopus F900 display	Description
In/Out of hunt group	In/Out of each hunt group	→ page 135
Call waiting term.	Second call release?	→ page 63
Call wait.term. on/off	Second call on/off?	→ page 63
Group call on/off	Hunt group on/off?	→ page 135
Use speed dialing	Use speed dialing?	→ page 57
Change speed dial	Speed dial?	→ page 58
Transfer trunk	Transfer trunk?	
View callbacks	Show callback destinations?	→ page 50
Silent on/off	Ringer cutoff on/off?	→ page 103
Transfer	Transfer?	→ page 48 → page 69

Step by Step

Invalid entry

Fixing problems

Responding to error messages on the screen

Possible causes:

Station number is incorrect.

Possible reactions:

Enter correct station number.

Not authorized

Possible causes:

Locked function selected.

Possible reactions:

Apply to service personnel for authorization for relevant function.

Currently not possible

Possible causes:

Dialed a non-existent station number. Called phone is unplugged.

Possible reactions:

Enter correct station number. Call this station again later.

Invalid station number

Possible causes:

Dialed your own station number.

Possible reactions:

Enter correct station number.

Key memory is full

Possible causes:

The system currently has no free space for external station numbers.

Possible reactions:

Try again later.

Step by Step

Key affects other layer

Possible cause 1:

If "Clear other layer" appears on the menu: you tried to program a function or internal station number with LED on a key that is already programmed on the second layer (for example, external station number).

Possible reactions:

Confirm "Clear other layer" to save the station number/function.

Possible cause 2:

If "Clear LED support" appears on the menu: you tried to program a station number without LED display or an external station number on a key that already is already programmed with an internal phone number with LED display.

Possible reactions:

Confirm "Clear LED support" to save the station number. The existing internal station number remains on the other layer without LED display.

Contact partner in the case of problems

Contact your service personnel if a fault persists for more than five minutes, for example.

Step by Step

Troubleshooting

Pressed key does not respond:

Check if the key is stuck.

Telephone does not ring:

Check whether the "Do not disturb" function is activated on your telephone ("Do not disturb" appears on the screen → page 24). If so, deactivate it.

You cannot dial an external number:

Check whether your telephone is locked ("Not authorized" appears on the screen). If the phone is locked, enter your PIN to unlock it → page 107.

To correct any other problems:

First contact the relevant service personnel. If the service personnel are unable to correct the problem, they must contact Customer Service.

Caring for your telephone

- Never allow the telephone to come into contact with coloring, oily or aggressive agents.
- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use aggressive or alcohol-based cleansers on plastic parts. The use of scouring agents is also forbidden.

Index

A

Agents	138
Answering machine	117
Application tab	24
Applications	31
activating an application	31
opening the context menu	31
selecting an application tab	31
selecting an entry	31
Audio controls	17
Automatic camp-on	
preventing and allowing	63
Automatic line seizure	46

B

Bluetooth	158, 168
Browsing in tabs	20
Busy	
forwarding calls	74
Busy override	105

C

Call	
accepting	42
accepting, group	137
distributing	138
ending	47
forwarding	77
forwarding in a team	132
holding	65
in a team with trunk keys	128
incoming	42
parking	64
pickup, directed	51
retrieving from park	64, 65
transferring	48, 131
Call charges	
for another telephone	99
for your telephone	99

Call duration	99
Call forwarding	
express activation	77
MSN in CO	80
Call forwarding key	74
Call forwarding type	74
Call forwarding, activating	
call forwarding key	77
Program/Service menu	77
Call forwarding, deactivating	
call forwarding key	78
Call lists	36, 95
Call logs	
copying into phonebook	98
Call volume	156
Call waiting	
accepting	62
allowing	63
preventing	63
Call waiting (camp-on)	
tone off	63
Call waiting on/off	63
Call waiting tone on/off	63
Callback	49
Calling a second party	48
Calls in queue	115, 138
CE marking	2
Change number	116
Changed phone	116
Charges	
for another telephone	99
for your telephone	99
Code dialing in ISDN	121
Conference	48
Connection options	14
Consultation	48
Contact	
display format	92
Context menus	27
Control relays	124

D

Details, fax 117

Dial keypad 13

Dialing

- internal/external calls 45
- on-hook dialing 46
- with DDS keys 46
- with speed dialing 57

Dialing aid

- S0 bus 61

Direct inward system access (DISA) 119

Direct station select 82

DISA 119

Display angle 146

Display design 149

Display icons 190

- application tab 30
- connection status 32
- message icons 28
- phonebook entries 33
- status bar 24

Display settings

- idle mode for display 147

Display view for

- Octopus F900 environment 177

Distributing calls 138

Do not disturb 104

F

Favorite for call forwarding, setting 76

Fax details 117

Fixed call forwarding 74

Forwarding

- MSN in CO 80
- multiple subscriber number (MSN) 80

Forwarding all calls 74

Forwarding destination 75

Forwarding external calls 74

Forwarding internal calls 74

Forwarding MSN in CO 80

Forwarding type 74

Free keys

- programming 81

Function keys 13, 17

Functions

- using from the outside 119

G

General information 11

Graphic display 24

- call lists 36, 37
- icons for connection status 32
- messages 38
- phonebook icons 33

Graphic display settings

- idle mode for graphic display 147

Group call 135

H

Handsfree answerback 52

Headset 46, 51

Help function 41

Hold 65

Hotline delayed 59

Hunt group 135

I

Icons 190

- application tab 30
- connection status 32
- message icons 28
- phonebook entries 33
- status bar 24

Important information 3

Indication

- active call forwarding 73

IP telephony 140

IP-Netpackage

- opening a door 145
- relays 144

K

key module for Octophon 660/680 16

Key modules 16

Keypad 23

Keypad dialing 121

Keys

- programming 81
- saving incomplete 81

L

LAN telephony	140
LDAP	95
LED	
trunk keys	127
LED display	
direct station selection keys	21
function keys	21
LED displays, understanding	82
DSS keys	130
forward line	133
Line seizure, automatic	46
Line utilization	126
Lists (for phone numbers and contacts)	89
Location of the telephone	3
Locking/unlocking	107

M

Menu "User"	39
Mode keys	13, 18
Move function	116
Move with phone	116
MULAP keys, trunk keys	126
Multi-line telephone	12
Multiple subscriber number (MSN)	
forwarding	80

N

No reply	
forwarding calls	74
Number	
saving	86

O

Open listening	44
Operating instructions	2
Overload	115

P

Parking a call	64
Personal identification number	109
Phone number directories	89
Phone settings	146
Phonebook	33
LDAP	35, 95
local phonebook	34
changing contact data	91
group administration	93
new contact	89
saving a picture	90
voice recognition	94
system phonebook	35
Pickup (call)	51, 137
PIN	109
for a telephone	107
PIN, saving	109
Placing a call on hold	
in the team	128
Pop-up menu	28, 32
Pop-up window	29
Primary line	126
Privacy	102
Private line	126
Programmable sensor keys	21
Programming a sensor key	
with a function	81
Programming free keys	81

R

Recall	69
Receiving volume	156
Relays	124
Relocate	116
Ring transfer	
in an executive/secretary team	134
Ringer cutoff	103
Ringer off	103
Ringling group	137

S

Safety precautions 2

Screensaver 146

Search contacts 33

Second call
 accepting 62

Secondary line 126

Secret busy override 105

Security 102

Sensors 124

Set headset port 155

Settings 146

Shared line 126

Silent monitor
 no tone 105

Single-line telephone 12

Speakerphone distance 3

Speakerphone mode 43, 44

Special dial tone 104

Speed-dialing
 dialing 57
 suffix-dialing 57
 system 57

Station number for call forwarding 75

Status icons 24

Suffix-dialing
 automatic 57

System speed-dialing 57

T

Tel. data service 122

Telephone
 locking 107
 locking/unlocking 107

Telephone maintenance 180

Text input (via the display keyboard) 25

Theme 149

Three-party conference 48

Timed reminder 110

Timed reminder, answering 111

Toggle/Connect 48

TouchGuide 13, 19

TouchSlider 17

Trace call 106

Transfer (call) 48, 131

Troubleshooting 180

Trunk keys 127

U

UCD 138

USB memory stick
 backup scope 172
 checking backups 176
 connecting 172
 deleting backups 176
 removing 172

User data
 restoring 174
 restoring all data 174
 restoring selected data 175
 saving 172, 173

User interface
 Octophon F660/680 TDM 13

User menu 39

User password 102

User support 11

V



Variable call forwarding 74

W

Waiting calls 115



Overview of functions and codes

The following table lists all available functions, as shown on the display. If configured (contact your service personnel), functions can be activated interactively (select + confirm), via the Program/Service menu (select + confirm or enter a code) or with function keys.



Functions (=display)	... Interactively	... Via the Program/Service menu → page 39 		... With a key
			Code	
Account code		✓	*60	X
Advisory msg. on	✓	✓	*69	X
Advisory msg. off	✓	✓	#69	X
Associated dial		✓	*67	X
Associated serv.		✓	*83	X
Call waiting	✓	✓	*55	X
Waiting tone off	✓	✓	*87	X
Waiting tone on	✓	✓	#87	X
Call wait.term.on		✓	*490	X
Call wait.trm.off		✓	#490	X
Callback	✓	✓	*58	X
View callbacks/Delete	✓	✓	#58	
Conference	✓	✓	*3	X
Start conference	✓			
Add party	✓			
End conference	✓	✓	#3	
Remove party	✓	✓		
Drop last conf. party			*491	
Consultation	✓			X
Return to held call	✓	✓	*0	
Quit and return	✓	✓	*0	
Transfer/Accept call	✓			
Control Relay On (only for Octopus F100/200/400/650)		✓	*90	X
Control Relay Off (only for Octopus F100/200/400/650)		✓	#90	X
Data I/O Service			*494	X



Overview of functions and codes

Functions (=display)	... Interactively	... Via the Program/Service menu → page 39 (☰)		... With a key
			Code	
Directory				
1=internal	✓		*54	X
2=LDAP	✓		*54	X
DISA				
DISA intern	✓	✓	*47	X
Discreet Call			*945	
DND on	✓	✓	*97	X
DND off	✓	✓	#97	X
Door opener on		✓	*89	X
Door opener off		✓	#89	X
DTMF dialing		✓	*53	X
Forwarding on	✓	✓	*1	X
1=all calls	✓	✓	*11	X
2=external calls only	✓	✓	*12	X
3=internal calls only	✓	✓	*13	X
Forwarding off	✓	✓	#1	X
CFNR on		✓	*495	X
CFNR off		✓	#495	X
Trunk FWD on	✓	✓	*64	X
Trunk FWD off	✓	✓	#64	X
Forward Line: On		✓	*501	X
Forward Line: Off		✓	#501	X
Headset				X
Answer (a call)	✓			
HF answerback on	✓	✓	*96	X
HF answerback off	✓	✓	#96	X
Hotline				
Join group	✓	✓	*85	X
Leave group	✓	✓	#85	X
In hunt group	✓	✓	*85*	X
Out of hunt group	✓	✓	#85#	X























Functions (=display)	... Interactively	... Via the Program/Service menu → page 39 (☰)		... With a key
			Code	
Keypad dialing		✓	*503	
Lock all phones		✓	*943	X
Lock phone	✓	✓	*66	X
Unlock phone	✓	✓	#66	X
Change PIN		✓	*93	
Mute on			*52	X
Mute off			#52	X
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	#44	X
Open door		✓	*61	X
Override	✓	✓	*62	X
Page				
Answer page		✓	*59	
Park a call		✓	*56	X
Retrieve call		✓	#56	
Phone test		✓	*940	
Pickup - directed		✓	*59	X
Pickup - group	✓	✓	*57	X
Accept call	✓			
Prog. feature key		✓	*91	X
Recording				X
Redial	✓			
Reject calls	✓			
Release				X
Relocate	✓	✓	*9419	
Complete relocate	✓	✓	#9419	
Reserve trunk	✓			X
Reset services		✓	#0	X
Retrieve line		✓	*63	X
Ring Transfer: On		✓	*502	X
Ring Transfer: Off		✓	#502	X

Overview of functions and codes

Functions (=display)	... Interactively	... Via the Program/Service menu → page 39 (☰)		... With a key
			Code	
Ringer cutoff on	✓	✓	*98	X
Ringer cutoff off	✓	✓	#98	X
Ringing group on		✓	*81	X
Ringing group off		✓	#81	X
Room monitor		✓	*88	X
Select language		✓	*48	
Send message	✓	✓	*68	X
View sent message	✓	✓	#68	X
View messages	✓	✓	#68	X
Mailbox				X
Shift Key				X
Show call charges (own telephone)		✓	*65	X
View call charges (other party's telephone)				X
Silent Monitor	✓	✓	*944	
Speaker call		✓	*80	X
Suppress call ID	✓	✓	*86	X
Restore caller ID	✓	✓	#86	X
Tel. data service		✓	*42	
Temporary MSN	✓	✓	*41	X
Temporary Phone		✓	*508	X
Timed reminder on		✓	*46	X
Timed reminder off		✓	#46	X
Toggle/Connect	✓	✓	*2	X
Trace call		✓	*84	X
Transfer	✓			
Trunk flash		✓	*51	X

Functions (=display)	... Interactively	... Via the Program/Service menu → page 39 (☰)		... With a key
			Code	
UCD				
Log on		✓	*401	X
Log off		✓	#401	X
Available		✓	*402	X
Not available		✓	#402	X
Work on		✓	*403	X
Work off		✓	#403	X
UCD night on		✓	*404	X
UCD night off		✓	#404	X
Calls in queue		✓	*405	X
Use speed dialing		✓	*7	X
Change Speed Dial (individual)		✓	*92	X

Display icons

Application tab	
	Telephony interface → page 32
	Phonebooks → page 33
	Call logs → page 36
	Messages → page 38
	Menu → page 39
	Help function → page 41
Status bar	
	The ring tone is deactivated → page 103
	The "Do not disturb" function is activated → page 104
	The phone lock is activated → page 107
	The Bluetooth function is activated → page 158
Messages	
	You have received one or more new messages
	One or more new entries have been added to the call lists
	Call forwarding is active
Connection status	
	The call is active
	The call has been disconnected
	You have placed the call on hold (e.g. consultation hold)
	Your call partner has placed the call on hold
Phonebook entries	
	Primary business number
	Secondary business number
	Mobile phone number
	Private phone number
	The phone number is not saved in the personal phonebook

Important telephone numbers

For problems:

For questions regarding sales:

Upon delivery of the equipment, please enter
telephone numbers!

Issued by:
Deutsche Telekom AG

Right of modification reserved.
Reference number: A31003-T9000-U110-3-7619
SW version: 7.0
Status: 12/2009

Printed on environmentally compatible
recycled paper.